


Digital Temperature Controller E5 C/E5 C-T

E5□C Series That Pursues Greater Visibility with Large White PV Display. Models with Push-In Plus Terminal Blocks That Reduce Wiring Work, DIN Track-mounting Models That Are Ideal for Connecting to PLCs, Plug-in Models That Are Convenient for Maintenance, and Programmable Models for a Wider Range of Application. A Wide Lineup of Models to Meet a Wide Range of User Needs.

Digital Temperature Controllers: E5□C Series

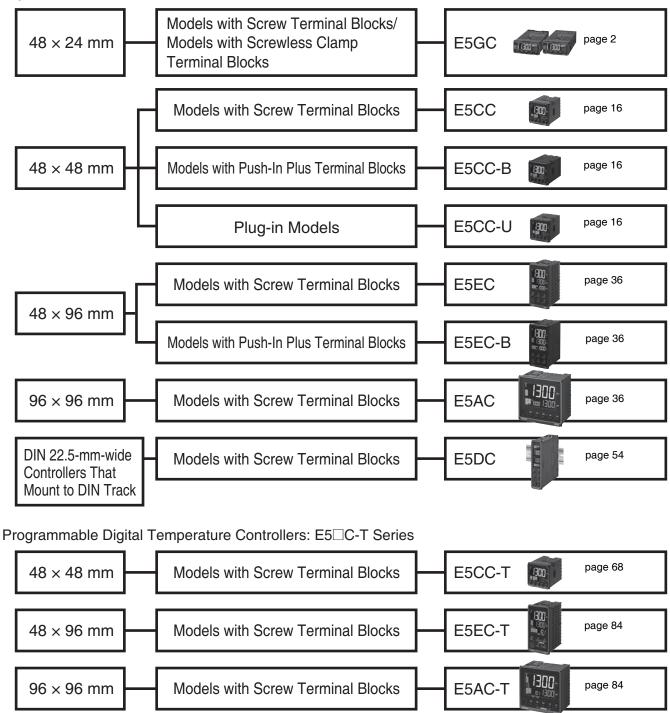

Digital Temperature Controller

E5GC (48 × 24 mm)

Easy Operation and High Performance of the E5 \square C Series in a Compact 48 \times 24-mm Body

- A compact body of 48 × 24 × 90 mm (W × H × D) that is ideal for small equipment, laboratory instruments, and others.
- White PV display with a height of 10.5 mm for high visibility even with the compact body.
- Removable terminal block to simplify maintenance. Select from screw terminal blocks or screwless clamp terminal blocks for the wiring method.
- High-speed sampling at 50 ms.
- Easy connections to a PLC with programless communications.
- Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).





48 × 24 mm Models with Screw Terminal Blocks E5GC-□6


48 × 24 mm Models with Screwless Clamp Terminal Blocks E5GC-□C

Refer to your OMRON website for the most recent information on applicable safety standards.



Refer to Safety Precautions on 108.

Main I/O Functions

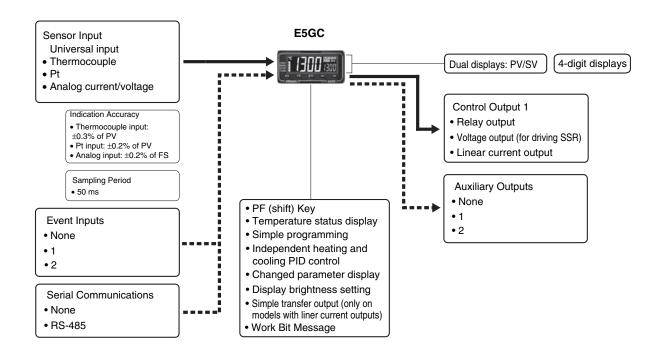

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting to use the product.

E5□C Digital Temperature Controllers User's Manual (Cat. No. H174)

E5 C Digital Temperature Controllers Communications Manual (Cat. No. H175)

Model Number Legend and Standard Models

Model Number Legend

E5GC- \square \square \square \square \square \square (Example: E5GC-RX1A6M-015)

(1) (2) (3) (4) (5) (6)

	1	2	3	4	5	6	Meaning				
Model	Control outputs 1 and 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options					
E5GC							48	× 24 mm			
							Control output 1	Control o	utput 2		
	RX						Relay output	Non	e		
	QX						Voltage output (for driving SSR)	Non	е		
* 1	СХ						Linear current output	Non	None		
	*2	0						None			
		1						1	_		
		2						2			
			Α				100 t	o 240 VAC			
			D				24	VAC/DC			
				6			Screw termina	I blocks (with cover)			
				С			II.	np terminal blocks 🗚	3		
					M		Univ	ersal input			
							HB alarm and HS alarm	Communications	Event inputs		
						000					
						015		RS-485			
					* 3	016			1		
					* 3, * 4	023	1				
					* 5	024			2		

- ***1.** The control output can be used as a simple transfer output.
- *2. Only option 000 can be selected if an auxiliary output is zero.
- *3. Option 016 and 023 can be selected only if two auxiliary outputs are selected.
- *4. Option with HB and HS alarms (023) cannot be selected if a linear current output is selected for the control output.
- ***5.** Option 024 can be selected only if one auxiliary output is selected.
- *6. The specifications are different for Temperature Controllers with Push-In Plus terminal blocks. Refer to Precautions when Wiring on page 114.

Heating and Cooling Control

Using Heating and Cooling Control

1 Control Output Assignment

An auxiliary output is used as the cooling control output.

② Control

If PID control is used, you can set PID control separately for heating and cooling.

Optional Products (Order Separately)

USB-Serial Conversion Cable

Model	
E58-CIFQ2	_

Communications Conversion Cable

Model	
E58-CIFQ2-E	

Note: Always use this product together with the E58-CIFQ2.

This Cable is used to connect to the bottom-panel Setup Tool

Current Transformers (CTs)

Hole diameter	Model				
5.8 mm	E54-CT1				
12.0 mm	E54-CT3				

Mounting Adapter

Model						
Y92F-53 (2pcs)						

Note: This Mounting Adapter is provided with the Digital Temperature Controller.

Waterproof Packing

Model	
Y92S-P12	

Note: This Waterproof Packing is provided with the Digital Temperature Controller.

Draw-out Jig

Model	
Y92F-55	

CX-Thermo Support Software

• • • • • • • • • • • • • • • • • • • •
Model
EST2-2C-MV4

Note: CX-Thermo version 4.62 or higher is required for the E5GC. For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

Specifications

Ratings

riating.	9							
Power sup	oply voltage	A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC						
Operating	voltage range	85 to 110% of rated supply voltage						
Power cor	nsumption	5.9 VA max. at 100 to 240 VAC, and 3.2 VA max. at 24 VAC or 1.8 W max. at 24 VDC						
Sensor in	put	Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V						
Input impe	edance	Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.)						
Control m	ethod	ON/OFF control or 2-PID control (with auto-tuning)						
Control	Relay output	SPST-NO, 250 VAC, 2 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)						
output	Voltage output (for driving SSR)	Output voltage 12 VDC ±20% (PNP), max. Load current: 21 mA, with short-circuit protection circuit						
	Linear current output	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: Approx. 10,000						
Auxiliary	Number of outputs	1 or 2 (depends on model)						
output	Output specifications	SPST-NO relay outputs, 250 VAC, 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)						
	Number of inputs	1 or 2 (depends on model)						
Event		Contact input ON: 1 kΩ max., OFF: 100 kΩ min.						
input	External contact input specifications	Non-contact input ON: Residual voltage 1.5 V max.; OFF: Leakage current 0.1 mA max.						
	Specifications	Current flow: approx. 7 mA per contact						
Setting me	ethod	Digital setting using front panel keys						
Indication	method	11-segment digital displays and individual indicators Character height: PV: 10.5 mm, SV: 5.0 mm						
Multi SP		Up to eight set points (SP0 to SP7) can be saved and selected using the event inputs, key operations, or serial communications. *						
Bank swit	ching	None						
Other functions		Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, self tuning, robust tuning, PV input shift, run/stop, protection functions, extraction of square root, MV change rate limit, logic operations, temperature status display, simple programming, moving average of input value, display brightness setting, simple transfer output, and work bit message						
Ambient o	perating temperature	-10 to 55° C (with no condensation or icing), For 3-year warranty: -10 to 50° C with standard mounting (with no condensation or icing)						
Ambient operating humidity		25 to 85%						
Storage to	emperature	−25 to 65°C (with no condensation or icing)						
Altitude		2,000 m max.						
Recomme	nded fuse	T2A, 250 VAC, time-lag, low-breaking capacity						
Installatio	n environment	Overvoltage category II, Pollution Degree 2 (EN/IEC/UL 61010-1)						
& Thoro oro	up to four event inputs							

^{*}There are up to four event inputs.

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

Sen: typ		Platinum resistance thermometer					Thermocouple												Infrared temperature sensor							
Sen: specifi			Pt100)	JPt	100	ı	K	,	J		Т	E	L		U	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C
	2300																				2300					
	1800																			1800						
	1700																	1700	1700							
	1600																									
	1500																									
	1400																									
æ	1300						1300										1300					1300				
Temperature range (°C)	1200						\sqcup																			
ge	1100						HI												-		-					
ä	1000	850					+		850					850			-	-	-	-						
9	900	650					H		650					650												
Ē	800						HIF												-							
īa	700						+		-				600													
鱼	600		500.0		500.0		H	500.0					000													
e.	500		000.0		300.0		H	300.0		400.0	400	400.0			400	400.0										
_	400	-					+			100.0	100	100.0			100	100.0										260
	300																							120	165	
	200			100.0		100.0																	90			
	100																			100						
				0.0		0.0												0	0		0	0	0	0	0	0
	-100							-20.0	-100	-20.0				-100												
	-200	-200	-199.9		-199.9		-200				-200	-199.9	-200		-200	-199.9	-200									
Set v	alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985 W: W5Re/W26Re, ASTM E988-1990 JPt100: JIS C 1604-1989, JIS C 1606-1989 Pt100: JIS C 1604-1997, IEC 60751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

Analog input

Input type	Cur	rent	Voltage						
Input specification	4 to 20 mA	0 to 20 mA	0 to 5 V	0 to 10 V					
Setting range	Usable in the following ranges by scaling: -1999 to 9999, -199.9 to 999.9, -19.99 to 99.99 or -1.999 to 9.999								
Set value	25	26	27	28	29				

Alarm Types


Each alarm can be independently set to one of the following 17 alarm types. The default is 2: Upper limit. (See note.)

Auxiliary outputs are allocated to alarms. ON delays and OFF delays (0 to 999 s) can also be specified.


Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.

Cost		Alarm outp	ut operation						
Set value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function					
0	Alarm function OFF	Outpu	t OFF	No alarm					
1	Upper- and lower-limit *1	ON SP PV	*2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.					
2 (default)	Upper-limit	ON OFF SP PV	ON X - PV	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.					
3	Lower-limit	ON X PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.					
4	Upper- and lower-limit range *1	ON → L H ← PV	*3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.					
5	Upper- and lower-limit with standby sequence *1	ON L H PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6					
6	Upper-limit with standby sequence	ON X PV	ON X ← PV	A standby sequence is added to the upper-limit alarm (2). *6					
7	Lower-limit with standby sequence	ON X PV	ON X PV	A standby sequence is added to the lower-limit alarm (3). *6					
8	Absolute-value upper- limit	ON OFF 0 PV	ON ←X→ PV	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.					
9	Absolute-value lower-limit	ON OFF 0 PV	ON OFF O PV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.					
10	Absolute-value upper- limit with standby sequence	ON ←X→ PV	ON ←X→ PV	A standby sequence is added to the absolute-value upper-limit alarm (8). * 6					
11	Absolute-value lower-limit with standby sequence	ON OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6					
12	LBA (alarm 1 type only)		-	*7					
13	PV change rate alarm		-	*8					
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON SP	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).					
15	SP absolute-value lower-limit alarm	ON ←X→ OFF 0 SP	ON OFF SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).					
16	MV absolute-value upper-limit alarm *9	Standard Control ON OFF OFF O MV Heating/Cooling	Standard Control ON OFF ON MV Heating/Cooling	This alarm type turns ON the alarm when the manipulated variable (MV) is higher than the alarm value (X).					
		Control (Heating MV) ON OFF	Control (Heating MV) Always ON	variable (NIV) is ingrici than the dialili value (A).					
		Standard Control	Standard Control						
	MV absolute value	ON OFF O MV	ON OFF OFF	This clarm type turns ON the clarm when the manifested					
17	MV absolute-value lower-limit alarm *9	Heating/Cooling Control (Cooling MV)	Heating/Cooling Control (Cooling MV)	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).					
		ON OFF 0	Always ON						

 - *1. With set values 1, 4, and 5, the upper- and lower-limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- *4. Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above at *2
 - In cases 1 and 2 above, the alarm is <u>always OFF</u> if the upperand lower-limit hysteresis overlaps.
 - In case 3, the alarm is always OFF.
- *5. Set value: 5, Upper- and lower-limit alarm with standby sequence The alarm is <u>always OFF</u> if upper- and lower-limit hysteresis overlaps.
- ***6.** Refer to the *E5*□*C Digital Temperature Controllers User's Manual* (Cat. No. H174) for information on the operation of the standby sequence.
- ***7.** Refer to the *E5□C Digital Temperature Controllers User's Manual* (Cat. No. H174) for information on the LBA.
- ***8.** Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the PV change rate alarm.
- *9. When heating/cooling control is performed, the MV absolutevalue upper-limit alarm functions only for the heating operation and the MV absolute-value lower-limit alarm functions only for the cooling operation.

Characteristics

Indication a (at the temp	ccuracy perature of 23°C)	Thermocouple: $(\pm 0.3\%$ of indication value or $\pm 1^{\circ}$ C, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2\%$ of indication value or $\pm 0.8^{\circ}$ C, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\%$ FS ± 1 digit max. $\pm 5\%$ FS ± 1 digit max.					
Simple tran	sfer output accuracy	±0.3% FS max.*2					
Influence of	temperature *3	Thermocouple input (R, S, B, W, PL II): (±1% of indication value or ±10°C, whichever is greater) ±1 digit max.					
	voltage *3	Other thermocouple input: $(\pm 1\%$ of indication value or $\pm 4^{\circ}$ C, whichever is greater) ± 1 digit max. *4 Platinum resistance thermometer: $(\pm 1\%$ of indication value or $\pm 2^{\circ}$ C, whichever is greater) ± 1 digit max.					
Influence of (at EN 6132		Analog input: ±1% FS ±1 digit max. CT input: ±5% FS ±1 digit max.					
Input samp	ing period	50 ms					
Hysteresis		Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)					
Proportiona	ıl band (P)	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)					
Integral time	e (I)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5					
Derivative t	ime (D)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5					
Proportiona	al band (P) for cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)					
Integral time	e (I) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5					
Derivative t	ime (D) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5					
Control per		0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)					
Manual rese	et value	0.0% to 100.0% (in units of 0.1%)					
Alarm settir	ng range	-1,999 to 9,999 (decimal point position depends on input type)					
Influence of resistance	signal source	Thermocouple: $0.1^{\circ}\text{C}/\Omega$ max. (100 Ω max.), Platinum resistance thermometer: $0.1^{\circ}\text{C}/\Omega$ max. (10 Ω max.)					
Insulation r	esistance	20 MΩ min. (at 500 VDC)					
Dielectric s	trength	100 to 240 VAC: 3,000 VAC, 50/60 Hz for 1 min between terminals of different charge 24 VAC/DC: 2,300 VAC, 50/60 Hz for 1 min between terminals of different charge					
Vibration	Malfunction	10 to 55 Hz, 20 m/s² for 10 min each in X, Y and Z directions					
Vibration	Resistance	10 to 55 Hz, 20 m/s² for 2 hr each in X, Y, and Z directions					
Shock	Malfunction	100 m/s², 3 times each in X, Y, and Z directions					
CHOCK	Resistance	300 m/s², 3 times each in X, Y, and Z directions					
Weight		Controller: Approx. 80 g, Adapter: Approx. 4 g × 2					
Degree of p		Front panel: IP66, Rear case: IP20, Terminals: IP00					
Memory pro	otection	Non-volatile memory (number of writes: 1,000,000 times)					
Setup Tool		CX-Thermo version 4.62 or higher					
Setup Tool	port	E5GC side panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect a USB port on the computer. *6 E5GC bottom panel: An E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Conversion Cable are used together to connect a USB port on the computer. *6					
Standards	Approved standards	cULus: UL 61010-1/CSA C22.2 No.61010-1, Korean wireless regulations (Radio law: KC Mark) (Some models only.) * 7					
	Conformed standards	EN 61010-1 (IEC 61010-1)					
EMC		EMI: Radiated Interference Electromagnetic Field Strength: Noise Terminal Voltage: EMS: ESD Immunity: Electromagnetic Field Immunity: Electromagnetic Field Immunity: Electromagnetic Field Immunity: EN61000-4-2 Electromagnetic Field Immunity: EN61000-4-3 Burst Noise Immunity: EN61000-4-6 Surge Immunity: EN61000-4-5 EN61000-4-5					
		Voltage Dip/Interrupting Immunity: EN61000-4-11					

^{*1.} The indication accuracy of K thermocouples in the -200 to 1,300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperature is ±2°C ±1 digit max. The indication accuracy of B thermocouples at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800°C is ±3°C max.

The indication accuracy of R and S thermocouples at a temperature of 200°C max. is ± 3 °C ± 1 digit max. The indication accuracy of W thermocouples is $(\pm 0.3\%$ of PV or ± 3 °C, whichever is greater) ± 1 digit max.

The indication accuracy of PLII thermocouples is $(\pm 0.3\%$ of PV or $\pm 2^{\circ}$ C, whichever is greater) ± 1 digit max.

- *2. However, the precision between 0 and 4 mA for a 0 to 20 mA output is $\pm 1\%$ FS max.
- *3. Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage
- *4. K thermocouple at -100°C max.: ±10°C max.
- ***5.** The unit is determined by the setting of the Integral/Derivative Time Unit parameter.
- *6. External serial communications (RS-485) and USB-Serial Conversion Cable communications can be used at the same time.
- *7. Refer to your OMRON website for the most recent information on applicable models.
- *8. Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

USB-Serial Conversion Cable

Applicable OS	Windows XP/Vista/7/8/10 *1					
Applicable software	CX-Thermo version 4.62 or higher					
Applicable models	E5□C-T Series, E5□C Series, and E5CB Series					
USB interface standard	Conforms to USB Specification 2.0					
DTE speed	38,400 bps					
Connector specifications	Computer: USB (Type A plug) Digital Temperature Controller: Special serial connector					
Power supply	Bus power (Supplied from the USB host controller) *2					
Power supply voltage	5 VDC					
Current consumption	450 mA max.					
Output voltage	4.7±0.2 VDC (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)					
Output current	250 mA max. (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)					
Ambient operating temperature	0 to 55°C (with no condensation or icing)					
Ambient operating humidity	10% to 80%					
Storage temperature	-20 to 60°C (with no condensation or icing)					
Storage humidity	10% to 80%					
Altitude	2,000 m max.					
Weight	Approx. 120 g					

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

***1.** CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

Transmission line connection method Communications RS-485: Multidrop RS-485: Multidrop						
Synchronization method Protocol CompoWay/F, or Modbus Baud rate * 9,600, 19,200, 38,400, or 57,600 bps Transmission code Data bit length * 7 or 8 bits Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer Communications Start-stop synchronization ASCII Vor 8 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications O to 99 ms		RS-485: Multidrop				
Protocol CompoWay/F, or Modbus Baud rate * 9,600, 19,200, 38,400, or 57,600 bps Transmission code ASCII Data bit length * 7 or 8 bits Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control None Interface RS-485 Retry function None Communications buffer 217 bytes Communications 0 to 99 ms	Communications	RS-485 (two-wire, half duplex)				
Baud rate * 9,600, 19,200, 38,400, or 57,600 bps Transmission code ASCII Data bit length * 7 or 8 bits Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control None Interface RS-485 Retry function None Communications buffer 217 bytes Communications 0 to 99 ms	Synchronization method	Start-stop synchronization				
Transmission code Data bit length * 7 or 8 bits Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer Communications 0 to 99 ms	Protocol	CompoWay/F, or Modbus				
Data bit length * 7 or 8 bits Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer 217 bytes Communications 0 to 99 ms	Baud rate *	9,600, 19,200, 38,400, or 57,600 bps				
Stop bit length * 1 or 2 bits Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer 217 bytes Communications 0 to 99 ms	Transmission code	ASCII				
Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer Communications 0 to 99 ms	Data bit length *	7 or 8 bits				
Error detection Block check character (BCC) with CompoWay/F or CRC-16 with Modbus Flow control Interface RS-485 Retry function Communications buffer 217 bytes Communications 0 to 99 ms	Stop bit length *	1 or 2 bits				
Interface RS-485 Retry function None Communications buffer 217 bytes Communications 0 to 99 ms	Error detection	Block check character (BCC) with CompoWay/F or				
Retry function None Communications buffer 217 bytes Communications 0 to 99 ms	Flow control	None				
Communications buffer 217 bytes Communications 0 to 99 ms	Interface	RS-485				
Communications 0 to 99 ms	Retry function	None				
	Communications buffer	217 bytes				
response wait time Default: 20 ms						
The bound years date hit length atom bit length and vertical negitives						

The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

Programless communications	You can use the memory in the PLC to read and write E5□C parameters, start and stop operation, etc. The E5□C automatically performs communications with PLCs. No communications programming is required. Number of connected Digital Temperature Controllers: 32 max. (Up to 16 for the FX Series) Applicable PLCs: OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs MELSEC Q Series, L Series, or FX Series (compatible with the FX2 or FX3 (excluding the FX1S)) KEYENCE PLCs KEYENCE KV Series
----------------------------	---

Component Communi- cations	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation.

KEYENCE is a registered trademark of Keyence Corporation.

*Both the programless communications and the component communications support the copying.

Current Transformer (Order Separately) Ratings


Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s ²
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

Heater Burnout Alarms and SSR Failure Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input
Maximum heater current	50 A AC
Input current indication accuracy	±5% FS ±1 digit max.
Heater burnout alarm setting range *1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4


- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- 30 ms for a control period of 0.1 s or 0.2 s.
- \$4. The value is 35 ms for a control period of 0.1 s or 0.2 s.

Electrical Life Expectancy Curve for Control Output Relay (Reference Values)

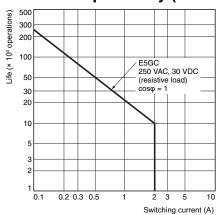


External Connections

E5GC

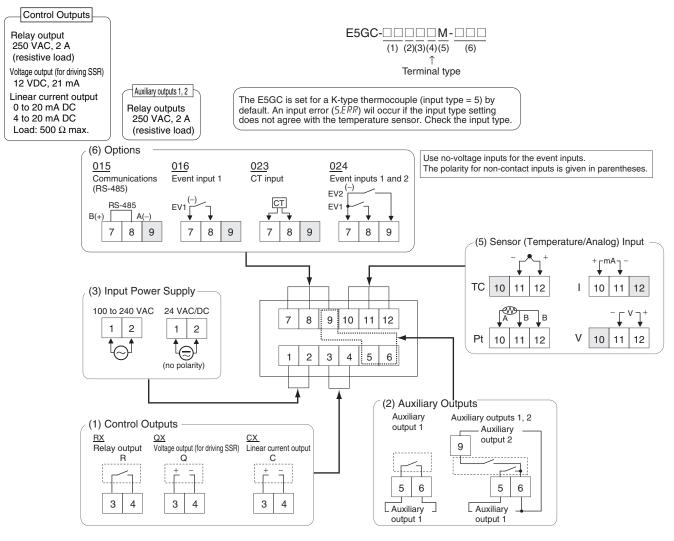


- Note: 1. The application of the terminals depends on the model.
 - 2. Do not wire the terminals that are shown with a gray background.
 - 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
 - 4. Connect M3 crimped terminals.

Isolation/Insulation Block Diagrams

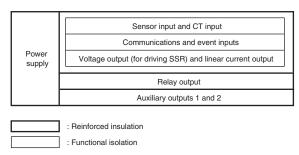

Note: Auxiliary outputs 1 to 2 are not insulated.


Terminal Block Appearance

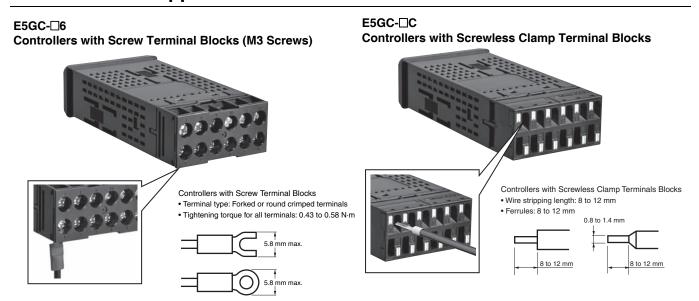

Wires: AWG24 to AWG18 (equal to a cross-sectional area of 0.21 to 0.82 mm²) braided or solid wires

Note: Refer to Precautions When Wiring E5GC (Controllers with Screwless Clamp Terminal Blocks) on page 115 for information on wiring Controllers with screwless clamp terminal blocks.

Nomenclature

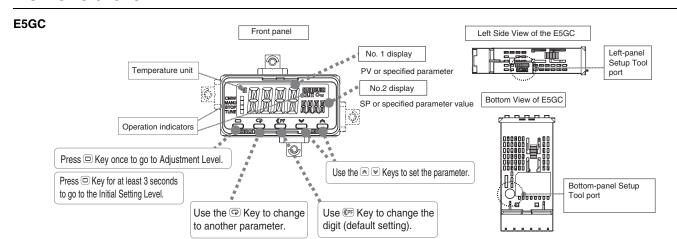


Dimensions (Unit: mm)

Controllers

 E5GC-□6 Controllers with Screw **Terminal Blocks**





- Use two Mounting Adapters, either on the top and bottom or on the right and left.
- Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to connect to the port on the side panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Communications Conversion Cable are required to connect to the port on the bottom panel. (You cannot leave either port connected constantly during operation.)

Mounted Separately Horizontally Group Mounted $L1=(48\times n-2.5)^{+1}$ n: Number of mounted Controllers ($2 \le n \le 6$)

To mount the Temperature Controller so that it is waterproof. insert the Waterproof Packing onto the Temperature Controller. Group mounting does not allow waterproofing

 
- To install the Temperature Controller, insert it into a square hole in a panel with a thickness of 1 to 8 mm, and then insert the enclosed adapter so that it locks into the grooves on the top and bottom or on the left and right of the rear case.
- Tighten the two mounting screws on the top and bottom or on the right and left of the Mounting Adapters alternately little by little to maintain a balance, and tighten them to a torque of between 0.29 and 0.39 N·m.
- · When two or more Temperature Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature range given below.

 
Horizontal group mounting: -10 to 55°C

 
· Use Temperature Controllers with Screwless Clamp Terminal Blocks for vertical group mounting.

E5GC-□C **Controllers with Screwless** Clamp Terminal Blocks









ing.

To mount the Temperature Controller so that it is waterproof, insert the Waterproof

Packing onto the Temperature Controller. Group mounting does not allow waterproof-

- Use two Mounting Adapters, either on the top and bottom or on the right and left.
- Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to connect to the port on the side panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Communications Conversion Cable are required to connect to the port on the bottom panel. (You cannot leave either port connected constantly during operation.)

Mounted Separately

 
40 min

Horizontally Group Mounted

 $L1=(48\times n-2.5)^{+1.0}$

Ľ2

Vertically Group Mounted



- adapter so that it locks into the grooves on the top and bottom or on the left and right of the rear case.
- Tighten the two mounting screws on the top and bottom or on the right and left of the Mounting Adapters alternately little by little to maintain a balance, and tighten them to a torque of between 0.29 and 0.39 N·m.
- · When two or more Temperature Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature range given below.

Horizontal group mounting: -10 to 55°C

Vertical group mounting of two Controllers: -10 to 45°C


Vertical group mounting of three or more Controllers: -10 to 40°C

• If you use vertical group mounting, you cannot draw out the interior body of the Controller.

E5GC

Accessories (Order Separately)


USB-Serial Conversion Cable E58-CIFQ2

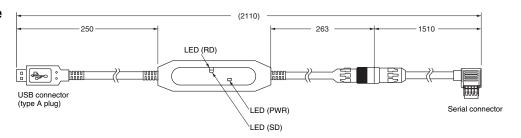


Conversion Cable E58-CIFQ2-E

Conversion Cable

  Connecting to the E58-CIFQ2 USB-Serial Conversion Cable






Note: Always use this product together with the E58-CIFQ2.

Current Transformers


E54-CT1



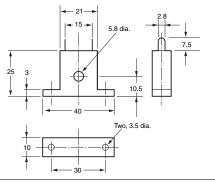

E54-CT3




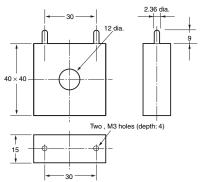

E54-CT3 Accessories

• Armature

Connection Example

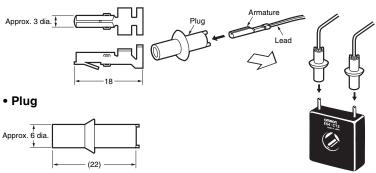


Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

E54-CT1

Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400±2

Winding resistance: 18±2 Ω

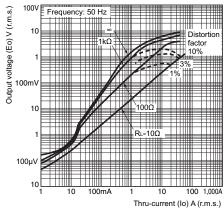


Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz)

(Maximum continuous heater current for an OMRON Digital Tem-


perature Controller is 50 A.)


Number of windings: 400±2 Winding resistance: 8±0.8 Ω

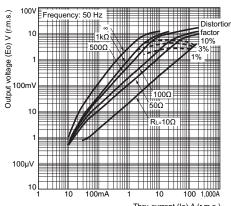

Mounting Adapter Y92F-53 (Two provided.)

  
One pair is provided with the Temperature Controller. Order this Adapter separately if it becomes lost or damaged.







Waterproof Packing Y92S-P12

 

The Waterproof Packing is provided with the Temperature Controller.

Order the Waterproof Packing separately if it becomes lost or damaged.

The Waterproof Packing can be used to achieve an IP66 degree of protection.

(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site. Consider three years a rough standard.)

 
Draw-out Jig Y92F-55

Use this Draw-out Jig to remove the interior body of the Digital Temperature Controller from the case to perform maintenance without removing the terminal wiring.











Digital Temperature Controller

E5CC/E5CC-B/E5CC-U (48 × 48 mm)

Large White PV Display That's Easier to Read. Easy to Use, from Model Selection to Setup and Operation.

Models with Push-In Plus Terminal Blocks Added to Lineup.

- The white PV display with a height of 15.2 mm improves visibility.
- High-speed sampling at 50 ms.
- Select from models with screw terminal blocks, models with Push-In Plus terminal blocks for reduced wiring work, and Plug-in Models that can be removed from the terminal block.
- Short body with depth of only 60 mm. (Screw Terminal Blocks)
- Easy connections to a PLC with programless communications. Use component communications to link Temperature Controllers to each other.

(E5CC/-U) (E5CC-B) CSA conformance evaluation by UL

 $48 \times 48 \text{ mm}$ **Screw Terminal** Blocks E5CC

Push-In Plus Terminal Blocks E5CC-B


48 × 48 mm Plug-in Models E5CC-U

Refer to your OMRON website for the most recent information on applicable safety standards.

Refer to Safety Precautions on 108.

 Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).

Main I/O Functions

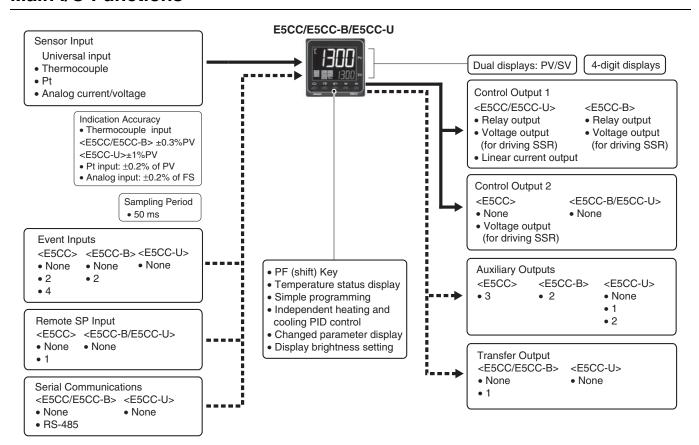

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting to use the product.

E5□C Digital Temperature Controllers User's Manual (Cat. No. H174)

E5□C Digital Temperature Controllers Communications Manual (Cat. No. H175)

Model Number Legend and Standard Models

Model Number Legend

Models with Screw Terminal Blocks

E5CC- \square 3 \square 5 M - \square (Example: E5CC-RX3A5M-000)

	1)	2	3	4	(5)	6						
Model	Control outputs 1 and 2	No. of auxiliary outputs	Power supply voltage	Terminal		Options		Meaning				
E5CC								48 × 4	18 mm			
							Co	ntrol output 1		Control	output 2	
	RX							Relay output		No	ne	
	QX						Voltage output (for driving SSR)			No	ne	
* 1 * 3	CX						Linear	current output >	k 2	No	ne	
	QQ						Voltage output (for driving SSR) Linear current output *2				output ng SSR)	
	ca									output ng SSR)		
		3					3 (one common)					
			Α					100 to 2	240 VAC			
			D				24 VAC/DC					
				5			Screw terminal blocks (with cover)					
					М		Universal input					
				•			HB alarm and HS alarm	Communications	Event inputs	Remote SP Input	Transfer output	
						000						

⁰⁰⁰ 001 1 2 2 RS-485 *1 003 (for 3-phase heaters) 004 RS-485 *****3 2 005 ---4 006 ------2 Provided. 007 2 Provided.

Note: Draw-out-type models of the E5CC are available. Ask your OMRON representative for details.

Heating and Cooling Control

Using Heating and Cooling Control

① Control Output Assignment

If there is no control output 2, an auxiliary output is used as the cooling control output.

If there is a control output 2, the two control outputs are used for heating and cooling.

(It does not matter which output is used for heating and which output is used for cooling.)

2 Contro

If PID control is used, you can set PID control separately for heating and cooling.

^{*1.} Options with HB and HS alarms (001 and 003) cannot be selected if a linear current output is selected for the control output.

^{*2.} The control output cannot be used as a transfer output.

^{*3.} Option 004 can be selected only when "CX" is selected for the control outputs.

Model Number Legend

Models with Push-In Plus Terminal Blocks

E5CC-□□	2 □ B M-□□□	(Example: E5CC-RX2ABM-000)
1	<u>2</u> <u>3</u> <u>4</u> <u>5</u> <u>6</u>	

	1	2	3	4	(5)	6					
Model	Control outputs 1 and 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options		Meaning			
E5CC								48 × 4	18 mm		
							Co	ontrol output 1		Control	output 2
	RX							Relay output		No	ne
	QX						Voltage output (for driving SSR)			ne	
		2					2 (one common)				
			Α				100 to 240 VAC				
			D				24 VAC/DC				
				В				Push-in plus t	erminal bl	ocks	
					М			Univer	sal input		
							HB alarm and HS alarm	Communications	Event inputs	Remote SP Input	Transfer output
						000					
						001	1		2		
						002	1	RS-485			
						004		RS-485	2		
						006			2		Provided.

Heating and Cooling Control

Using Heating and Cooling Control

① Control Output Assignment

An auxiliary output is used as the cooling control output.

2 Control

If PID control is used, you can set PID control separately for heating and cooling.

Model Number Legend

Plug-in Models

Model	① Control outputs 1 and 2	No. of auxiliary outputs	3 Power supply voltage	Terminal type	⑤ Input type	6 Options	Meaning					
E5CC								48	× 48 mm			
							Control outp	out 1	C	ontrol output	2	
	RW						Relay output (SPDT)		None		
	QX						Voltage output (for o	Voltage output (for driving SSR) No				
	CX						Linear current output * None					
		0					None					
		1					1					
		2					2 (one common)					
		1	Α				100 to 240 VAC					
			D					24	VAC/DC			
				U			Plug-in model					
					M			Unive	ersal input			
				'			HB alarm and HS alarm	Communi- cations	Event inputs	Remote SP Input	Transfer output	
						000						

^{*}The control output can be used as a simple transfer output for the Digital Temperature Controllers manufactured in May 2014 or later.

List of Models

			Options		Model	Model
Control output	No. of auxiliary outputs	HB alarm and	No. of event		Power supply voltage	Power supply voltage
	HS alarm inputs Communications		100 to 240 VAC	24 VAC/DC		
					E5CC-RW0AUM-000	E5CC-RW0DUM-000
Relay output	1				E5CC-RW1AUM-000	E5CC-RW1DUM-000
	2	=			E5CC-RW2AUM-000	E5CC-RW2DUM-000
					E5CC-QX0AUM-000	E5CC-QX0DUM-000
Voltage output (for driving SSR)	1				E5CC-QX1AUM-000	E5CC-QX1DUM-000
ioi diiviiig ddi i)	2	1			E5CC-QX2AUM-000	E5CC-QX2DUM-000
					E5CC-CX0AUM-000	E5CC-CX0DUM-000
Linear current output	1				E5CC-CX1AUM-000	E5CC-CX1DUM-000
	2	1			E5CC-CX2AUM-000	E5CC-CX2DUM-000

Heating and Cooling Control Using Heating and Cooling Control

An auxiliary output is used as the cooling control output.

If PID control is used, you can set PID control separately for heating and cooling.

¹ Control Output Assignment

② Control

Optional Products (Order Separately)

USB-Serial Conversion Cable

Model
WOULEI
E58-CIFQ2
200 011 02

Terminal Covers (for E5CC)

Model	
E53-COV17	
E53-COV23 (3pcs)	

Note: The E53-COV10 cannot be used.

Refer to page 31 for the mounted dimensions.

Waterproof Packing

Model	
Y92S-P8	

Note: The Waterproof Packing is provided only with E5CC/E5CC-B

Controllers.

The E5CC-U cannot be waterproofed even if the Waterproof Packing is attached.

Current Transformers (CTs)

Hole diameter	Model
5.8 mm	E54-CT1
12.0 mm	E54-CT3

Adapter

Model
Y92F-45

Note: Use this Adapter when the panel has already been prepared for an E5B□ Controller.

Waterproof Cover

Model
Y92A-48N

Mounting Adapter

	•	
	Model	
	Y92F-49	

Note: This Mounting Adapter is provided with the Digital Temperature Controller.

DIN Track Mounting Adapter (for E5CC)

Model
Y92F-52

Sockets (for E5CC-U)

Туре	Model
Front-connecting Socket	P2CF-11
Front-connecting Socket with Finger Protection	P2CF-11-E
Back-connecting Socket	P3GA-11
Terminal Cover for Back-connecting socket with Finger Protection	Y92A-48G

Front Covers

Туре	Model
Hard Front Cover	Y92A-48H
Soft Front Cover	Y92A-48D

CX-Thermo Support Software

	_			
Model				
		EST2-2C-	MV4	

Note: CX-Thermo version 4.5 or higher is required for the E5CC. CX-Thermo version 4.61 or higher is required for the E5CC-U. CX-Thermo version 4.65 or higher is required for the E5CC-B. For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

Specifications

Ratings

ı ıatırıgə		
Power supply voltage		A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC
Operating voltage range		85% to 110% of rated supply voltage
Power consumption		Models with option selection of 000:5.2 VA max. at 100 to 240 VAC, and 3.1 VA max. at 24 VAC or 1.6 W max. at 24 VDC All other models: 6.5 VA max. at 100 to 240 VAC, and 4.1 VA max. at 24 VAC or 2.3 W max. at 24 VDC
Sensor input		Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, 0 to 10 V,or 0 to 50 mV (The 0 to 50 mV range applies to the E5CC-U only for those manufactured in May 2014 or later.)
Input imped	lance	Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.)
Control me	thod	ON/OFF control or 2-PID control (with auto-tuning)
Control output	Relay output	E5CC/E5CC-B: SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value) E5CC-U: SPDT, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)
Output	Voltage output (for driving SSR)	Output voltage: 12 VDC ±20% (PNP), max. load current: 21 mA, with short-circuit protection circuit
	Linear current output *2	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000
Auxiliary output	Number of outputs	E5CC: 3 E5CC-B: 2 E5CC-U: 1 or 2 (depends on model)
	Output specifications	SPST-NO relay outputs, 250 VAC, Models with 1 output: 3 A (resistive load), E5CC-U models with 2 outputs: 3 A (resistive load), E5CC-B models with 2 outputs: 2 A (resistive load), Models with 3 outputs: 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)
F	Number of inputs	E5CC: 2 or 4 (depends on model) E5CC-B: 2 (depends on model)
Event input *1	External contact input specifications	Contact input: ON: 1 k Ω max., OFF: 100 k Ω min. Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max. Current flow: Approx. 7 mA per contact
Tueneten	Number of outputs	1 (only on models with a transfer output)
Transfer output *1	Output specifications	Current output: 4 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000 Linear voltage output: 1 to 5 VDC, load: 1 k Ω min., resolution: Approx. 10,000
Setting met	hod	Digital setting using front panel keys
Remote SP	input *1 *2	Current input: 4 to 20 mA DC or 0 to 20 mA DC (input impedance: 150 Ω max.) Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V (input impedance: 1 M Ω min.)
Indication r	nethod	11-segment digital display and individual indicators Character height: PV: 15.2 mm, SV: 7.1 mm
Multi SP *3		Up to eight set points (SP0 to SP7) can be saved and selected using the event inputs, key operations, or serial communications.
Bank switching		None
Other functions		Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, self tuning, robust tuning, PV input shift, run/stop, protection functions, extraction of square root, MV change rate limit, logic operations, temperature status display, simple programming, moving average of input value, and display brightness setting
Ambient operating temperature		-10 to 55°C (with no condensation or icing), For 3-year warranty: -10 to 50°C with standard mounting (with no condensation or icing)
Ambient operating humidity		25% to 85%
Storage temperature		-25 to 65°C (with no condensation or icing)
Altitude		2,000 m max.
Recommen	ded fuse	T2A, 250 VAC, time-lag, low-breaking capacity
Installation environment		Overvoltage category II, Pollution Degree 2 (EN/IEC/UL 61010-1)
		EECC LL Befor to Model Number Logard and List of Models on page 10

^{*1.} There are no optional functions for the E5CC-U. Refer to *Model Number Legend* and *List of Models* on page 19. *2. This function is not supported by the E5CC-B. Refer to *Model Number Legend* on page 18. *3. With the E5CC-B, there can be up to four set points if event inputs are used to select them.

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

Sen: typ		P		m res	istand eter	е							TI	hermo	coup	le							Infra		mpera sor	ature
Sen: specifi			Pt100		JPt	100	ı	K		J	•	Т	ш	L	Ī	J	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C
	2300																				2300					
	1800																			1800						
	1700																	1700	1700							
	1600																									
	1500																									
	1400						1000										4000					1000				
o ·	1300						1300										1300	_				1300				
Temperature range (°C)	1200																									
ge	1100																									
ä	1000	850					$H \vdash$		050					050					-		-	-				
0	900	850					+		850					850												
ž	800						H																			
ī	700						H						600													
鱼	600		500.0		500.0		+	500.0					000													
e.	500		300.0		300.0		+	300.0		400.0	400	400.0			400	400.0										
_	400						$H \vdash$			400.0	100	400.0			400	400.0										260
	300																							120	165	
	200			100.0		100.0	ĦĖ																90			
	100																			100						
	0			0.0		0.0	ĦĦ											0	0		0	0	0	0	0	0
	-100							-20.0	-100	-20.0				-100												İ
	-200	-200	-199.9		199.9		-200				-200	-199.9	-200		-200	-199.9	-200									
Set v	alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985 W: W5Re/W26Re, ASTM E988-1990 JPt100: JIS C 1604-1989, JIS C 1606-1989 Pt100: JIS C 1604-1997, IEC 60751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

Analog input

Input type	Current		Voltage					
Input specification	4 to 20 mA	0 to 20 mA 1 to 5 V		0 to 5 V	0 to 10 V	0 to 50 mV*		
Setting range	Usable in the following ranges by scaling: -1999 to 9999, -199.9 to 999.9, -19.99 to 99.99 or -1.999 to 9.999							
Set value 25 26		26	27	28	29	30		

^{*}The range applies to the E5CC-U only for those manufactured in May 2014 or later.

Alarm Types

Each alarm can be independently set to one of the following 19 alarm types. The default is 2: Upper limit. (see note.)


Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.

Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.


Set		Alarm outpu			
value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function	
0	Alarm function OFF	Outpu	t OFF	No alarm	
1	Upper- and lower-limit *1	ON SP PV	*2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.	
2 (default)	Upper-limit	ON OFF SP PV	ON X P	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.	
3	Lower-limit	ON X PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.	
4	Upper- and lower-limit range * 1	ON → L H ← PV	*3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.	
5	Upper- and lower-limit with standby sequence *1	ON L H PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6	
6	Upper-limit with standby sequence	ON X PV	ON X + PV	A standby sequence is added to the upper-limit alarm (2). *6	
7	Lower-limit with standby sequence	ON X PV	ON X PV	A standby sequence is added to the lower-limit alarm (3). *6	
8	Absolute-value upper- limit	ON OFF O	ON ←X→ PV	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.	
9	Absolute-value lower-limit	ON OFF 0 PV	ON OFF O PV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.	
10	Absolute-value upper- limit with standby sequence	ON OFF 0	ON OFF O PV	A standby sequence is added to the absolute-value upper-limit alarm (8). *6	
11	Absolute-value lower-limit with standby sequence	ON ←X→ OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6	
12	LBA (alarm 1 type only)	-	-	*7	
13	PV change rate alarm	-	-	*8	
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON OFF 0 SP	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).	
15	SP absolute-value lower-limit alarm	ON OFF 0 SP	ON OFF SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).	
		Standard Control	Standard Control		
		ON OFF MV	ON OFF MV		
16	MV absolute-value	0	0	This alarm type turns ON the alarm when the manipulated	
10	upper-limit alarm *9	Heating/Cooling Control (Heating MV)	Heating/Cooling Control (Heating MV)	variable (MV) is higher than the alarm value (X).	
		ON OFF MV	Always ON		
		Standard Control	Standard Control		
		ON	ON OFF OMV		
17	MV absolute-value lower-limit alarm *9	Heating/Cooling Control (Cooling MV)	Heating/Cooling Control (Cooling MV)	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).	
		ON OFF 0	Always ON		
18	RSP absolute-value upper-limit alarm *10	ON OFF O RSP	ON COFF O RSP	This alarm type turns ON the alarm when the remote SP (RSP) is higher than the alarm value (X).	
19	RSP absolute-value lower-limit alarm *10	ON ←X→ OFF 0 RSP	ON OFF O RSP	This alarm type turns ON the alarm when the remote SP (RSP) is lower than the alarm value (X).	

E5CC/E5CC-B/E5CC-U

 - *1. With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- *4. Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above *2
 - Case 1 and 2
 - Always OFF when the upper-limit and lower-limit hysteresis overlaps.
 - · Case 3: Always OFF
- ***5.** Set value: 5, Upper- and lower-limit with standby sequence Always OFF when the upper-limit and lower-limit hysteresis overlaps.
- *6. Refer to the E5\(\subseteq C\) Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the operation of the standby sequence.
- *7. Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No.H174) for information on the loop burnout alarm (LBA).
- ***8.** Refer to the *E5*□*C Digital Temperature Controllers User's Manual* (Cat. No. H174) for information on the PV change rate alarm.
- *9. When heating/cooling control is performed, the MV absolute upper limit alarm functions only for the heating operation and the MV absolute lower limit alarm functions only for the cooling operation.
- ***10.**This value is displayed only when a remote SP input is used. It functions in both Local SP Mode and Remote SP Mode. Remote SP input is supported only for the E5CC.

Characteristics

Indication a	accuracy ient temperature of 23°C)	E5CC/E5CC-B Thermocouple: $(\pm 0.3\%)$ of indication value or $\pm 1^{\circ}$ C, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2\%)$ of indication value or $\pm 0.8\%$ C, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\%$ FS ± 1 digit max. CT input: $\pm 5\%$ FS ± 1 digit max. E5CC-U Thermocouple: $(\pm 1\%)$ of indication value or $\pm 2\%$ C, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2\%)$ of indication value or $\pm 0.8\%$ C, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\%$ FS ± 1 digit max.				
Transfer ou	itput accuracy	±0.3% FS max.				
Simple tran	sfer output accuracy	±0.3% FS max.*2				
•	Input Type	±0.2% FS ±1 digit max.				
Influence o	f temperature *3	Thermocouple input (R, S, B, W, PL II): $(\pm 1\%$ of indication value or $\pm 10^{\circ}$ C, whichever is greater) ± 1 digit max. Other thermocouple input: $(\pm 1\%$ of indication value or $\pm 4^{\circ}$ C, whichever is greater) ± 1 digit max. *4				
	f voltage *3	Platinum resistance thermometer: $(\pm 1\% \text{ of indication value or } \pm 2^{\circ}\text{C}$, whichever is greater) ± 1 digit max. Analog input: $\pm 1\% \text{FS} \pm 1$ digit max.				
Influence o (at EN 613		CT input: ±5% FS ±1 digit max. Remote SP input: ±1% FS ±1 digit max.				
Input samp	ling period	50 ms				
Hysteresis		Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)				
Proportion	al band (P)	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)				
Integral tim	e (I)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5				
Derivative t	ime (D)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5				
Proportion	al band (P) for cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)				
Integral tim	e (I) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5				
Derivative t	ime (D) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5				
Control per	iod	0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)				
Manual res	et value	0.0 to 100.0% (in units of 0.1%)				
Alarm setti	ng range	-1999 to 9999 (decimal point position depends on input type)				
Influence o	f signal source resistance	Thermocouple: $0.1^{\circ}\text{C}/\Omega$ max. (100 Ω max.) Platinum resistance thermometer: $0.1^{\circ}\text{C}/\Omega$ max. (10 Ω max.)				
Insulation r	esistance	20 MΩ min. (at 500 VDC)				
Dielectric s	trength	3,000 VAC, 50/60 Hz for 1 min between terminals of different charge				
Vibration	Malfunction	10 to 55 Hz, 20 m/s ² for 10 min each in X, Y, and Z directions				
Vibration	Resistance	10 to 55 Hz, 20 m/s ² for 2 hrs each in X, Y, and Z directions				
Shock	Malfunction	100 m/s², 3 times each in X, Y, and Z directions				
OHOCK	Resistance	300 m/s², 3 times each in X, Y, and Z directions				
Weight		E5CC/E5CC-B: Controller: Approx. 120 g, Adapter: Approx. 10 g E5CC-U: Controller: Approx. 100 g, Adapter: Approx. 10 g				
Degree of protection		E5CC/E5CC-B: Front panel: IP66, Rear case: IP20, Terminals: IP00 E5CC-U: Front panel: IP50, Rear case: IP20, Terminals: IP00				
Memory protection		Non-volatile memory (number of writes: 1,000,000 times)				
Setup Tool		E5CC: CX-Thermo version 4.5 or higher E5CC-B: CX-Thermo version 4.65 or higher E5CC-U: CX-Thermo version 4.61 or higher				
Setup Tool	port	E5CC/E5CC-B/E5CC-U top panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect to a USB port on the computer. *6				

^{*1.} The indication accuracy of K thermocouples in the -200 to 1,300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is ±2°C ±1 digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800°C is ±3°C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W thermocouples is (±0.3% of PV or ±3°C, whichever is greater) ±1 digit max. The indication accuracy of PL II thermocouples is (±0.3% of PV or ±2°C, whichever is greater) ±1 digit max.

 $[\]star 2$. However, the precision between 0 and 4 mA for a 0 to 20 mA output is $\pm 1\%$ FS max.

^{*3.} Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage

^{*4.} K thermocouple at -100°C max.: ±10°C max.

^{*5.} The unit is determined by the setting of the Integral/Derivative Time Unit parameter.

^{*6.} External communications (RS-485) and USB-serial conversion cable communications can be used at the same time.

E5CC/E5CC-B/E5CC-U

	Approved standards	cULus: UL 61010-1/CSA C22.2 No.61010-1 *7, KOSHA						
Standards	Approved standards	Korean wireless regulations (Radio law: KC Mark) (Some models only.) *8, Lloyd's standards *9						
	Conformed standards	EN 61010-1 (IEC 61010-1)						
		EMI:	EN 61326-1 *10					
		Radiated Interference Electromagnetic Field Strength:	EN 55011 Group 1, class A					
		Noise Terminal Voltage:	EN 55011 Group 1, class A					
		EMS:	EN 61326-1 *10					
EMC		ESD Immunity:	EN 61000-4-2					
EIVIC		Electromagnetic Field Immunity:	EN 61000-4-3					
		Burst Noise Immunity:	EN 61000-4-4					
		Conducted Disturbance Immunity:	EN 61000-4-6					
		Surge Immunity:	EN 61000-4-5					
		Voltage Dip/Interrupting Immunity:	EN 61000-4-11					

^{*7.} The E5CC-U plug-in model is certified for UL listing only when used together with the OMRON P2CF-11 or P2CF-11-E Socket. The P3GA-11 is not certified for UL listing.

*8. Access the following website for information on certified models. http://www.ia.omron.com/support/models/index.html

*9. Refer to information on maritime standards in Shipping Standards on page 106 for compliance with Lloyd's Standards.

*10.Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

USB-Serial Conversion Cable

Windows XP/Vista/7/8/10 *1
CX-Thermo version 4.5 or higher (Version 4.61 or higher is required for the E5CC-U, Version 4.65 or higher is required for the E5CC-B.)
E5 C-T Series, E5 C Series, and E5CB Series
Conforms to USB Specification 2.0.
38400 bps
Computer: USB (type A plug) Digital Temperature Controller: Special serial connector
Bus power (Supplied from USB host controller.)*2
5 VDC
450 mA max.
4.7±0.2 VDC (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)
250 mA max. (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)
0 to 55°C (with no condensation or icing)
10% to 80%
-20 to 60°C (with no condensation or icing)
10% to 80%
2,000 m max.
Approx. 120 g

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

***1.** CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

	no opcomoduone
Transmission line connection method	RS-485: Multidrop
Communications	RS-485 (two-wire, half duplex)
Synchronization method	Start-stop synchronization
Protocol	CompoWay/F, or Modbus
Baud rate *	9600, 19200, 38400, or 57600 bps
Transmission code	ASCII
Data bit length *	7 or 8 bits
Stop bit length *	1 or 2 bits
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 Modbus
Flow control	None
Interface	RS-485
Retry function	None
Communications buffer	217 bytes
Communications response wait time	0 to 99 ms Default: 20 ms

^{*}The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

Programless communications *1	You can use the memory in the PLC to read and write E5□C parameters, start and stop operation, etc. The E5□C automatically performs communications with PLCs. No communications programming is required. Number of connected Digital Temperature Controllers: 32 max. (Up to 16 for the FX Series) Applicable PLCs OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs MELSEC Q Series, L Series, or FX Series (compatible with the FX2 or FX3 (excluding the FX1S)) KEYENCE PLCs KEYENCE KV Series

Component Communications *1	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *2	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation. KEYENCE is a registered trademark of Keyence Corporation.

- *1. A Temperature Controller with version 1.1 or higher is required. A Temperature Controller with version 2.1 or higher is required for the FX Series or the KV Series.
- ***2.** Both the programless communications and the component communications support the copying.

Current Transformer (Order Separately) Ratings


Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s ²
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

Heater Burnout Alarms and SSR Failure Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input Models with detection for singlephase or three-phase heaters: Two inputs
Maximum heater current	50 A AC
Input current indication accuracy	±5% FS ±1 digit max.
Heater burnout alarm setting range * 1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4

- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- ***3.** The value is 30 ms for a control period of 0.1 s or 0.2 s.
- ***4.** The value is 35 ms for a control period of 0.1 s or 0.2 s.


Electrical Life Expectancy Curve for Relays (Reference Values)

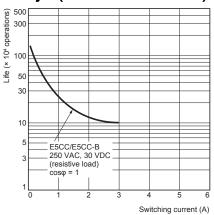

E5CC/E5CC-B/E5CC-U

External Connections

E5CC (Screw Terminal Blocks)

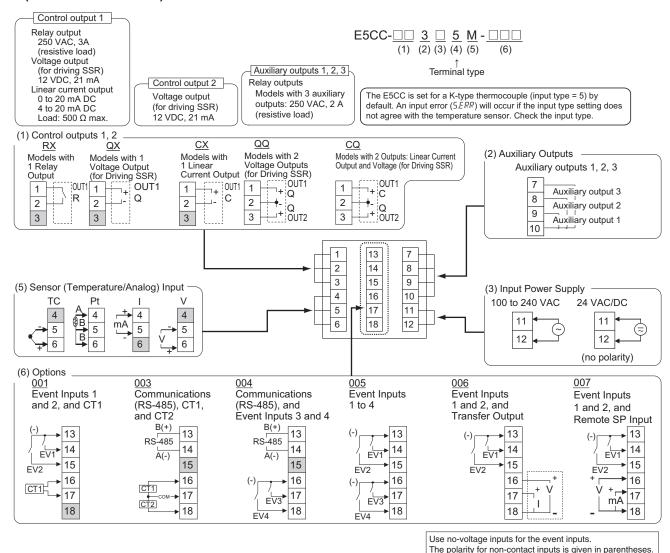


Note: 1. The application of the terminals depends on the model.

2. Do not wire the terminals that are shown with a gray background.


3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.

4. Connect M3 crimped terminals.

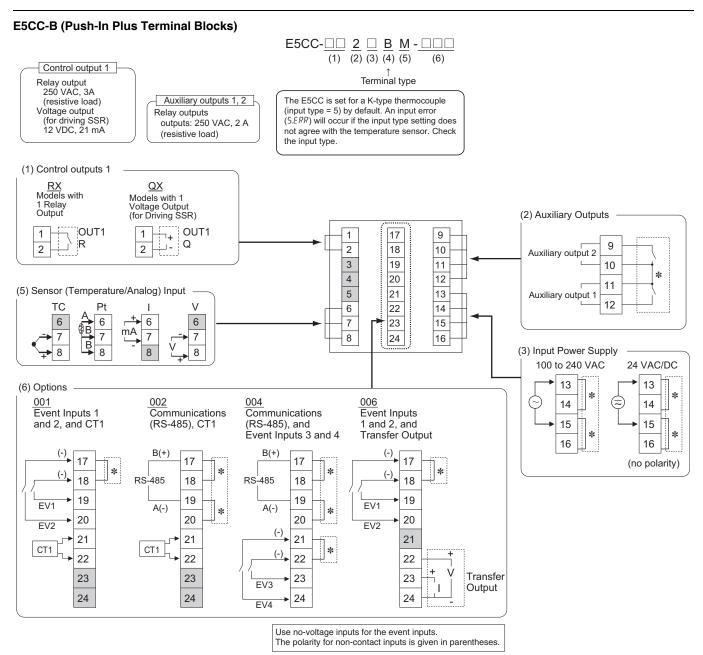


- Note: 1. The application of the terminals depends on the model.
 - 2. Do not wire the terminals that are shown with a gray background.
 - 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
 - 4. Refer to Wiring Precautions for E5 C-B (Controllers with Push-In Plus Terminal Blocks) on page 116 for wire specifications and wiring methods.
 - 5. Common terminals are indicated with asterisks (*). You can use the input power supply and communications common terminals for crossover wiring. Do not exceed the maximum number of Temperature Controllers given below if you use crossover wiring for the input power supply.

 100 to 240 VAC Controllers: 16 max. 24 VAC/VDC Controllers: 8 max.



E5CC-U (Plug-in Models)

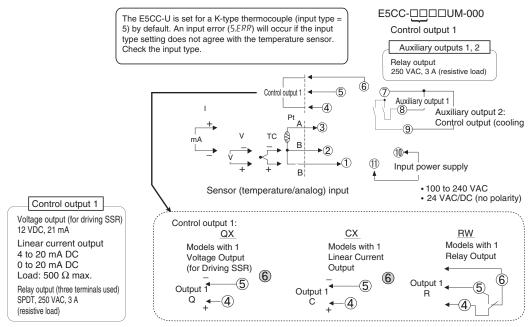


- Note: 1. The application of the terminals depends on the model.
 - 2. Do not wire the terminals that are shown with a gray background.
 - 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
 - 4. Connect M3.5 crimped terminals.

Isolation/Insulation Block Diagrams

E5CC


Models with 3 Auxiliary Outputs

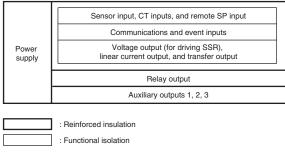


Note: Auxiliary outputs 1 to 3 are not insulated.

E5CC-B


Models with 2 Auxiliary Outputs

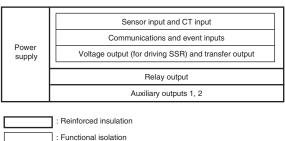

E5CC-U Models with 2 Auxiliary Outputs

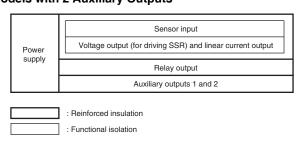


Nomenclature

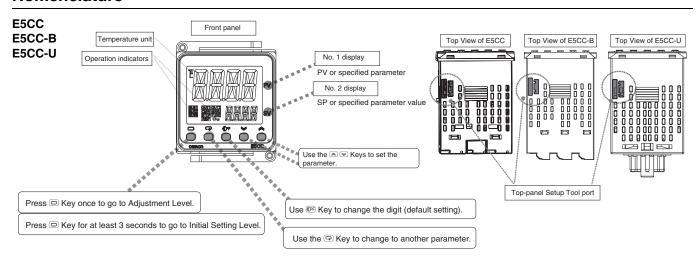


Dimensions (Unit: mm)

Controllers

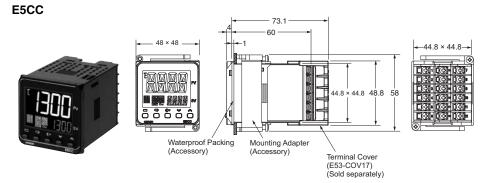

E5CC-B



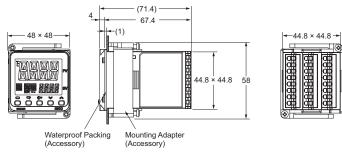


The Setup Tool port is on the top of the Temperature Controller.

It is used to connect the Temperature Controller to the computer to use the Setup Tool.

The E58-CIFQ2 USB-Serial Conversion Cable is required to make the connection.

Refer to the instructions that are provided with the USB-Serial Conversion Cable for the connection procedure.

Note: Do not leave the USB-Serial Conversion Cable connected when you use the Temperature Controller.

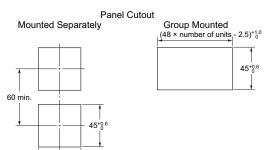


-45^{+0.6} →

- Recommended panel thickness is 1 to 5 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.
- Use a control panel thickness of 1 to 3 mm if the Y92A-48N and a USB-Serial Conversion Cable are used together.

E5CC/E5CC-B/E5CC-U

E5CC-U



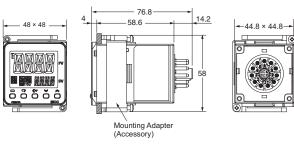


The Setup Tool port is on the top of the Temperature Controller.

It is used to connect the Temperature Controller to the computer to use the Setup Tool.

The E58-CIFQ2 USB-Serial Conversion Cable is required to make the connection.

Refer to the instructions that are provided with the USB-Serial Conversion Cable for the connection procedure.

Note: Do not leave the USB-Serial Conversion Cable connected when you use the Temperature Controller.

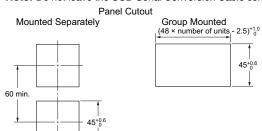


- Recommended panel thickness is 1 to 5 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.
- Use a control panel thickness of 1 to 3 mm if the Y92A-48N and a USB-Serial Conversion Cable are used together.

Accessories (Order Separately)

45^{+0.6} →


USB-Serial Conversion Cable



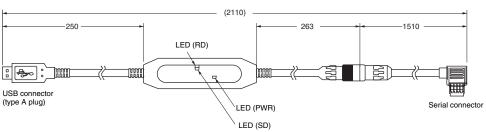


Terminal Covers E53-COV17



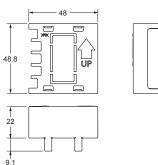


Terminal Covers E53-COV23 (Three Covers provided.)

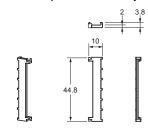




  Terminal Cover (for the P3GA-11 Back-connecting Socket)







Note: You can attach the P3GA-11 Back-connecting Socket for finger protection.

Waterproof Packing Y92S-P8 (for DIN 48 × 48)



The Waterproof Packing is provided only with the E5CC/E5CC-B.

It is not included with the E5CC-U.

Order the Waterproof Packing separately if it becomes lost or damaged.

The Waterproof Packing can be used to achieve an IP66 degree of protection.

(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site.


Consider three years as a rough standard.)

The E5CC-U cannot be waterproofed even if the Waterproof Packing is attached.

Current Transformers


E54-CT1



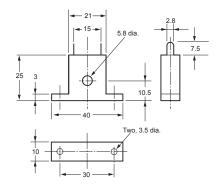


E54-CT3



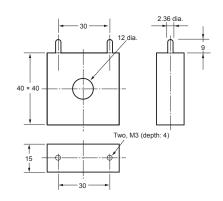


E54-CT3 Accessories

 
Armature



Plug

 


Connection Example

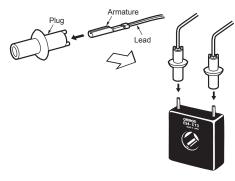

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT1

Maximum continuous heater current: 50 A (50/60 Hz)

Number of windings: 400 \pm 2 Winding resistance: 18 \pm 2 Ω

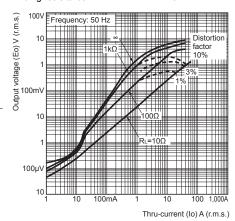


Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Digital Temperature Controller is 50 A.)

Number of windings: 400 \pm 2 Winding resistance: 8 \pm 0.8 Ω

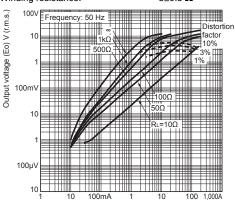

Thru-current (Io) A (r.m.s.)


Adapter


Y92F-45

- Note: 1. Use this Adapter when the Front Panel has already been prepared for the E5B□.
 - 2. Only black is available.
 - 3. You cannot use the E58-CIFQ2 USB-Serial Conversion Cable if you use the Y92F-45 Adapter. To use the USB-Serial Conversion Cable to make the settings, do so before you mount the Temperature Controller in the panel.


 4. You cannot use it together with the Y92F-49 Adapter that is enclosed with the Controller.




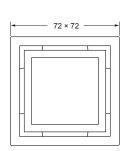


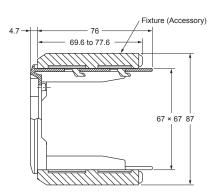

Mounted to E5CC

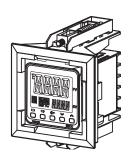

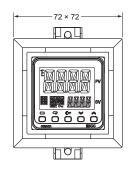


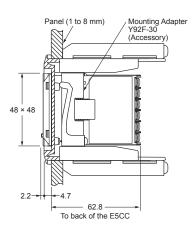



DIN Track Mounting Adapter

Y92F-52

   - Note: 1. This Adapter cannot be used together with the Terminal Cover. Remove the Terminal Cover to use the Adapter.
 - 2. This Adapter cannot be used with the E5CC-B.








This Adapter is used to mount the E5CC to a DIN Track. If you use the Adapter, there is no need for a plate to mount in the panel or to drill mounting holes in the panel.


Mounted to E5CC





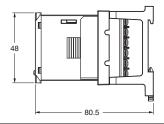

Watertight Cover Y92A-48N

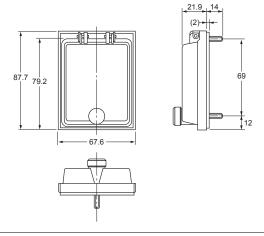

Mounting Adapter Y92F-49



The Mounting Adapter is provided with the Temperature Controller.

Order this Adapter separately if it becomes lost or damaged.

Protective Cover

Y92A-48D

Note: This Protective Cover cannot be used if the Waterproof Packing is installed.



This Protective Cover is soft type. It is able to operate the controller with using this cover.

Protective Cover Y92A-48H




This Protective Cover is hard type. Please use it for the mis-operation prevention etc.

E5CC-U Wiring Socket

Front-connecting Socket P2CF-11



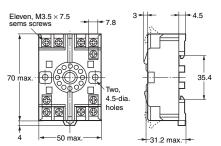

Terminal Layout/Internal Connections

(Top View)

Mounting Holes

 


 
Note: Can also be mounted to a DIN track

- Note: 1. A model with finger protection (P2CF-11-E) is also available.
 - 2. You cannot use the P2CF-11 or P2CF-11-E together with the Y92F-45.

Back-connecting Socket P3GA-11







Eleven, M3.5 Terminal Layout/Internal Connections (Bottom View)



- Note: 1. Using any other sockets will adversely affect accuracy. Use only the specified sockets.
 - A Protective Cover for finger protection (Y92A-48G) is also available.
 You cannot use the P3GA-11 together with the Y92F-45.

E5EC/E5EC-B/E5AC (48×96 mm/96×96 mm)

Large White PV Display That's Easier to Read. Easy to Use, from Model Selection to Setup and Operation.

Models with Push-In Plus Terminal Blocks Added to 48 × 96-mm Lineup.

- A white LCD PV display with a height of approx. 18 mm for the E5EC/E5EC-B and 25 mm for the E5AC improves visibility.
- High-speed sampling at 50 ms.
- With 48 x 96-mm Controllers, you can select between screw terminal blocks or Push-In Plus terminal blocks to save wiring work.
- Short body with depth of only 60 mm. (Screw Terminal Blocks)
- Easy connections to a PLC with programless communications. Use component communications to link Temperature Controllers to each other.
- Tool ports are provided both on the top panel and the front panel. Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).



48 × 96 mm Screw Terminal **Blocks**

48 × 96 mm **Push-In Plus Terminal Blocks** E5EC-B


96 × 96 mm Screw Terminal Blocks E5AC

Refer to your OMRON website for the most recent information on applicable safety standards.



Refer to Safety Precautions on page 108.

Main I/O Functions

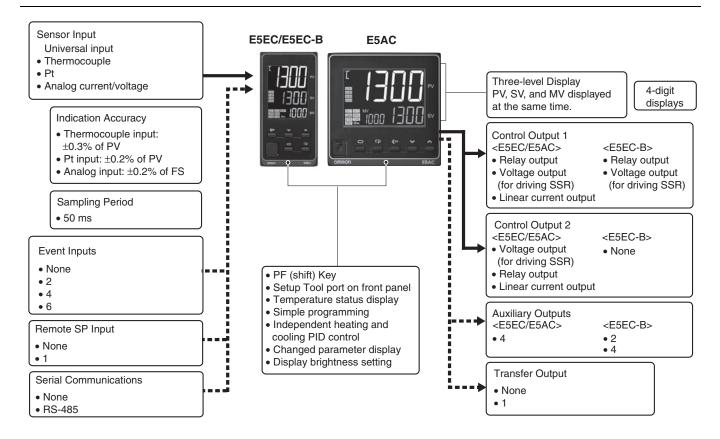

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting to use the product.

E5□C Digital Temperature Controllers User's Manual (Cat. No. H174)

E5□C Digital Temperature Controllers Communications Manual (Cat. No. H175)

Model Number Legend and Standard Models

Model Number Legend

Models with Screw Terminal Blocks

E5EC-□□ 4 □ 5 M -□□□ (Example: **E5EC-RX4A5M-000**)

1 2 3 4 5 6

E5AC-□□ 4 □ 5 M -□□□ (Example: **E5AC-RX4A5M-000**)

1 2 3 4 5 6

	1		2	3	4	(5)	6					
Model		ol outputs and 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options	Meaning				
5EC									48 × 9	96 mm		
E5AC									96 × 9	96 mm		
								Co	ontrol output 1		Control	output 2
	RX								Relay output		No	ne
	QX								oltage output or driving SSR)		No	one
*2	CX							Line	ar current output	t	No	ne
	QQ								oltage output or driving SSR)			output ng SSR)
	QR								or driving SSR)		Relay	output
	RR								Relay output		Relay	output
*2	СС							Linear current output Linear current output				
*2	CQ							Linear current output Voltage output (for driving St				
	PR							Position Position-proportional relay output proportional output		nal relay		
	*3 4							ry outputs 1 and ary outputs 3 and				
			Α				100 to 240 VAC					
			D					24 VAC/DC				
					5			Screw terminal blocks (with cover)				
	Control outputs 1 and 2					М		Universal input				
	For RX, QX, QQ, QR, RR, or CQ	For CX or CC	For PR					HB alarm and HS alarm	Communications	Event inputs	Remote SP Input	Transfer

	QX, QQ, QR, RR, or CQ	For CX or CC	For PR		HB alarm and HS alarm	Communications	Event inputs	Remote SP Input	Transfer output
	Selectable	Selectable	Selectable	000					
Option selection conditions *1		Selectable	Selectable	004		RS-485	2		
		Selectable		005			4		
	Selectable			009	2 (for 3-phase heaters)	RS-485	2		
	Selectable			010	1		4		
	Selectable			011	1		6	Provided.	Provided.
		Selectable		013			6	Provided.	Provided.
		Selectable	Selectable	014		RS-485	4	Provided.	Provided.

^{\$1.} The options that can be selected depend on the type of control output.

Note: Draw-out-type models of the E5EC and E5AC are available. Ask your OMRON representative for details.

Heating and Cooling Control

Using Heating and Cooling Control

1 Control Output Assignment

If there is no control output 2, an auxiliary output is used as the cooling control output.

If there is a control output 2, the two control outputs are used for heating and cooling.

(It does not matter which output is used for heating and which output is used for cooling.)

(2) Control

If PID control is used, you can set PID control separately for heating and cooling.

This allows you to handle control systems with different heating and cooling response characteristics.

^{*2.} The control output cannot be used as a transfer output.

^{*3.} A model with four auxiliary outputs must be selected.

Model Number Legend

Models with Push-In Plus Terminal Blocks

E5EC
B M
(Example: E5EC-RX4ABM-000)

1 2 3 4 5 6

	1	2	3	4	(5)	6					
Model	Control outputs 1 and 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options	Meaning				
E5EC								48 × 90	6 mm		
							C	ontrol output 1		Control	output 2
	RX							Relay output		No	ne
	QX						Voltage output (for driving SSR)		one		
		2					2 independent points				
		4					4 (auxiliary outputs 1 and 2 with same common and auxiliary outputs 3 and 4 with same common)			d auxiliary	
		ı	Α				100 to 240 VAC				
			D				24 VAC/DC				
				В				Push-in plus te	rminal bl	ocks	
					М			Universa	al input		
							HB alarm and HS alarm	Communications	Event inputs	Remote SP Input	Transfer output
						000					
						800	1	RS-485	2		
						010	1		4		
						011	1		6	Provided.	Provided.

Heating and Cooling Control Using Heating and Cooling Control

1 Control Output Assignment

An auxiliary output is used as the cooling control output.

② Control

If PID control is used, you can set PID control separately for heating and cooling.

This allows you to handle control systems with different heating and cooling response characteristics.

Optional Products (Order Separately)

USB-Serial Conversion Cable

Model
E58-CIFQ2

Communications Conversion Cable

Model
E58-CIFQ2-E

Note: Always use this product together with the E58-CIFQ2.

This Cable is used to connect to the front-panel Setup Tool port.

Terminal Covers (for E5EC/E5AC)

	-
Model	
E53-COV24 (3pcs)	

Note: The Terminal Covers E53-COV24 are provided with the Digital Temperature Controller.

Waterproof Packing

Applicable Controller	Model
E5EC/E5EC-B	Y92S-P9
E5AC	Y92S-P10

Note: This Waterproof Packing is provided with the Digital Temperature Controller.

Waterproof Cover

Applicable Controller	Model
E5EC/E5EC-B	Y92A-49N
E5AC	Y92A-96N

Front Port Cover

Model	
Woder	
V92S-D7	
1923-71	

Note: This Front Port Cover is provided with the Digital Temperature Controller.

Mounting Adapter

	•	
	Model	
Y	92F-51 (2pcs)	

Note: This Mounting Adapter is provided with the Digital Temperature Controller.

Current Transformers (CTs)

Hole diameter	Model
5.8 mm	E54-CT1
12.0 mm	E54-CT3

CX-Thermo Support Software

Model
EST2-2C-MV4

Note: CX-Thermo version 4.5 or higher is required for the E5EC/E5AC.

CX-Thermo version 4.65 or higher is required for the E5EC-B. For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

E5EC/E5EC-B/E5AC

Specifications

Ratings

Power supply voltage Operating voltage range			A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC		
			85 to 110% of rated supply voltage		
E5EC/ E5EC-B			Models with option selection of 000:6.6 VA max. at 100 to 240 VAC, and 4.1 VA max. at 24 VAC or 2.3 W max. at 24 VDC All other models: 8.3 VA max. at 100 to 240 VAC, and 5.5 VA max. at 24 VAC or 3.2 W max. at 24 VDC		
Power consu	Power consumption E5AC		Models with option selection of 000:7.0 VA max. at 100 to 240 VAC, and 4.2 VA max. at 24 VAC or 2.4 W max. at 24 VDC All other models: 9.0 VA max. at 100 to 240 VAC, and 5.6 VA max. at 24 VAC or 3.4 W max. at 24 VDC		
Sensor input Input impedance Control method			Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V		
			Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.)		
Control method			ON/OFF or 2-PID control (with auto-tuning)		
	Relay output		SPST-NO, 250 VAC, 5 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)		
Control output	Voltage output (for driving SSR)	Output voltage: 12 VDC ±20% (PNP), max. load current: 40 mA, with short-circuit protection circuit (The maximum load current is 21 mA for models with two control outputs.)		
Linear current		utput *	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000		
Auxiliary output Output specifications		uts	E5EC/E5AC: 4 E5EC-B: 2 or 4 (depends on model)		
		ations	SPST-NO. relay outputs, 250 VAC, Models with 2 outputs: 3 A (resistive load), Models with 4 outputs: 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)		
Number of inputs		ts	2, 4 or 6 (depends on model)		
Event input			Contact input: ON: 1 k Ω max., OFF: 100 k Ω min.		
Event input	External contact	t input	Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max.		
specifications			Current flow: Approx. 7 mA per contact		
Transfer output Soutput Output specifications Remote SP input		uts	1 (only on models with a transfer output)		
		ations	Current output: 4 to 20 mA DC, Load: 500 Ω max., Resolution: Approx. 10,000 Linear voltage output: 1 to 5 VDC, load: 1 k Ω min., Resolution: Approx. 10,000		
			Current input: 4 to 20 mA DC or 0 to 20 mA DC (input impedance: 150 Ω max.) Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V (input impedance: 1 M Ω min.)		
Potentiomete	Potentiometer input *		100 Ω to 10 kΩ		
Setting meth	od		Digital setting using front panel keys		
Indication method			11-segment digital display and individual indicators Character height: E5EC/E5EC-B: PV: 18.0 mm, SV: 11.0 mm, MV: 7.8 mm E5AC: PV: 25.0 mm, SV: 15.0 mm, MV: 9.5 mm Three displays Contents: PV/SV/MV, PV/SV/Multi-SP, or PV/SV/Remaining soak time, etc Numbers of digits: 4 digits each for PM, SV, and MV displays		
Multi SP			Up to eight set points (SP0 to SP7) can be saved and selected using the event inputs, key operations or serial communications.		
Bank switchi	ing		None		
Other functions			Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, self tuning, robust tuning, PV input shift, run/stop, protection functions, extraction of square roo MV change rate limit, logic operations, temperature status display, simple programming, moving average of input value, and display brightness setting		
Ambient ope	rating temperatu	re	-10 to 55° C (with no condensation or icing), For 3-year warranty: -10 to 50° C with standard mounting (with no condensation or icing)		
•	rating humidity		25 to 85%		
Storage temp	perature		-25 to 65°C (with no condensation or icing)		
Altitude			2,000 m max.		
Recommend	ed fuse		T2A, 250 VAC, time-lag, low-breaking capacity		

^{*} This function is not supported by the E5EC-B. Refer to *Model Number Legend* on page 38.

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

Sen: typ		Р		m res	istanc eter	e							Т	hermo	coup	le							Infra	red te sen	mpera	ature
Sen: specific			Pt100		JPt	100	ı	K		J		7	E	L		IJ	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C
	2300																				2300					
	1800																			1800						
	1700																	1700	1700							
	1600																									
	1500																									
_	1400						4000										1000					4000				
ပ္	1300						1300										1300					1300				
Temperature range (°C)	1200						$H \vdash$										-	-	-			+				
Ĕ	1100																									
0	1000	850					\vdash		850					850				-	-							
Ĕ	900	000					\vdash		650					650												
ā	800						H							-												
8	700						H						600													
e	600	-	500.0		500.0			500.0																		
-	500	-								400.0	400	400.0			400	400.0										
	400																									260
	300																							120	165	
	200			100.0		100.0																	90			
	100																			100						
	400			0.0		0.0												0	0		0	0	0	0	0	0
	-100 -200							-20.0	-100	-20.0				-100												
	-200	-200	-199.9		-199.9		-200				-200	-199.9	-200		-200	-199.9	-200									
Set v	alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1 JPt: L: Fe-CuNi, DIN 43710-1985 Pt10

U: Cu-CuNi, DIN 43710-1985 W: W5Re/W26Re, ASTM E988-1990 JPt100: JIS C 1604-1989, JIS C 1606-1989 Pt100: JIS C 1604-1997, IEC 60751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

Analog input

Input type	Cur	rent		Voltage	
Input specification	4 to 20 mA	0 to 20 mA	1 to 5 V	0 to 5 V	0 to 10 V
Setting range	-1999 to 99	ne following 199, -199.9 to 19.99 or -1.99	999.9,	caling:	
Set value	25	26	27	28	29

Alarm Types

Each alarm can be independently set to one of the following 19 alarm types. The default is 2: Upper limit. (see note.)


Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.

Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.


		Alarm outpu	ut operation	
Set value	Alarm type	When alarm value X is positive		Description of function
0	Alarm function OFF	Outpu	t OFF	No alarm
1	Upper- and lower-limit *1	ON → L H ← PV	* 2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.
2 (default)	Upper-limit	ON X PV	ON SP PV	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.
3	Lower-limit	ON X PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.
4	Upper- and lower-limit range *1	ON OFF SP PV	* 3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.
5	Upper- and lower-limit with standby sequence *1	*5 OFF SP PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6
6	Upper-limit with standby sequence	ON OFF SP PV	ON X P	A standby sequence is added to the upper-limit alarm (2). *6
7	Lower-limit with standby sequence	ON X PV	ON X PV	A standby sequence is added to the lower-limit alarm (3). *6
8	Absolute-value upper- limit	ON OFF OPPV	ON OFF O PV	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.
9	Absolute-value lower-limit	ON OFF O PV	ON OFF OPV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.
10	Absolute-value upper- limit with standby sequence	ON OFF OPPV	ON OFF OPPV	A standby sequence is added to the absolute-value upper-limit alarm (8). *6
11	Absolute-value lower-limit with standby sequence	ON OFF O PV	ON OFF PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6
12	LBA (alarm 1 type only)	-		*7
13	PV change rate alarm	-	-	*8
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON OFF 0 SP	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).
15	SP absolute-value lower-limit alarm	ON OFF 0 SP	ON OFF SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).
16	MV absolute-value upper-limit alarm *9	Standard Control ON OFF OFF ON OFF	Standard Control ON OFF ON MV Heating/Cooling Control (Heating MV) Always ON	This alarm type turns ON the alarm when the manipulated variable (MV) is higher than the alarm value (X).
17	MV absolute-value lower-limit alarm *9	Standard Control ON OFF OFF OFF ON	Standard Control ON OFF ON MV Heating/Cooling Control (Cooling MV) Always ON	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).
18	RSP absolute-value upper-limit alarm *10	ON OFF 0 RSP	ON OFF 0 RSP	This alarm type turns ON the alarm when the remote SP (RSP) is higher than the alarm value (X).
19	RSP absolute-value lower-limit alarm *10	ON OFF 0 RSP	ON OFF 0 RSP	This alarm type turns ON the alarm when the remote SP (RSP) is lower than the alarm value (X).

E5EC/E5EC-B/E5AC

 - *1. With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- ***4.** Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above *2
 - Case 1 and 2
 <u>Always OFF</u> when the upper-limit and lower-limit hysteresis overlaps.
 - Case 3: Always OFF
- *5. Set value: 5, Upper- and lower-limit with standby sequence <u>Always OFF</u> when the upper-limit and lower-limit hysteresis overlaps.
- ***6.** Refer to the *E5*□*C Digital Temperature Controllers User's Manual* (Cat. No. H174) for information on the operation of the standby sequence.
- *7. Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the loop burnout alarm (LBA). This setting cannot be used with a position-proportional model.
- *8. Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the PV change rate alarm.
- ***9.** When heating/cooling control is performed, the MV absolute upper limit alarm functions only for the heating operation and the MV absolute lower limit alarm functions only for the cooling operation.
- ***10.**This value is displayed only when a remote SP input is used. It functions in both Local SP Mode and Remote SP Mode.

Characteristics

23°C)	ent temperature of	Thermocouple: $(\pm 0.3\%$ of indication value or $\pm 1^{\circ}$ C, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2\%$ of indication value or $\pm 0.8^{\circ}$ C, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\%$ FS ± 1 digit max. CT input: $\pm 5\%$ FS ± 1 digit max. Potentiometer input: $\pm 5\%$ FS ± 1 digit max.
	put accuracy	±0.3% FS max.
Remote SP	Input Type	$\pm 0.2\%$ FS ± 1 digit max.
	temperature *2	Thermocouple input (R, S, B, W, PL II): (±1% of indication value or ±10°C, whichever is greater) ±1 digit max. Other thermocouple input: (±1% of indication value or ±4°C, whichever is greater) ±1 digit max. *3
Influence of		Platinum resistance thermometer: (±1% of indication value or ±2°C, whichever is greater) ±1 digit max. Analog input: ±1%FS ±1 digit max.
(at EN 61326	6-1)	CT input: ±5% FS ±1 digit max. Remote SP input: ±1% FS ±1 digit max.
Input sampl	ing period	50ms
Hysteresis		Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)
Proportiona	l band (P)	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1 to 999.9% FS (in units of 0.1% FS)
Integral time	e (I)	Standard, heating/cooling, or Position-proportional (Close): 0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) Position-proportional (Floating): 1 to 9999 s (in units of 1 s), 0.1 to 999.9 s (in units of 0.1 s) ★4
Derivative ti	me (D)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *4
•	I band (P) for cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1 to 999.9% FS (in units of 0.1% FS)
	e (I) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *4
	me (D) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *4
Control peri		0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)
Manual rese		0.0 to 100.0% (in units of 0.1%)
Alarm settin	<u> </u>	-1999 to 9999 (decimal point position depends on input type)
resistance	signal source	Thermocouple: 0.1° C/ Ω max. (100 Ω max.) Platinum resistance thermometer: 0.1° C/ Ω max. (10 Ω max.)
Insulation re		20 M Ω min. (at 500 VDC)
Dielectric st	rength	3,000 VAC, 50/60 Hz for 1 min between terminals of different charge
Vibration	Malfunction	10 to 55 Hz, 20 m/s ² for 10 min each in X, Y, and Z directions
	Resistance	10 to 55 Hz, 20 m/s ² for 2 hrs each in X, Y, and Z directions
Shock	Malfunction	100 m/s², 3 times each in X, Y, and Z directions
	Resistance	300 m/s², 3 times each in X, Y, and Z directions
Weight		E5EC/E5EC-B: Controller: Approx. 210 g, Adapter: Approx. 4 g \times 2 E5AC: Controller: Approx. 250 g, Adapter: Approx. 4 g \times 2
Degree of pi		Front panel: IP66, Rear case: IP20, Terminals: IP00
Memory pro	tection	Non-volatile memory (number of writes: 1,000,000 times)
Setup Tool		E5EC/E5AC: CX-Thermo version 4.5 or higher E5EC-B: CX-Thermo version 4.65 or higher
Setup Tool port		E5EC/E5EC-B/E5AC top panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect to a USB port on the computer.*5 E5EC/E5EC-B/E5AC front panel: An E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Conversion
<u> </u>	Approved standards	Cable are used together to connect to a USB port on the computer.*5 cULus: UL 61010-1/CSA C22.2 No.61010-1, Korean wireless regulations (Radio law: KC Mark) (Some
Standards	Conformed standards	models only.) *6, Lloyd's standards *7 EN 61010-1 (IEC 61010-1)
	Comornieu standarus	EM 61326-1 *8
ЕМС		Radiated Interference Electromagnetic Field Strength: EN 55011 Group 1, class A Noise Terminal Voltage: EN 55011 Group 1, class A EMS: EN 61326-1 *8 ESD Immunity: EN 61000-4-2 Electromagnetic Field Immunity: EN 61000-4-3 Burst Noise Immunity: EN 61000-4-4 Conducted Disturbance Immunity: EN 61000-4-6 Surge Immunity: EN 61000-4-5
		Voltage Dip/Interrupting Immunity: EN 61000-4-11

^{*1.} The indication accuracy of K thermocouples in the -200 to 1,300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is ±2°C ±1 digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800°C is ±3°C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W thermocouples is (±0.3% of PV or ±3°C, whichever is greater) ±1 digit max. The indication accuracy of PL II thermocouples is (±0.3% of PV or ±2°C, whichever is greater) ±1 digit max.

^{*2.} Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage

^{*3.} K thermocouple at -100°C max.: ±10°C max.

^{*4.} The unit is determined by the setting of the Integral/Derivative Time Unit parameter.

^{*5.} External communications (RS-485) and USB-serial conversion cable communications can be used at the same time.

^{*6.} Refer to your OMRON website for the most recent information on applicable models.

^{*7.} Refer to information on maritime standards in Shipping Standards on page 110 for compliance with Lloyd's Standards.

^{*8.} Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

USB-Serial Conversion Cable

Applicable OS	Windows XP/Vista/7/8/10 *1
Applicable 03	7111d01107ti / 110td/1/0/10 11
Applicable software	E5EC/E5AC:CX-Thermo version 4.5 or higher
	E5EC-B:CX-Thermo version 4.65 or higher
Applicable models	E5_C-T Series, E5_C Series, and E5CB Series
USB interface standard	Conforms to USB Specification 2.0.
DTE speed	38,400 bps
Connector	Computer: USB (type A plug)
specifications	Digital Temperature Controller:
specifications	Special serial connector
Power supply	Bus power (Supplied from USB host controller.) *2
Power supply voltage	5 VDC
Current consumption	450 mA max.
	4.7±0.2 VDC
Output voltage	(Supplied from USB-Serial Conversion Cable
	to the Digital Temperature Controller.)
	250 mA max.
Output current	(Supplied from USB-Serial Conversion Cable
	to the Digital Temperature Controller.)
Ambient operating	0 to 55°C (with no condensation or icing)
temperature	
Ambient operating	10% to 80%
humidity	10 /0 10 00 /0
Storage temperature	-20 to 60°C (with no condensation or icing)
Storage humidity	10% to 80%
Altitude	2,000 m max.
Weight	Approx. 120 g

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

*1. CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

	•
Transmission line connection method	RS-485: Multidrop
Communications	RS-485 (two-wire, half duplex)
Synchronization method	Start-stop synchronization
Protocol	CompoWay/F, or Modbus
Baud rate *	9600, 19200, 38400, or 57600 bps
Transmission code	ASCII
Data bit length *	7 or 8 bits
Stop bit length *	1 or 2 bits
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 Modbus
Flow control	None
Interface	RS-485
Retry function	None
Communications buffer	217 bytes
Communications response wait time	0 to 99 ms Default: 20 ms

^{*}The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

You can use the memory in the PLC to read and write E5□C parameters, start and stop operation, etc. The E5□C automatically performs communications with PLCs. No communications programming is required. Number of connected Digital Temperature Controllers: 32 max. (Up to 16 for the FX Series) Applicable PLCs OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs
MELSEC Q Series, L Series, or FX Series (compatible the FX2 or FX3 (excluding the FX1S)) KEYENCE PLCs

Component Communications *1	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *2	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation. KEYENCE is a registered trademark of Keyence Corporation.

- *1. A Temperature Controller with version 1.1 or higher is required. A Temperature Controller with version 2.1 or higher is required for the FX Series or the KV Series.
- *2. Both the programless communications and the component communications support the copying.

Current Transformer (Order Separately) Ratings


Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s ²
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

Heater Burnout Alarms and SSR Failure Alarms

Maximum heater current50 A ACInput current indication accuracy±5% FS ±1 digit max.Heater burnout alarm setting range *10.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3SSR failure alarm setting range *20.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4	CT input (for heater current detection)	Models with detection for singlephase heaters: One input Models with detection for singlephase or three-phase heaters: Two inputs
Heater burnout alarm setting range *1 SSR failure alarm 15% FS ±1 digit max. 0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3 0.1 to 49.9 A (in units of 0.1 A)		50 A AC
setting range *1 Minimum detection ON time: 100 ms *3 SSR failure alarm 0.1 to 49.9 A (in units of 0.1 A)		±5% FS ±1 digit max.
SSR failure alarm 0.1 to 49.9 A (in units of 0.1 A)		
	setting range *1	Minimum detection ON time: 100 ms *3
setting range *2 Minimum detection OFF time: 100 ms *4	SSR failure alarm	0.1 to 49.9 A (in units of 0.1 A)
	setting range *2	Minimum detection OFF time: 100 ms *4


- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- ***3.** The value is 30 ms for a control period of 0.1 s or 0.2 s.
- ***4.** The value is 35 ms for a control period of 0.1 s or 0.2 s.

Electrical Life Expectancy Curve for Relays (Reference Values)

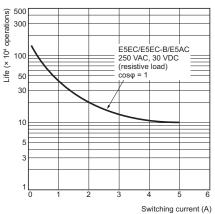

E5EC/E5EC-B/E5AC


External Connections

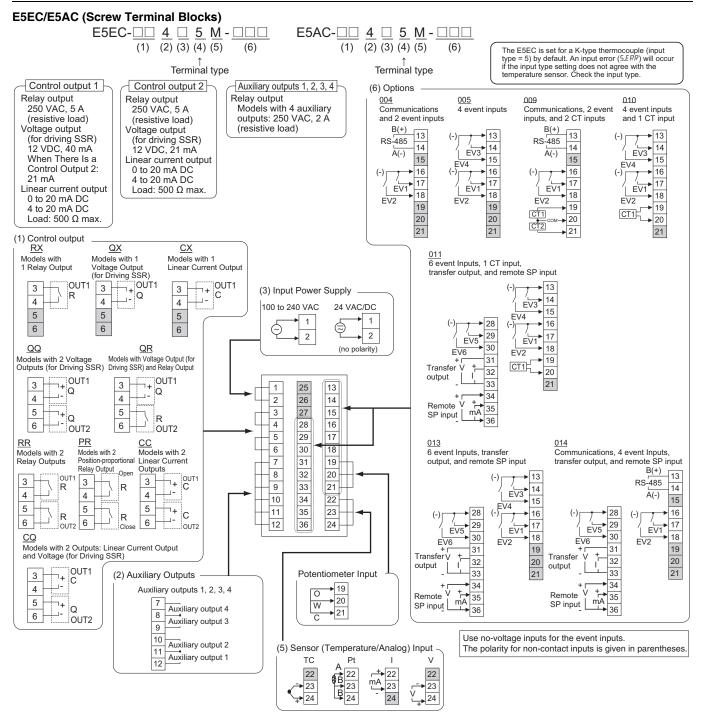

Note: 1. The application of the terminals depends on the model.

- 2. Do not wire the terminals that are shown with a gray background.
- When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
- 4. Connect M3 crimped terminals.

E5EC-B (Push-In Plus Terminal Blocks)

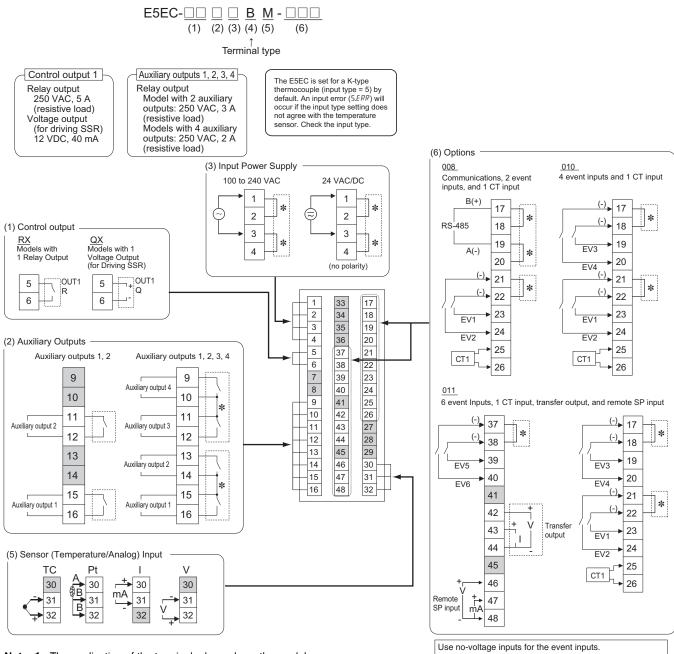

Note: 1. The application of the terminals depends on the model.

 
The polarity for non-contact inputs is given in parentheses.

2. Do not wire the terminals that are shown with a gray background.

- 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
- 4. Refer to Wiring Precautions for E5 C-B (Controllers with Push-In Plus Terminal Blocks) on page 116 for wire specifications and wiring methods.
- 5. Common terminals are indicated with asterisks (*). You can use the input power supply and communications common terminals for crossover wiring. Do not exceed the maximum number of Temperature Controllers given below if you use crossover wiring for the input power supply.

100 to 240 VAC Controllers: 16 max.

24 VAC/VDC Controllers: 8 max.



E5EC/E5EC-B/E5AC


Isolation/Insulation Block Diagrams


Models with 2 Auxiliary Outputs Sensor input, CT inputs, and remote SP input Communications and event inputs Voltage output (for driving SSR) and transfer output Relay output Auxiliary output 1 Auxiliary output 2 : Reinforced insulation : Functional isolation

Note: Auxiliary outputs 1 to 2 and 3 to 4 are not insulated.


: Functional isolation

Nomenclature

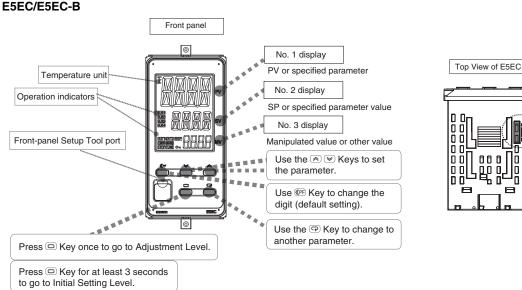

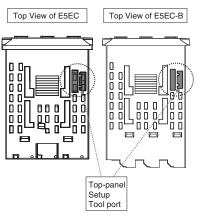

E5AC

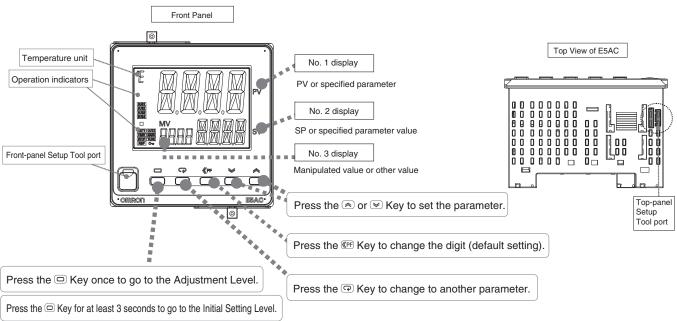


Dimensions (Unit: mm)

Controllers


E5EC



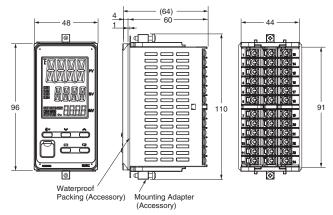


E5EC-B



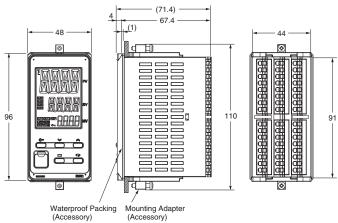


Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to connect to the port on the top panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Communications Conversion Cable are required to connect to the port on the front panel. (You cannot leave either port connected constantly during operation.)

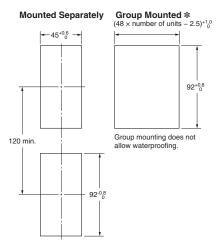

- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

* E5EC:


Selections for Control Outputs 1 and 2: QQ, QR, RR, CC, PR, or CQ If you also specify 011, 013, or 014 for the option selection and use group mounting, the ambient temperature must be 45°C or less. Maintain the following spacing when more than one Digital Controller is installed at an ambient temperature of 55°C.

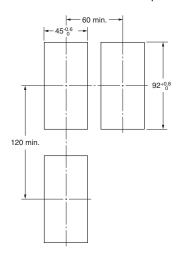


E5EC/E5EC-B/E5AC

E5AC



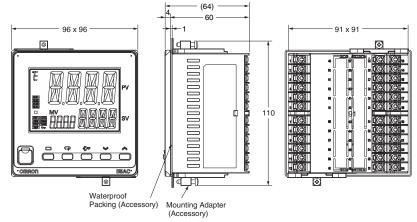

Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the
Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to
connect to the port on the top panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58CIFQ2-E Communications Conversion Cable are required to connect to the port on the front panel.
(You cannot leave either port connected constantly during operation.)

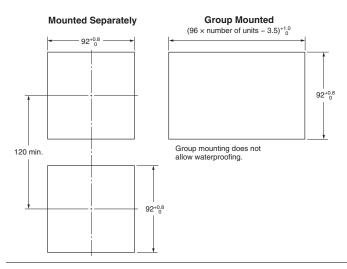


- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

Accessories (Order Separately)

USB-Serial Conversion Cable



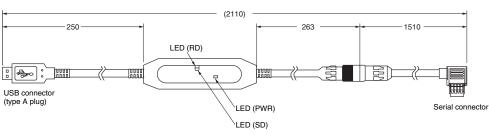


Conversion Cable E58-CIFQ2-E

Conversion Cable




 Connecting to the E58-CIFQ2 USB-Serial Conversion Cable




Note: Always use this product together with the E58-CIFQ2.


Terminal Covers E53-COV24 (Three Covers provided.)

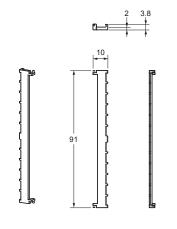

 Waterproof Packing Y92S-P9 (for DIN 48 × 96)



Y92S-P10 (for DIN 96 × 96)

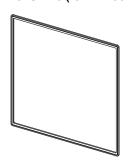

The Waterproof Packing is provided with the Temperature Controller.

Order the Waterproof Packing separately if it becomes lost or damaged.

The degree of protection when the Waterproof Packing is used is IP66.

 
Also, keep the Port Cover on the front-panel Setup Tool port of the E5EC/E5EC-B/E5AC securely closed.

To maintain an IP66 degree of protection, the Waterproof Packing and the Port Cover for the front-panel Setup Tool port must be periodically replaced because they may deteriorate, shrink, or harden depending on the operating environment.

The replacement period will vary with the operating environment.


Check the required period in the actual application. Use 3 years or sooner as a guideline.

Setup Tool Port Cover for top panel Y92S-P7




Order this Port Cover separately if the Port Cover on the front-panel Setup Tool port is lost or damaged. The Waterproof Packing must be periodically replaced because it may deteriorate, shrink, or harden depending on the operating environment.

 
Mounting Adapter Y92F-51 (Two Adapters provided.)




One pair is provided with the Controller.
Order this Adapter separately if it becomes lost or damaged.

 Watertight Cover Y92A-49N (48 × 96)

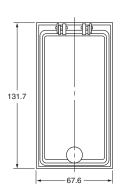



Watertight Cover Y92A-96N (96 × 96)

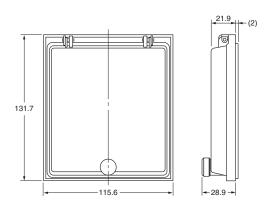


(Reference Values)

E54-CT1

Current Transformers

E54-CT1




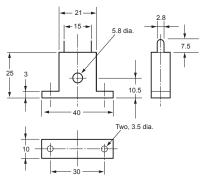

Winding resistance:

Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400±2 18 \pm 2 Ω

Thru-current (Io) vs. Output Voltage (Eo)

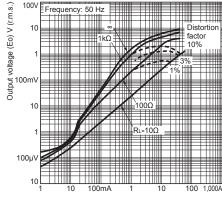


Thru-current (Io) A (r.m.s.)

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Digital Temperature Controller is 50 A.)


Number of windings: 400±2 Winding resistance: 8±0.8 Ω

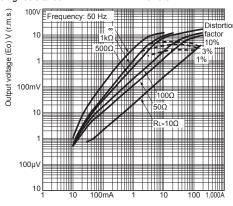

Thru-current (Io) A (r.m.s.)


E54-CT3



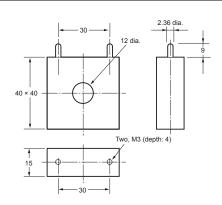


E54-CT3 Accessories

 
Armature



• Plug

 

Connection Example

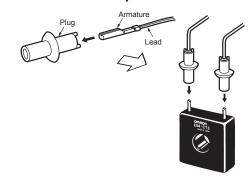

MEMO

Digital Temperature Controller

E5DC (22.5 mm Wide, and DIN Track-mounting Type)

The E5DC Mounts to DIN Track and Is Ideal for Connections to HMIs and PLCs. It provides the Same Easy Operation and Advanced Performance as the Rest of the E5□C Series.

- A slim body at 85×22.5 mm (D \times W) that fits into narrow control panels and mounts to DIN Track.
- Removable terminal block for easy replacement to simplify maintenance.
- High-speed sampling at 50 ms for applications with high-speed temperature increases.
- Easy connections to a PLC with programless communications.
- Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).
- Models are available with up to 2 auxiliary outputs and 1 event input to complete basic functions.
- A white PV display (height: 8.5 mm) is easy to read when setting up, checking alarms, and making settings in a control panel.




22.5 mm Wide, and **DIN Track-mounting Type** E₅DC

Refer to your OMRON website for the most recent information on applicable safety standards.



Refer to Safety Precautions on page 108.

Main I/O Functions

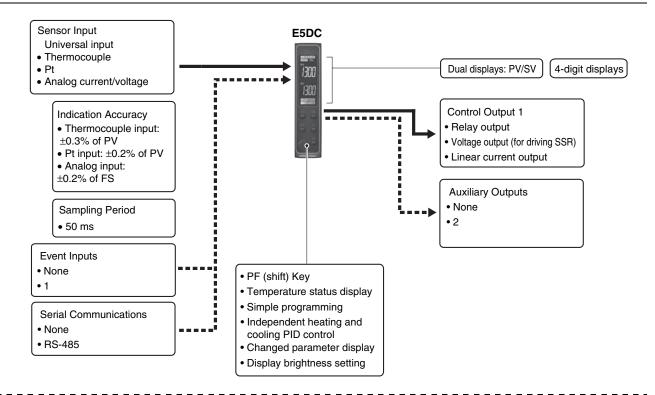

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting

E5□C Digital Temperature Controllers User's Manual (Cat. No. H174)

E5 C Digital Temperature Controllers Communications Manual (Cat. No. H175)

Model Number Legend and Standard Models

Model Number Legend

Models with Screw Terminal Blocks

E5DC-□□ □ □ M-□□□ (**Example: E5DC-RX0ASM-015**)

1 2 3 4 5 6

	1	2	3	4	5	6				
Model	Control output 1	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options	Meaning			
E5DC							22.5 mm wide and	mounts to DIN Track	(
							Control output 1	Control ou	tput 2	
	RX						Relay output	None		
	QX						Voltage output (for driving SSR)	None		
* 1	CX						Linear current output *1	None	!	
		0					No	one		
		2					2 (one o	2 (one common)		
			Α				100 to 240 VAC			
			D				24 V	AC/DC		
				S			Screw terminal blocks (Main U	Init and Terminal Un	it together)	
				U			Main Unit only (Main Unit only (no Terminal Unit)		
					М		Univers	Universal input		
							HB alarm and HS alarm	Communications	Event input	
					*2	000				
					* 3	002	1	RS-485		
					* 4	015		RS-485		
					* 5	016			1	
					*3	017	1		1	

- *1. The control output can be used as a simple transfer output for the Digital Temperature Controllers manufactured in July 2014 or later.
- *2. Option 000 can be selected only if two auxiliary outputs are selected.
- *3. Options 002 and 017 can be selected only if the control output is a relay output or voltage output and two auxiliary outputs are selected.
- *4. Option 015 cannot be selected if the control output is a relay output or voltage output and two auxiliary outputs are selected.
- *5. Options 016 can be selected only if the control output is a linear current output and two auxiliary outputs are selected.

List of Models

No of auxilians			Options	Model	Model	
Control output	No. of auxiliary outputs	HB alarm and HS	No. of event inputs	Communications	Power supply voltage	Power supply voltage
	Outputs	alarm	No. or event inputs	Communications	100 to 240 VAC	24 VAC/DC
				RS-485	E5DC-RX0ASM-015	E5DC-RX0DSM-015
				HS-465	E5DC-RX0AUM-015	E5DC-RX0DUM-015
					E5DC-RX2ASM-000	E5DC-RX2DSM-000
Relay output					E5DC-RX2AUM-000	E5DC-RX2DUM-000
nelay output	2			RS-485	E5DC-RX2ASM-002	E5DC-RX2DSM-002
	2	Detection for single-		NO-400	E5DC-RX2AUM-002	E5DC-RX2DUM-002
		phase heater	4		E5DC-RX2ASM-017	E5DC-RX2DSM-017
			ı		E5DC-RX2AUM-017	E5DC-RX2DUM-017
		Detection for single-phase heater		RS-485	E5DC-QX0ASM-015	E5DC-QX0DSM-015
				HS-485	E5DC-QX0AUM-015	E5DC-QX0DUM-015
Voltage output	2				E5DC-QX2ASM-000	E5DC-QX2DSM-000
					E5DC-QX2AUM-000	E5DC-QX2DUM-000
(for driving SSR)				RS-485	E5DC-QX2ASM-002	E5DC-QX2DSM-002
					E5DC-QX2AUM-002	E5DC-QX2DUM-002
			1		E5DC-QX2ASM-017	E5DC-QX2DSM-017
					E5DC-QX2AUM-017	E5DC-QX2DUM-017
				RS-485	E5DC-CX0ASM-015	E5DC-CX0DSM-015
					E5DC-CX0AUM-015	E5DC-CX0DUM-015
Linear current output	2				E5DC-CX2ASM-000	E5DC-CX2DSM-000
					E5DC-CX2AUM-000	E5DC-CX2DUM-000
				RS-485	E5DC-CX2ASM-015	E5DC-CX2DSM-015
					E5DC-CX2AUM-015	E5DC-CX2DUM-015
			1		E5DC-CX2ASM-016	E5DC-CX2DSM-016
					E5DC-CX2AUM-016	E5DC-CX2DUM-016

Heating and Cooling Control Using Heating and Cooling Control

1 Control Output Assignment

An auxiliary output is used as the cooling control output.

2 Control

If PID control is used, you can set PID control separately for heating and cooling.

This allows you to handle control systems with different heating and cooling response characteristics.

Optional Products (Order Separately)

Terminal Unit

Model
Wodel
E5DC-SCT1S
E3D0-00110

USB-Serial Conversion Cable

Model
E58-CIFQ2

Communications Conversion Cable

Model	
E58-CIFQ2-E	

Note: Always use this product together with the E58-CIFQ2.

This Cable is used to connect to the front-panel Setup Tool port.

Current Transformers (CTs)

Hole diameter	Model
5.8 mm	E54-CT1
12.0 mm	E54-CT3

Mounting Adapter

Model	
Y92F-53 (2pcs)	

Short Bars

Model	
Y92S-P11 (4 pcs)	

CX-Thermo Support Software

Model	
EST2-2C-MV4	

Note: CX-Thermo version 4.6 or higher is required for the E5DC. For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

End Plate

Model
PFP-M

Spacer

Model	
illoud.	
PFP-S	

DIN Tracks

Model
PFP-100N
PFP-50N

Unit Labels

	Model				
	wodei				
	Y92S-L2				
End Cover					
	Model				
	Y92F-54				

Specifications

Ratings

Power sup	oply voltage	A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC			
Operating	voltage range	85 to 110% of rated supply voltage			
Power cor	sumption	4.9 VA max. at 100 to 240 VAC, and 2.8 VA max. at 24 VDC or 1.5 W max. at 24 VDC			
Sensor input		Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V			
Input impe	edance	Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.) ON/OFF control or 2-PID control (with auto-tuning)			
Control m	ethod				
Control	Relay output	SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)			
output	Voltage output (for driving SSR)	Output voltage 12 VDC ±20% (PNP), max. Load current: 21 mA, with short-circuit protection circuit			
	Linear current output	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: Approx. 10,000			
Auxiliary	Number of outputs	2 (depends on model)			
output	Output specifications	SPST-NO relay outputs: 250 VAC, 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)			
	Number of inputs	1 (depends on model)			
Event	External contact input specifications	Contact input ON: 1 k Ω max., OFF: 100 k Ω min.			
input		Non-contact input ON: Residual voltage 1.5 V max.; OFF: Leakage current 0.1 mA max.			
	opeomodiione	Current flow: approx. 7 mA per contact			
Setting me	ethod	Digital setting using front panel keys			
Indication	method	11-segment digital displays and individual indicators Character height: PV: 8.5 mm, SV: 8.0 mm			
Multi SP		Up to eight set points (SP0 to SP7) can be saved and selected using the event inputs, key operations, or serial communications. *1			
Bank swit	ching	None			
Other fund	etions	Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, self tuning, robust tuning, PV input shift, run/stop, protection functions, extraction of square root, MV change rate limit, logic operations, temperature status display, simple programming, moving average of input value, display brightness setting, simple transfer output, *2 and work bit message *2			
Ambient o	perating temperature	-10 to 55°C (with no condensation or icing), For 3-year warranty: -10 to 50°C with standard mounting (with no condensation or icing)			
Ambient operating humidity		25 to 85%			
Storage te	mperature	−25 to 65°C (with no condensation or icing)			
Altitude		2,000 m max.			
Recomme	nded fuse	T2A, 250 VAC, time-lag, low-breaking capacity			
Installatio	n environment	Overvoltage category II, Pollution Degree 2 (EN/IEC/UL 61010-1)			
*1 Only two	set points are selectable	for event inputs			

^{*1.} Only two set points are selectable for event inputs.
*2. Usage is possible for the Digital Temperature Controllers manufactured in July 2014 or later.

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

Sen: typ		P		m res	istano eter	е							Т	hermo	ocoup	ole							Infra	red te sen	mpera sor	ature
Sen: specifi			Pt100)	JPt	100	ı	K	,	J		Т	E	L	Ţ	IJ	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C
	2300																				2300					
	1800																			1800						
	1700																	1700	1700							
	1600																									
	1500																	-	-	-	+					
	1400						1300										1300		-			1300				
6	1300						1300										1300					1300				
٤	1200						+																			
ge	1100						+																			
Temperature range (°C)	1000	850							850					850												
<u>e</u>	900																									
돭	800																									
6.5	700												600													
ᇤ	600 500		500.0		500.0			500.0																		
<u>a</u>	400									400.0	400	400.0			400	400.0										
	300																									260
	200																							120	165	
	100			100.0		100.0																	90			
																				100						
	-100			0.0		0.0												0	0		0	0	0	0	0	0
	-200	000	400.0		400.0		000	-20.0	-100	-20.0	000	100.0	000	-100	000	100.0	000									
		-200	-199.9	_	-199.9		-200	L .	_	_	-200	-199.9	-200	4.0	-200	-199.9	-200	4.0		4.0	40					٠,
Set v	alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1JPt100: JIS C 1604-1989, JIS C 1606-1989

L: Fe-CuNi, DIN 43710-1985Pt100: JIS C 1604-1997, IEC 60751

U: Cu-CuNi, DIN 43710-1985PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

W: W5Re/W26Re, ASTM E988-1990

Analog input

Input type	Cur	rent	Voltage				
Input specification	4 to 20 mA	0 to 20 mA	1 to 5 V	0 to 5 V	0 to 10 V		
Setting range	Usable in the following ranges by scaling: -1999 to 9999, -199.9 to 999.9, -19.99 to 99.99 or -1.999 to 9.999						
Set value	25	26	27	28	29		

Alarm Types


Each alarm can be independently set to one of the following 17 alarm types. The default is 2: Upper limit. (See note.)

Auxiliary outputs are allocated to alarms. ON delays and OFF delays (0 to 999 s) can also be specified.


Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.

Cost		Alarm outp	ut operation	
Set value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function
0	Alarm function OFF	Outpu	t OFF	No alarm
1	Upper- and lower-limit *1	ON SP PV	*2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.
2 (default)	Upper-limit	ON OFF SP PV	ON X - PV	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.
3	Lower-limit	ON X PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.
4	Upper- and lower-limit range *1	ON → L H ← PV	*3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.
5	Upper- and lower-limit with standby sequence *1	ON L H PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6
6	Upper-limit with standby sequence	ON X PV	ON X ← PV	A standby sequence is added to the upper-limit alarm (2). *6
7	Lower-limit with standby sequence	ON X P	ON X PV	A standby sequence is added to the lower-limit alarm (3). *6
8	Absolute-value upper- limit	ON ←X→ PV	ON ←X→ PV	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.
9	Absolute-value lower-limit	ON ←X→ OFF 0 PV	ON OFF O PV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.
10	Absolute-value upper- limit with standby sequence	ON OFF 0	ON OFF OPPV	A standby sequence is added to the absolute-value upper-limit alarm (8). * 6
11	Absolute-value lower-limit with standby sequence	ON OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6
12	LBA (alarm 1 type only)		-	*7
13	PV change rate alarm		-	*8
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON OFF O SP	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).
15	SP absolute-value lower-limit alarm	ON ←X→ OFF 0 SP	ON OFF SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).
16	MV absolute-value upper-limit alarm *9	Standard Control ON OFF OFF OFF OFF OFF OFF OFF	Standard Control ON	This alarm type turns ON the alarm when the manipulated variable (MV) is higher than the alarm value (X).
		Control (Heating MV) ON OFF MV	Control (Heating MV) Always ON	
-		Standard Control	Standard Control	
	MV chooleto valva	ON OFF O MV	ON OFF O MV	This clarm turns ON the clarm when the manifest of
17	MV absolute-value lower-limit alarm *9	Heating/Cooling Control (Cooling MV)	Heating/Cooling Control (Cooling MV)	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).
		ON OFF 0	Always ON	

 - *1. With set values 1, 4, and 5, the upper- and lower-limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- *4. Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above at *2
 - In cases 1 and 2 above, the alarm is <u>always OFF</u> if the upperand lower-limit hysteresis overlaps.
 - In case 3, the alarm is always OFF.
- ***5.** Set value: 5, Upper- and lower-limit alarm with standby sequence The alarm is always OFF if upper- and lower-limit hysteresis overlaps.
- ***6.** Refer to the *E5*□*C* Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the operation of the standby sequence.
- ***7.** Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the LBA.
- ***8.** Refer to the *E5*□*C Digital Temperature Controllers User's Manual* (Cat. No. H174) for information on the PV change rate alarm.
- *9. When heating/cooling control is performed, the MV absolutevalue upper-limit alarm functions only for the heating operation and the MV absolute-value lower-limit alarm functions only for the cooling operation.

Characteristics

accuracy nted individually, nperature of 23°C)	Thermocouple: $(\pm 0.3 \% \text{ of indication value or } \pm 1^{\circ}\text{C}$, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2 \% \text{ of indication value or } \pm 0.8^{\circ}\text{C}$, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\% \text{ FS } \pm 1$ digit max. $\pm 5\% \text{ FS } \pm 1$ digit max.				
sfer output accuracy	±0.3% FS max.*2				
f temperature *3	Thermocouple input (R, S, B, W, PL II): (±1% of indication value or ±10°C, whichever is greater) ±1 digit max.				
f voltage *3	Other thermocouple input: (±1% of indication value or ±4°C, whichever is greater) ±1 digit max. *4 Platinum resistance thermometer: (±1% of indication value or ±2°C, whichever is greater) ±1 digit max.				
f EMS.	Analog input: ±1% FS ±1 digit max.				
	CT input: ±5% FS ±1 digit max. R, S, B, W, or PLII thermocouple: (±1% of PV or ±10°C, whichever is greater) ±1 digit max.				
influence (E5DC only)	Other thermocouple: (±1% of PV or ±4°C, whichever is greater) ±1 digit max. *4				
ling period	50 ms				
	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)				
al band (P)	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)				
e (I)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) * 5				
ime (D)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *5				
al band (P) for cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)				
e (I) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) * 5				
ime (D) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) * 5				
iod	0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)				
et value	0.0% to 100.0% (in units of 0.1%)				
ng range	-1,999 to 9,999 (decimal point position depends on input type)				
f signal source	Thermocouple: $0.1^{\circ}\text{C}/\Omega$ max. (100 Ω max.), Platinum resistance thermometer: $0.1^{\circ}\text{C}/\Omega$ max. (10 Ω max.)				
esistance	20 MΩ min. (at 500 VDC)				
trength	3,000 VAC, 50/60 Hz for 1 min between terminals of different charge				
Malfunction	10 to 55 Hz, 20 m/s² for 10 min each in X, Y and Z directions				
Resistance	10 to 55 Hz, 20 m/s ² for 2 hr each in X, Y, and Z directions				
Malfunction	100 m/s², 3 times each in X, Y, and Z directions				
Resistance	300 m/s², 3 times each in X, Y, and Z directions				
	Main unit: Approx. 80 g, Terminal unit: Approx. 40 g				
	Main unit: IP20, Terminal unit: IP00				
otection	Non-volatile memory (number of writes: 1,000,000 times)				
	CX-Thermo version 4.6 or higher				
port	E5DC bottom panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect a USB port on the computer. *6 E5DC front panel: An E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Conversion Cable are used together to connect a USB port on the computer.*6				
Approved standards	cULus: UL 61010-1/CSA C22.2 No.61010-1, Korean wireless regulations (Radio law: KC Mark) (Some models only.) *7, Lloyd's standards *8				
Conformed standards	EN 61010-1 (IEC 61010-1)				
	EMI: Radiated Interference Electromagnetic Field Strength: Noise Terminal Voltage: EN55011 Group 1, class A EN61326-1 *9 ESD Immunity: EN61000-4-2 Electromagnetic Field Immunity: EN61000-4-3 Burst Noise Immunity: Conducted Disturbance Immunity: EN61000-4-6 Surge Immunity: EN61000-4-5 Voltage Dip/Interrupting Immunity: EN61000-4-11				
	nted individually, imperature of 23°C) inster output accuracy of temperature *3 if voltage *3 if EMS. 6-1) influence (E5DC only) influence (E5DC only) ling period in the imperature (D) in the imperature (D) for cooling in the imperature (D) for				

^{*1.} The indication accuracy of K thermocouples in the -200 to 1,300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperature is $\pm 2^{\circ}$ C ± 1 digit max. The indication accuracy of B thermocouples at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800 $^{\circ}$ C is $\pm 3^{\circ}$ C max.

The indication accuracy of R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W the indication accuracy of PV or $\pm 3^{\circ}$ C, whichever is greater) ± 1 digit max. The indication accuracy of PLII thermocouples is ($\pm 0.3\%$ of PV or $\pm 2^{\circ}$ C, whichever is greater) ± 1 digit max. ***2.** However, the precision between 0 and 4 mA for a 0 to 20 mA output is $\pm 1\%$ FS max.

- *3. Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage
- *4. K thermocouple at -100°C max.: ±10°C max.
- ***5.** The unit is determined by the setting of the Integral/Derivative Time Unit parameter.
- *6. External serial communications (RS-485) and USB-Serial Conversion Cable communications can be used at the same time.
- *7. Refer to your OMRON website for the most recent information on applicable models.
- *8. Refer to information on maritime standards in Shipping Standards on page 110 for compliance with Lloyd's Standards.
- *9. Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

USB-Serial Conversion Cable

Applicable OS	Windows XP/Vista/7/8/10 *1
Applicable software	CX-Thermo version 4.6 or higher
Applicable models	E5□C-T Series, E5□C Series, and E5CB Series
USB interface standard	Conforms to USB Specification 2.0
DTE speed	38,400 bps
Connector specifications	Computer: USB (Type A plug) Digital Temperature Controller: Special serial connector
Power supply	Bus power (Supplied from the USB host controller) *2
Power supply voltage	5 VDC
Current consumption	450 mA max.
Output voltage	4.7±0.2 VDC (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)
Output current	250 mA max. (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)
Ambient operating temperature	0 to 55°C (with no condensation or icing)
Ambient operating humidity	10% to 80%
Storage temperature	-20 to 60°C (with no condensation or icing)
Storage humidity	10% to 80%
Altitude	2,000 m max.
Weight	Approx. 120 g

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

***1.** CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

Transmission line connection method	RS-485: Multidrop			
Communications	RS-485 (two-wire, half duplex)			
Synchronization method	Start-stop synchronization			
Protocol	CompoWay/F, or Modbus			
Baud rate *	9,600, 19,200, 38,400, or 57,600 bps			
Transmission code	ASCII			
Data bit length *	7 or 8 bits			
Stop bit length *	1 or 2 bits			
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 with Modbus			
Flow control	None			
Interface	RS-485			
Retry function	None			
Communications buffer	217 bytes			
Communications response wait time	0 to 99 ms Default: 20 ms			
* The band rate data bit length stop bit length and vertical parity can				

^{*}The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

You can use the memory in the PLC to read and writ E5□C parameters, start and stop operation, etc.
Programless communications *1 Programless communications *1 Programless communications programming is required. Number of connected Digital Temperature Controllers: 32 max. (Up to 16 for the FX Series) Applicable PLCs: OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs MELSEC Q Series, L Series, or FX Series (compatible with the FX2 or FX3 (excluding the FX1S) KEYENCE PLCs KEYENCE KV Series

Component Communi- cations *1	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *2	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation. KEYENCE is a registered trademark of Keyence Corporation.

- *1. A Temperature Controller with version 2.1 or higher is required for the FX Series or the KV Series.
- *2. Both the programless communications and the component communications support the copying.

Current Transformer (Order Separately) Ratings


Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s ²
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

Heater Burnout Alarms and SSR Failure Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input
Maximum heater current	50 A AC
Input current indication accuracy	±5% FS ±1 digit max.
Heater burnout alarm setting range *1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4


- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- ***3.** The value is 30 ms for a control period of 0.1 s or 0.2 s.
- ***4.** The value is 35 ms for a control period of 0.1 s or 0.2 s.

Electrical Life Expectancy Curve for Control Output Relay (Reference Values)

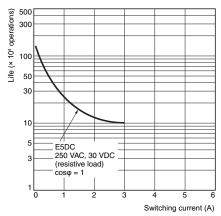


External Connections

E₅DC

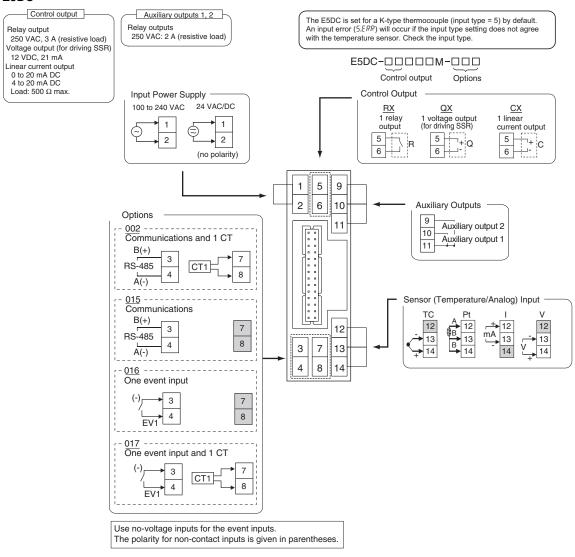

- Note: 1. The application of the terminals depends on the model.
 - 2. Do not wire the terminals that are shown with a gray background.
 - 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30m, compliance with EMC standards will not be possible.
 - 4. Connect M3 crimped terminals.

Isolation/Insulation Block Diagrams

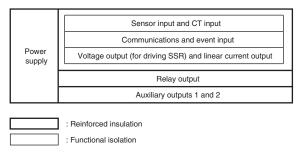


Note: Auxiliary outputs 1 to 2 are not insulated.

E₅DC

E5DC

Nomenclature

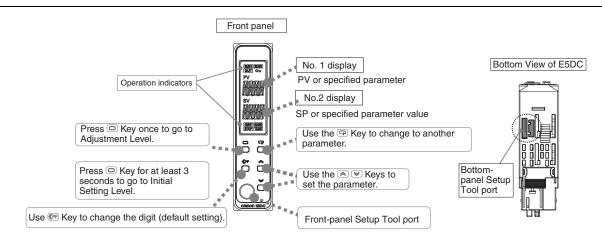


Dimensions (Unit: mm)

Controllers


E5DC



The above figure shows the Terminal Unit attached to the Main Unit.

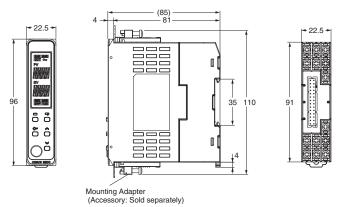


Setup Tool ports are provided as standard feature. Use these ports to connect a computer to
the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required
to connect to the port on the bottom panel. The E58-CIFQ2 USB-Serial Conversion Cable and
E58-CIFQ2-E Communications Conversion Cable are required to connect to the port on the
front panel. (You cannot leave either port connected constantly during operation.)

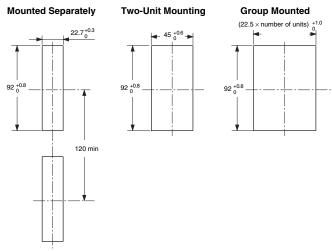


- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- When two or more Digital Temperature Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

Accessories (Order Separately)

Terminal Unit E5DC-SCT1S

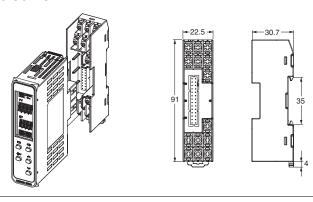


USB-Serial Conversion Cable

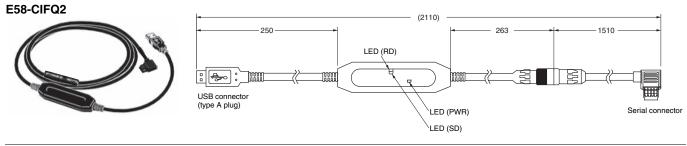


Conversion Cable

E58-CIFQ2-E

 Conversion Cable



 Connecting to the E58-CIFQ2 USB-Serial Conversion Cable




Note: Always use this product together with the E58-CIFQ2.

Current Transformers


E54-CT1



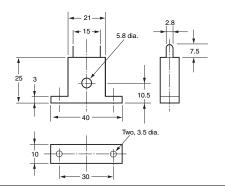

E54-CT3




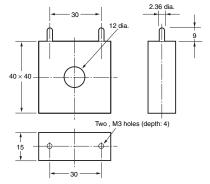

E54-CT3 Accessories

Armature


Connection Example

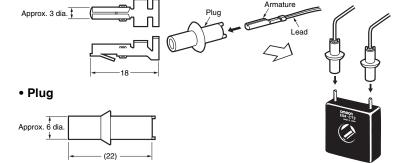

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT1

Maximum continuous heater current: 50 A (50/60 Hz)

Number of windings: 400 ± 2 Winding resistance: $18\pm2~\Omega$

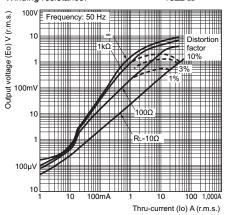


Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz)

(Maximum continuous heater current for an OMRON Digital Tem-


perature Controller is 50 A.)


Number of windings: 400 \pm 2 Winding resistance: 8 \pm 0.8 Ω

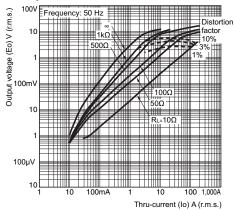

Mounting Adapters Y92F-53 (Two included.)

  This accessory is not included with the product. Order it separately to mount the product to a panel.






Short Bars

Y92S-P11 (Four included.)


Use this product to connect between terminals (for power supplies, communications, etc.) when you use multiple E5DC Controllers.



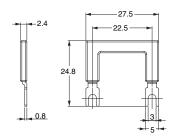


End Plate PFP-M



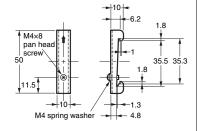

DIN Tracks PFP-100N PFP-50N




 

* Dimensions in parentheses are for the PFP-50N.

Spacer PFP-S



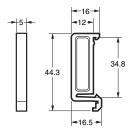


Unit Labels Y92S-L2



The Unit Labels for the Digital Panel Meter are used. Use either the °C or °F label from the sheet.

End Cover Y92F-54 (Two included.)



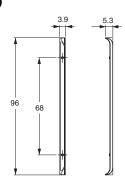

Use the End Cover when you mount the E5DC to a panel to hide the gap between the Controller and the panel.

Programmable Temperature Controller (Digital Controller)

E5CC-T (48 × 48 mm)

Programmable Controllers Join the E5□C Series! Program up to 256 segments can handle a wide variety of applications.

- Set up to 8 Programs (Patterns) with 32 Segments (Steps) Each
- The white PV display with a height of 15.2 mm improves visibility.
- High-speed sampling at 50 ms.
- Models are available with up to 3 auxiliary outputs, up to 4 event inputs, and a transfer output to cover a wide range of applications.
- Short body with depth of only 60 mm.
- Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).
- Easy connections to a PLC with programless communications. Use component communications to link Temperature Controllers to each other




48 × 48 mm E5CC-T

Refer to your OMRON website for the most recent information on applicable safety standards.

 \triangle

Refer to Safety Precautions on page 108.

Main I/O Functions

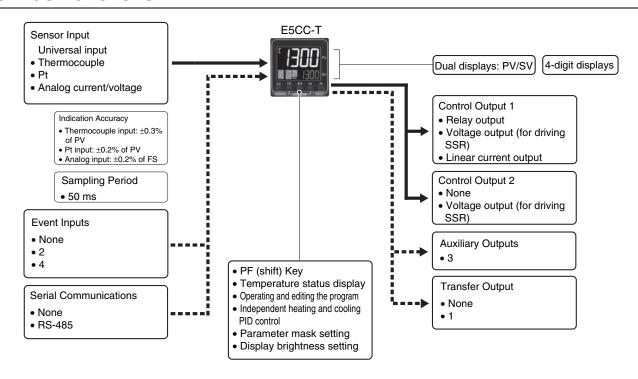

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting to use the product.

E5□C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185)

E5□C-T Digital Temperature Controllers Programmable Type Communications Manual (Cat. No. H186)

Model Number Legend and Standard Models

Model Number Legend

Models with Screw Terminal Blocks

E5CC-T □□3 □5 M -□□□ (**Example: E5CC-TRX3A5M-000**)

1 2345 6

	Α	В	С	D	E	F				
Model	Control outputs 1 and 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options	Meaning			
E5CC-T								48 × 48 mm Pro	ogrammable '	Туре
							Contro	l output 1	Contr	ol output 2
	RX						Rela	y output		None
	QX							ge output ving SSR)	!	None
*1	CX						Linear curr	ent output *2		None
	QQ							ge output ving SSR)		ge output iving SSR)
	cq						Linear curr	ent output *2		ge output iving SSR)
		3						3 (one	common)	
			Α					100 to	240 VAC	
			D					24 V	AC/DC	
				5				Screw terminal	blocks (with c	over)
					M			Unive	rsal input	
							HB alarm and HS alarm	Communica- tions	Event inputs	Transfer output
						000				
					*1	001	1		2	
					*1	003	2 (for 3- phase heaters)	RS-485		
					* 3	004		RS-485	2	
						005			4	
						006			2	Provided.

- *1. Options with HB and HS alarms (001 and 003) cannot be selected if a linear current output is selected for the control output.
- ***2.** The linear current output cannot be used as a transfer output.
- ***3.** Option 004 can be selected only when "CX" is selected for the control outputs.

Heating and Cooling Control Using Heating and Cooling Control

① Control Output Assignment

If there is no control output 2, an auxiliary output is used as the cooling control output.

If there is a control output 2, the two control outputs are used for heating and cooling.

(It does not matter which output is used for heating and which output is used for cooling.)

② Control

If PID control is used, you can set PID control separately for heating and cooling.

This allows you to handle control systems with different heating and cooling response characteristics.

Optional Products (Order Separately)

USB-Serial Conversion Cable

Model	
iviodei	
E58-CIFQ2	
Loo on QL	

Terminal Covers

Model
E53-COV17
E53-COV23 (3pcs)

Note: The Terminal Covers E53-COV23 are provided with the Digital Temperature Controller. The E53-COV10 cannot be used. Refer to page 79 for the mounted dimensions.

Waterproof Packing

Model
Y92S-P8

Note: The Waterproof Packing is provided with the Digital Temperature Controller.

Current Transformers (CTs)

Hole diameter	Model
5.8 mm	E54-CT1
12.0 mm	E54-CT3

Adapter

Model
Y92F-45

Note: Use this Adapter when the panel has already been prepared for an E5B□ Controller.

Waterproof Cover

Model	
Y92A-48N	

Mounting Adapter

Model	
Y92F-49	

Note: This Mounting Adapter is provided with the Digital Temperature Controller.

DIN Track Mounting Adapter

Model	
Y92F-52	

Front Covers

Туре	Model
Hard Front Cover	Y92A-48H
Soft Front Cover	Y92A-48D

CX-Thermo Support Software

• •	
Model	
EST2-2C-MV4	

Note: CX-Thermo version 4.61 or higher is required for the E5CC-T. For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

Specifications

Ratings

_							
Power supply voltage		A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC					
Operating voltage range		85 to 110% of rated supply voltage					
Power consumption		7.5 VA max. at 100 to 240 VAC, and 4.1 VA max. at 24 VAC or 2.3 W max. at 24 VDC					
Sensor input		Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V					
Input impeda	ance	Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.)					
Control meti	hod	2-PID control (with auto-tuning) or ON/OFF control					
	Relay output	SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)					
Control output	Voltage output (for driving SSR)	Output voltage: 12 VDC ±20% (PNP), max. load current: 21 mA, with short-circuit protection circuit					
	Linear current output	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000					
Auxiliary	Number of outputs	3					
output	Output specifications	SPST-NO relay outputs, 250 VAC, Models with 3 outputs: 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)					
	Number of inputs	2 or 4 (depends on model)					
Event input	External contact input specifications	Contact input: ON: 1 k Ω max., OFF: 100 k Ω min.					
Event input		Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max.					
		Current flow: Approx. 7 mA per contact					
Transfer	Number of outputs	1 (only on models with a transfer output)					
output	Output specifications	Current output: 4 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000 Linear voltage output: 1 to 5 VDC, load: 1 k Ω min., resolution: Approx. 10,000					
Setting meth	nod	Digital setting using front panel keys					
Indication m	ethod	11-segment digital display and individual indicators Character height: PV: 15.2 mm, SV: 7.1 mm					
Bank switch	ing	None					
Other functions		Manual output, heating/cooling control, loop burnout alarm, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, robust tuning, PV input shift, protection functions, extraction of square root, MV change rate limit, logic operations, temperature status display, moving average of input value, and display brightness setting					
Ambient operating temperature		-10 to 55°C (with no condensation or icing), For 3-year warranty: -10 to 50°C with standard mounting (with no condensation or icing)					
Ambient operating humidity		25 to 85%					
Storage temperature		-25 to 65°C (with no condensation or icing)					
Altitude		2,000 m max.					
Recommended fuse		T2A, 250 VAC, time-lag, low-breaking capacity					
Installation environment		Overvoltage category II, Pollution Degree 2 (EN/IEC/UL 61010-1)					

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

Sensor type Sensor specification		Platinum resistance thermometer					Thermocouple												Infrared temperature sensor							
		Pt100		JPt100		К		J			Т		L	ı	U	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C	
	2300																				2300					
	1800																			1800						
	1700																	1700	1700							
	1600																									
<u> </u>	1500																									
	1400																									
ည	1300						1300										1300					1300				
Temperature range (°C)	1200																									
ä	1100																									
9	1000																									
Ę	900	850							850					850												
ā	800																									
鱼	700	_																								
E .	600	_											600													
F	500	_	500.0		500.0			500.0																		
	400	_								400.0	400	400.0			400	400.0										
	300	_					4 -												_							260
	200	_																						120	165	
	100	_		100.0		100.0																	90			\perp
	0	-11-																		100						
	-100	-11-		0.0		0.0			400				-	400				0	0		0	0	0	0	0	0
	-200	000	400.0		400.0		000	-20.0	-100	-20.0	000	400.0	000	-100	000	400.0	000									1
_		-200	-199.9	_	199.9		-200		_	_	-200	-199.9	-200	4.0	-200	-199.9	-200	4.0		4.0	40		0.4			-
Set v	/alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985 W: W5Re/W26Re, ASTM E988-1990 JPt100: JIS C 1604-1989, JIS C 1606-1989 Pt100: JIS C 1604-1997, IEC 60751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

Analog input

Input type	Cur	rent	Voltage						
Input specification	4 to 20 mA	0 to 20 mA	0 to 5 V	0 to 10 V					
Setting range	Usable in the following ranges by scaling: -1999 to 9999, -199.9 to 999.9, -19.99 to 99.99 or -1.999 to 9.999								
Set value	25	26	27	28	29				

Alarm Types

Each alarm can be independently set to one of the following 17 alarm types. The default is 2: Upper limit. (see note.)


Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.

Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.


Set		Alarm outpo				
value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function		
0	Alarm function OFF	Outpu	t OFF	No alarm		
1	Upper- and lower-limit *1	ON SP PV	*2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.		
2 (default)	Upper-limit	ON OFF SP PV	ON OFF SP PV	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.		
3	Lower-limit	ON X PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.		
4	Upper- and lower-limit range *1	ON → L H ← PV	*3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.		
5	Upper- and lower-limit with standby sequence *1	ON L H PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6		
6	Upper-limit with standby sequence	ON X PV	ON X - PV	A standby sequence is added to the upper-limit alarm (2). *6		
7	Lower-limit with standby sequence	ON X PV	ON OFF SP PV	A standby sequence is added to the lower-limit alarm (3). *6		
8	Absolute-value upper- limit	ON OFF 0	ON OFF O PV	The alarm will turn ON if the process value is larger than talarm value (X) regardless of the set point.		
9	Absolute-value lower-limit	ON OFF 0 PV	ON OFF PV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.		
10	Absolute-value upper- limit with standby sequence	ON OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value upper-limit alarm (8). * 6		
11	Absolute-value lower-limit with standby sequence	ON ←X→ OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6		
12	LBA (alarm 1 type only)		-	*7		
13	PV change rate alarm		-	*8		
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON OFF 0 SP	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).		
15	SP absolute-value lower-limit alarm	ON OFF 0 SP	ON OFF SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).		
16	MV absolute-value upper-limit alarm *9	Standard Control ON OFF OFF ON OFF	Standard Control ON OFF ON MV Heating/Cooling Control (Heating MV) Always ON	This alarm type turns ON the alarm when the manipulated variable (MV) is higher than the alarm value (X).		
17	MV absolute-value lower-limit alarm *9	Standard Control ON OFF OFF OFF ON OFF ON OFF ON OFF ON ON OFF ON	Standard Control ON OFF OFF OFF OMV Heating/Cooling Control (Cooling MV) Always ON	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).		

E5CC-T

 - *1. With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- *4. Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above *2
 - Case 1 and 2
 - Always OFF when the upper-limit and lower-limit hysteresis overlaps.
 - Case 3: Always OFF
- ***5.** Set value: 5, Upper- and lower-limit with standby sequence Always OFF when the upper-limit and lower-limit hysteresis overlaps.
- *6. Refer to the E5_C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the operation of the standby sequence.
- *7. Refer to the E5□C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the loop burnout alarm (LBA).
- *8. Refer to the E5_C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the PV change rate alarm.
- *9. When heating/cooling control is performed, the MV absolute upper limit alarm functions only for the heating operation and the MV absolute lower limit alarm functions only for the cooling operation.

Characteristics

Indication a (at the ambi	occuracy ient temperature of 23°C)	Thermocouple: $(\pm 0.3\% \text{ of indication value or } \pm 1^{\circ}\text{C}$ Platinum resistance thermometer: $(\pm 0.2\% \text{ of indication val}$ Analog input: $\pm 0.2\% \text{ FS} \pm 1 \text{ digit max}$. CT input: $\pm 5\% \text{ FS} \pm 1 \text{ digit max}$.	r, whichever is greater) ±1 digit max. * 1 lue or ±0.8°C, whichever is greater) ±1 digit max.				
Transfer ou	tput accuracy	±0.3% FS max.					
Influence of	f temperature *2	Thermocouple input (R, S, B, W, PL II): $(\pm 1\%$ of indication value or $\pm 10^{\circ}$ C, whichever is greater) ± 1 digit max.					
Influence of	f voltage *2	Other thermocouple input: (±1% of indication value or ±4°C, whichever is greater) ±1 digit max. *3 Platinum resistance thermometer: (±1% of indication value or ±2°C, whichever is greater) ±1 digit max.					
Influence of		Analog input: ±1%FS ±1 digit max. CT input: ±5% FS ±1 digit max.					
Input sampl	<u> </u>	50 ms					
-	9 poou	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1°C or °F)					
Hysteresis		Analog input: 0.01% to 99.99% FS (in units of 0.01% F	S)				
Proportiona	al band (P)	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1 Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)	°C or °F)				
Integral time	. ,	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	,				
Derivative ti	ime (D)	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	,				
Proportiona	al band (P) for cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1 Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)	,				
Integral time	e (I) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	.1 s) * 4				
	ime (D) for cooling	0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	.1 s) * 4				
Control peri	iod	0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)					
Manual rese	et value	0.0 to 100.0% (in units of 0.1%)					
Alarm setting	ng range	-1999 to 9999 (decimal point position depends on input type)					
Influence of	f signal source resistance	Thermocouple: 0.1° C/ Ω max. (100 Ω max.) Platinum resistance thermometer: 0.1° C/ Ω max. (10 Ω max.)					
Insulation re	esistance	20 MΩ min. (at 500 VDC)	,				
Dielectric st	trength	3,000 VAC, 50/60 Hz for 1 min between terminals of di	fferent charge				
Vilouatia	Malfunction	10 to 55 Hz, 20 m/s ² for 10 min each in X, Y, and Z dire	ections				
Vibration	Resistance	10 to 55 Hz, 20 m/s2 for 2 hrs each in X, Y, and Z direct	tions				
Shock	Malfunction	100 m/s ² , 3 times each in X, Y, and Z directions					
SHOCK	Resistance	300 m/s², 3 times each in X, Y, and Z directions					
Weight		Controller: Approx. 120 g, Adapter: Approx. 10 g					
Degree of p	rotection	Front panel: IP66, Rear case: IP20, Terminals: IP00					
Memory pro	otection	Non-volatile memory (number of writes: 1,000,000 time	es)				
Setup Tool		CX-Thermo version 4.61 or higher					
Setup Tool	port	E5CC-T top panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect to a USB port on the computer. *5					
Standards	Approved standards	cULus: UL 61010-1/CSA C22.2 No.61010-1, Korean wi models only.) *6	reless regulations (Radio law: KC Mark) (Some				
	Conformed standards	EN 61010-1 (IEC 61010-1)					
		EMI:	EN 61326-1 *7				
		Radiated Interference Electromagnetic Field Strength:	EN 55011 Group 1, class A				
		Noise Terminal Voltage: EMS:	EN 55011 Group 1, class A EN 61326-1 *7				
EMC		ESD Immunity:	EN 61000-4-2				
		Electromagnetic Field Immunity:	EN 61000-4-3				
		Burst Noise Immunity:	EN 61000-4-4				
		Conducted Disturbance Immunity:	EN 61000-4-6				
		Surge Immunity:	EN 61000-4-5				
		Voltage Dip/Interrupting Immunity:	EN 61000-4-11				

^{*1.} The indication accuracy of K thermocouples in the -200 to 1300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is ±2°C ±1 digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800°C is ±3°C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W thermocouples is (±0.3% of PV or ±3°C, whichever is greater) ±1 digit max. The indication accuracy of PL II thermocouples is (±0.3% of PV or ±2°C, whichever is greater) ±1 digit max.

- *2. Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage
- *3. K thermocouple at -100°C max.: ±10°C max.
- ***4.** The unit is determined by the setting of the Integral/Derivative Time Unit parameter.
- *5. External communications (RS-485) and USB-serial conversion cable communications can be used at the same time.
- *6. Refer to your OMRON website for the most recent information on applicable models.
- *7. Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

E5CC-T

Program Control						
Number of programs (patterns)		8				
Number of segments (steps)		32				
Commont cotting months of		Time setting (Segment set with set point and time.)				
Segment setting method		Slope setting (Segment set with segment type, set point, slope, and time.)				
Comment times		0 h 0 min to 99 h 59 min				
Segment times		0 min 0 s to 99 min 59 s				
Alarm setting		Set separately for each program.				
Reset operation		Select either stopping control or fixed SP operation.				
Startup operation		Select continuing, resetting, manual operation, or run mode.				
PID sets	Number of sets	8				
PID Sets	Setting method	Set separately for each program (automatic PID group selection also supported).				
Alarm SP function		Select from ramp SP and target SP.				
Dragram status central	Segment operation	Advance, segment jump, hold, and wait				
Program status control	Program operation	Program repetitions and program links				
Wait operation	Wait method	Waiting at segment ends				
wait operation	Wait width setting	Same wait width setting for all programs				
	Number of outputs	2				
Time signals	Number of ON/OFF Operations	1 each per output				
	Setting method	Set separately for each program.				
Program status output		Program end output (pulse width can be set), run output, stage output				
	PV start	Select from segment 1 set point, slope-priority PV start				
Program startup operation	Standby	0 h 0 min to 99 h 59 min				
	Statiuby	0 day 0 h to 99 day 23h				
Operation end operation		Select from resetting, continuing control at final set point, and fixed SP control.				
Program SP shift		Same program SP shift for all programs				

USB-Serial Conversion Cable

Applicable OS	Windows XP/Vista/7/8/10 *1			
Applicable software	CX-Thermo version 4.61 or higher			
Applicable models	E5 C-T Series, E5 C Series, and E5CB Series			
USB interface standard	Conforms to USB Specification 2.0.			
DTE speed	38400 bps			
Connector specifications	Computer: USB (type A plug) Digital Temperature Controller: Special serial connector			
Power supply	Bus power (Supplied from USB host controller.) *2			
Power supply voltage	5 VDC			
Current consumption	450 mA max.			
Output voltage	4.7±0.2 VDC (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)			
Output current	250 mA max. (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)			
Ambient operating temperature	0 to 55°C (with no condensation or icing)			
Ambient operating humidity	10% to 80%			
Storage temperature	-20 to 60°C (with no condensation or icing)			
Storage humidity	10% to 80%			
Altitude	2,000 m max.			
Weight	Approx. 120 g			

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

***1.** CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

	no opocinicationic				
Transmission line connection method	RS-485: Multidrop				
Communications	RS-485 (two-wire, half duplex)				
Synchronization method	Start-stop synchronization				
Protocol	CompoWay/F, or Modbus				
Baud rate *	9600, 19200, 38400, or 57600 bps				
Transmission code	ASCII				
Data bit length *	7 or 8 bits				
Stop bit length *	1 or 2 bits				
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 Modbus				
Flow control	None				
Interface	RS-485				
Retry function	None				
Communications buffer	217 bytes				
Communications response wait time	0 to 99 ms Default: 20 ms				

^{*} The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

Programless communications *	You can use the memory in the PLC to read and write E5 C-T parameters, start and reset operation, etc. The E5 C-T automatically performs communications with PLCs. No communications programming is required. Number of connected Digital Temperature Controllers: 32 max. Applicable PLCs OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs MELSEC Q Series, L Series
------------------------------	--

Component Communications	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation.

* Both the programless communications and the component communications support the copying.

Current Transformer (Order Separately) Ratings


•	-
Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s ²
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

Heater Burnout Alarms and SSR Failure Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input Models with detection for singlephase or three-phase heaters: Two inputs			
Maximum heater current	50 A AC			
Input current indication accuracy	±5% FS ±1 digit max.			
Heater burnout alarm setting range * 1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3			
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4			

- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- ***3.** The value is 30 ms for a control period of 0.1 s or 0.2 s.
- *4. The value is 35 ms for a control period of 0.1 s or 0.2 s.


Electrical Life Expectancy Curve for Relays (Reference Values)

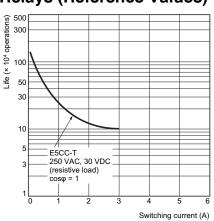

E5CC-T

External Connections

E5CC-T

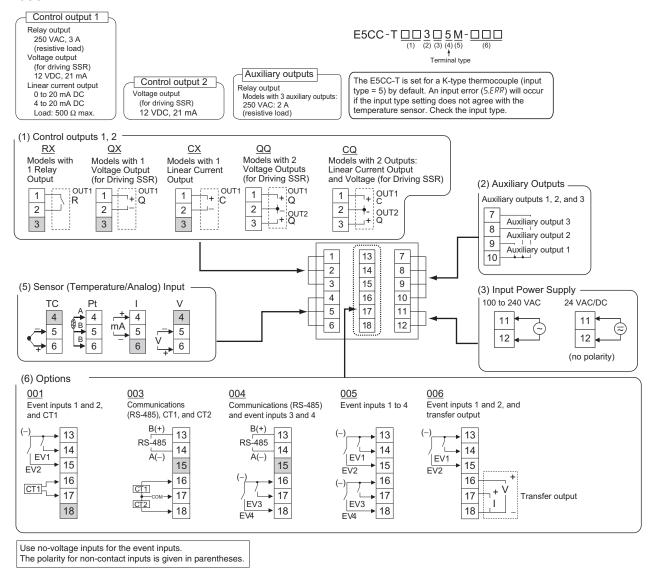


Note: 1. The application of the terminals depends on the model.

- 2. Do not wire the terminals that are shown with a gray background.
- 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
- 4. Connect M3 crimped terminals.

Isolation/Insulation Block Diagrams


Models with 3 Auxiliary Outputs

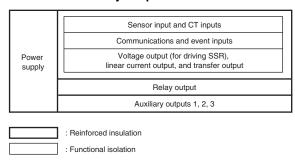

Note: Auxiliary outputs 1 to 3 are not insulated.

Nomenclature



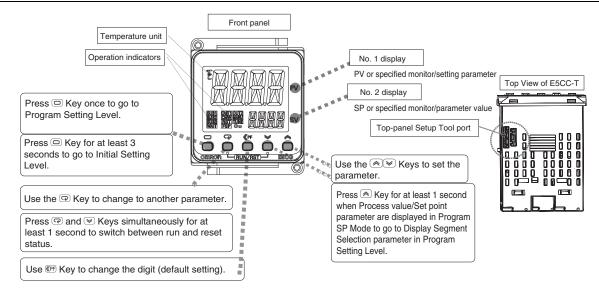



Dimensions (Unit: mm)


Controllers

   
E5CC-T



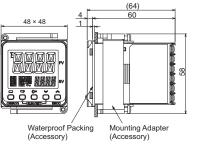







The Setup Tool port is on the top of the Temperature Controller. It is used to connect the Temperature Controller to the computer to use the Setup Tool.

The E58-CIFQ2 USB-Serial Conversion Cable is required to make the connection.


Refer to the instructions that are provided with the USB-Serial Conversion Cable for the connection procedure.

Note: Do not leave the USB-Serial Conversion Cable connected when you use the Temperature Controller.

- Recommended panel thickness is 1 to 5 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.
- Use a control panel thickness of 1 to 3 mm if the Y92A-48N and a USB-Serial Conversion Cable are used together.


Accessories (Order Separately)

USB-Serial Conversion Cable

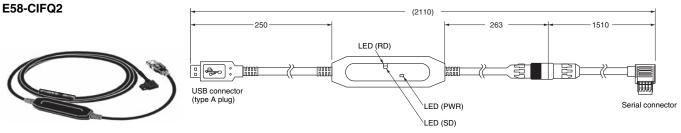


Terminal Covers E53-COV17



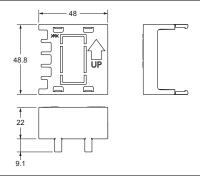

Terminal Covers E53-COV23 (Three Covers provided.)

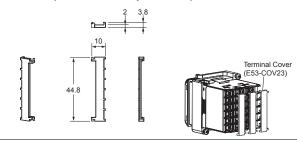

Waterproof Packing Y92S-P8 (for DIN 48 × 48)



The Waterproof Packing is provided with the Temperature Controller.

Order the Waterproof Packing separately if it becomes lost or damaged.

The Waterproof Packing can be used to achieve an IP66 degree of protection.


(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site.

Consider three years as a rough standard.)

Current Transformers


E54-CT1



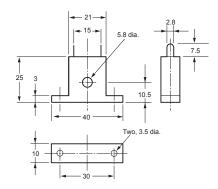


E54-CT3



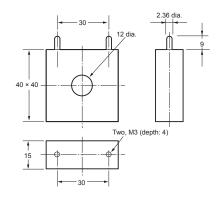


E54-CT3 Accessories

 
Armature



• Plug

 


Connection Example

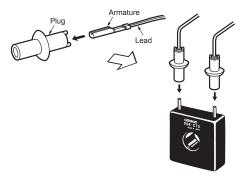

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

E54-CT1

Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400±2 Winding resistance: 18±2 Ω

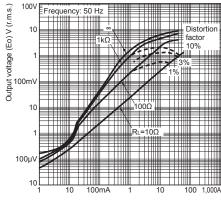


Thru-current (Io) A (r.m.s.)

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Digital Temperature Controller is 50 A.)

Number of windings: 400±2 Winding resistance: 0.8Ω

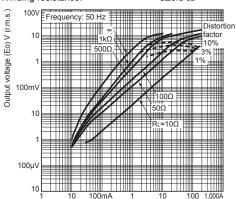


Thru-current (Io) A (r.m.s.)


Adapter

Y92F-45


- Note: 1. Use this Adapter when the Front Panel has already been prepared for the E5B□.
 - 2. Only black is available.
 - 3. You cannot use the E58-CIFQ2 USB-Serial Conversion Cable if you use the Y92F-45 Adapter. To use the USB-Serial Conversion Cable to make the settings, do so before you mount the Temperature Controller in the panel. You cannot use this Adapter together with the Y92F-49 Adapter that is provided with the E5CC-T Temperature
 - Controller.



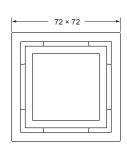


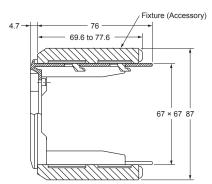

Mounted to E5CC-T

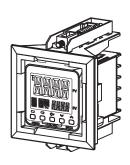




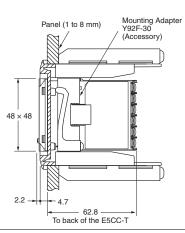



DIN Track Mounting Adapter

Y92F-52

   Note: This Adapter cannot be used together with the Terminal Cover. Remove the Terminal Cover to use the Adapter.








This Adapter is used to mount the E5CC-T to a DIN Track. If you use the Adapter, there is no need for a plate to mount in the panel or to drill mounting holes in the panel.


Mounted to E5CC-T





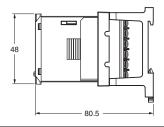

Watertight Cover Y92A-48N

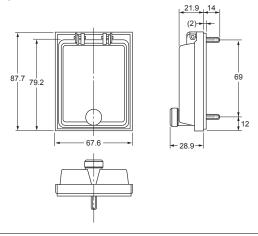

Mounting Adapter Y92F-49



 
The Mounting Adapter is provided with the Temperature Controller.

Order this Adapter separately if it becomes lost or damaged.

Protective Cover


Y92A-48D

Note: This Protective Cover cannot be used if the Waterproof Packing is installed.



This Protective Cover is soft type. It is able to operate the controller with using this cover.

 Protective Cover Y92A-48H



This Protective Cover is hard type. Please use it for the mis-operation prevention etc.

Programmable Temperature Controller (Digital Controller)

E5EC-T/E5AC-T

 $(48 \times 96 \text{ mm/}96 \times 96 \text{ mm})$

Programmable Controllers Join the E5□C Series! Program up to 256 segments can handle a wide variety of applications.

- Set up to 8 Programs (Patterns) with 32 Segments (Steps) Each
- A white LCD PV display with a height of approx. 18 mm for the E5EC-T and 25 mm for the E5AC-T improves visibility.
- Tool ports are provided both on the top panel and the front panel. Set up the Controller without wiring the power supply by connecting to the computer with a Communications Conversion Cable (sold separately). Setup is easy with the CX-Thermo (sold separately).
- High-speed sampling at 50 ms.
- Models are available with up to 4 auxiliary outputs, up to 6 event inputs, and a transfer output to cover a wide range of applications.
- Short body with depth of only 60 mm.
- Easy connections to a PLC with programless communications. Use component communications to link Temperature Controllers to each other
- The new position-proportional control models allow you to control valves as well.




Refer to your OMRON website for the most recent information on applicable safety standards.



Refer to Safety Precautions on page 108.

Main I/O Functions

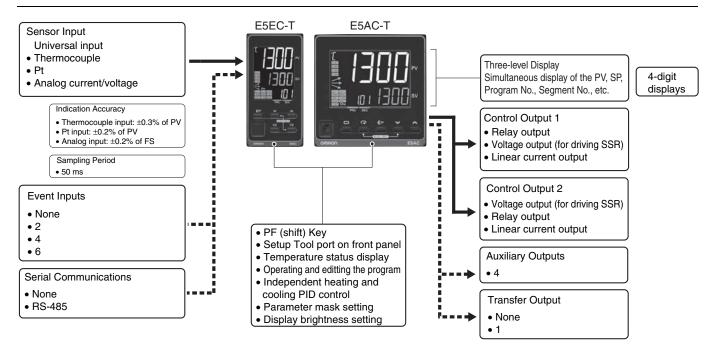

This datasheet is provided as a guideline for selecting products.

Be sure to refer to the following manuals for application precautions and other information required for operation before attempting to use the product.

E5□C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185)

E5□C-T Digital Temperature Controllers Programmable Type Communications Manual (Cat. No. H186)

Model Number Legend and Standard Models

Model Number Legend Models with Screw Terminal Blocks E5EC-T□□ 4 □ 5 M -□□□ (Example: E5EC-TRX4A5M-000) □ ② ③ ④ ⑤ ⑥ E5AC-T□□ 4 □ 5 M -□□□ (Example: E5AC-TRX4A5M-000)

1 2 3 4 5

		1)	2	3	4	(5)	6				
Model		outputs nd 2	No. of auxiliary outputs	Power supply voltage	Terminal type	Input type	Options	Meaning			
5EC-T								48 × 96 mm Programmable Type			Туре
E5AC-T								96 × 96 mm Programmable Type		Туре	
								Control	output 1	Cor	ntrol output 2
	RX							Relay	output		None
	QX								e output ng SSR)		None
*2	CX							Linear cur	rent output		None
	QQ								output ng SSR)		oltage output driving SSR)
	QR								e output ng SSR)	В	lelay output
	RR							Relay output		F	lelay output
*2	CC							Linear current output Lin		Linea	r current output
*2	CQ							Linear current output Voltage outp			
	PR									on-proportional elay output	
			4								
				Α							
				D						DC	
					5			Scr	ew terminal bloc	ks (with o	cover)
	Contr	ol outputs 1	l and 2			М		Universal input			
	,,	For CX or	For PR					HB alarm and		Event	
	QR, RR, or	CC	31111					HS alarm	Communications	inputs	Transfer output

000

004

005

800

010

019

021

022

1

1

1

RS-485

RS-485

RS-485

2

4

2

4

6

6

4

Provided.

Provided.

Provided.

Selectable

Selectable

Selectable

Selectable

Heating and Cooling Control

Using Heating and Cooling Control

1 Control Output Assignment

CQ Selectable

Selectable

Selectable

Selectable

Option

selection

conditions

If there is no control output 2, an auxiliary output is used as the cooling control output.

If there is a control output 2, the two control outputs are used for heating and cooling.

Selectable

Selectable

(It does not matter which output is used for heating and which output is used for cooling.)

(2) Contro

If PID control is used, you can set PID control separately for heating and cooling.

This allows you to handle control systems with different heating and cooling response characteristics.

Selectable Selectable *1. The options that can be selected depend on the type of control output.

^{*2.} The linear current output cannot be used as a transfer output.

Optional Products (Order Separately)

USB-Serial Conversion Cable

Model	
E58-CIFQ2	

Communications Conversion Cable

Model
E58-CIFQ2-E

Note: Always use this product together with the E58-CIFQ2.

This Cable is used to connect to the front-panel Setup Tool port.

Terminal Covers

Model
Wodei
E53-COV24 (3pcs)
200 00 12 7 (op00)

Note: The Terminal Covers E53-COV24 are provided with the Digital Temperature Controller.

Waterproof Packing

Applicable Controller	Model
E5EC-T	Y92S-P9
E5AC-T	Y92S-P10

Note: This Waterproof Packing is provided with the Digital Temperature Controller.

Waterproof Cover

Applicable Controller	Model
E5EC-T	Y92A-49N
E5AC-T	Y92A-96N

Front Port Cover

Model
Y92S-P7

Note: This Front Port Cover is provided with the Digital Temperature Controller.

Mounting Adapter

Model
Y92F-51 (2pcs)

Note: This Mounting Adapter is provided with the Digital Temperature Controller.

Current Transformers (CTs)

Hole diameter	Model
5.8 mm	E54-CT1
12.0 mm	E54-CT3

CX-Thermo Support Software

• •	
Model	
EST2-2C-MV4	

Note: CX-Thermo version 4.61 or higher is required for the E5EC-T/E5AC-T.

For the system requirements for the CX-Thermo, refer to information on the EST2-2C-MV4 on the OMRON website (www.ia.omron.com).

Specifications

Ratings

•										
Power supply voltage			A in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC							
Operating voltage range			85 to 110% of rated supply voltage							
E5EC-T			8.7 VA max. at 100 to 240 VAC, and 5.5 VA max. at 24 VAC or 3.2 W max. at 24 VDC							
Power consumption E5AC-T		E5AC-T	9.0 VA max. at 100 to 240 VAC, and 5.6 VA max. at 24 VAC or 3.4 W max. at 24 VDC							
Sensor input			Temperature input Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Infrared temperature sensor (ES1B): 10 to 70°C, 60 to 120°C, 115 to 165°C, or 140 to 260°C Analog input Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V							
Input impeda	ance		Current input: 150 Ω max., Voltage input: 1 M Ω min. (Use a 1:1 connection when connecting the ES2-HB/THB.)							
Control meth	nod		2-PID control (with auto-tuning) or ON/OFF control							
0	Relay output		SPST-NO, 250 VAC, 5 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA (reference value)							
Control output (for driving SSR)			Output voltage: 12 VDC ±20% (PNP), max. load current: 40 mA, with short-circuit protection circuit (The maximum load current is 21 mA for models with two control outputs.)							
	Linear current	•	4 to 20 mA DC/0 to 20 mA DC, load: 500 Ω max., resolution: approx. 10,000							
Auxiliary Number of outputs		outs	4							
output	Output specific	ations	SPST-NO. relay outputs, 250 VAC, Models with 4 outputs: 2 A (resistive load), Electrical life: 100,000 operations, Minimum applicable load: 10 mA at 5 V (reference value)							
	Number of inputs		2, 4 or 6 (depends on model)							
Event input	External contact	at innut	Contact input: ON: 1 $k\Omega$ max., OFF: 100 $k\Omega$ min.							
Lvent mpat	specifications	i iiiput	Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max.							
·			Current flow: Approx. 7 mA per contact							
Transfer	Number of outp	outs	1 (only on models with a transfer output)							
output	Output specific	ations	Current output: 4 to 20 mA DC, Load: 500 Ω max., Resolution: Approx. 10,000 Linear voltage output: 1 to 5 VDC, load: 1 k Ω min., Resolution: Approx. 10,000							
Potentiomet	er input		100 Ω to 10 k Ω							
Setting meth	nod		Digital setting using front panel keys							
Indication m	Indication method		11-segment digital display and individual indicators Character height: E5EC-T: PV: 18.0 mm, SV: 11.0 mm, MV: 7.8 mm E5AC-T: PV: 25.0 mm, SV: 15.0 mm, MV: 9.5 mm Three displays. Contents: PV, SP, program No. and segment No., remaining segment time, or MV (valve opening) Numbers of digits: 4 digits							
Bank switch	ing		None							
Other functions			Manual output, heating/cooling control, loop burnout alarm, other alarm functions, heater burnout (HB) alarm (including SSR failure (HS) alarm), 40% AT, 100% AT, MV limiter, input digital filter, robust tuning, PV input shift, protection functions, extraction of square root, MV change rate limit, logic operations, temperature status display, moving average of input value, and display brightness setting							
Ambient operating temperature		ure	-10 to 55°C (with no condensation or icing), For 3-year warranty: -10 to 50°C with standard mounting (with no condensation or icing)							
Ambient operating humidity			25 to 85%							
Storage temperature			-25 to 65°C (with no condensation or icing)							
Altitude			2,000 m max.							
Recommended fuse			T2A, 250 VAC, time-lag, low-breaking capacity							
Installation environment			Overvoltage category II, Pollution Degree 2 (EN/IEC/UL 61010-1)							

Input Ranges

Thermocouple/Platinum Resistance Thermometer (Universal inputs)

	Sensor Platinum resistance type thermometer							Thermocouple												Infrared temperature sensor						
Sen: specific			Pt100		JPt	100	ı	к	,	J	•	Г	E	L	ı	J	N	R	s	В	w	PLII	10 to 70°C	60 to 120°C	115 to 165°C	140 to 260°C
	2300																			1000	2300					
	1800																	4700	1700	1800						
	1700																	1700	1700	-						
	1600																									
	1500																									
_	1400						1300										1300					1300				
ည	1300																									
ě	1200																									
ũ	1100																									
Temperature range (°C)	1000	850							850					850												
₫	800																									
<u>ra</u>	700																									
鱼	600												600													
<u>_</u>	500		500.0		500.0			500.0																		
_	400									400.0	400	400.0			400	400.0										
	300						+																	400	405	260
	200			100.0		100.0	+				-												90	120	165	
	100		-	100.0	-	100.0	H			+						+				100			90			
	0			0.0		0.0	HI									H		0	0	100	0	0	0	0	0	0
	-100			0.0		0.0	HIF	-20.0	-100	-20.0				-100				3	3		3	3		J	J	
	-200	-200	-199.9		199.9		-200	20.0	.00	20.0	-200	-199.9	-200	.00	-200	-199.9	-200									
Set v	alue	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 60584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985

W: W5Re/W26Re, ASTM E988-1990

JPt100: JIS C 1604-1989, JIS C 1606-1989

Pt100: JIS C 1604-1997, IEC 60751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

Analog input

Input type	Cur	rent							
Input specification	4 to 20 mA	0 to 20 mA	1 to 5 V	0 to 5 V	0 to 10 V				
Setting range	Usable in the following ranges by scaling: -1999 to 9999, -199.9 to 999.9, -19.99 to 99.99 or -1.999 to 9.999								
Set value	ue 25 26		27	28	29				

Alarm Types

Each alarm can be independently set to one of the following 17 alarm types. The default is 2: Upper limit. (see note.)


Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.

Note: In the default settings for models with HB or HS alarms, alarm 1 is set to a heater alarm (HA) and the Alarm Type 1 parameter is not displayed. To use alarm 1, set the output assignment to alarm 1.


Set		Alarm outp	ut operation			
value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function		
0	Alarm function OFF	Outpu	it OFF	No alarm		
1	Upper- and lower-limit *1	ON L H PV	*2	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is outside this deviation range.		
2 (default)	Upper-limit	ON OFF SP PV	ON OFF SP PV	Set the upward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is higher than the SP by the deviation or more.		
3	Lower-limit	ON SP PV	ON OFF SP PV	Set the downward deviation in the set point by setting the alarm value (X). The alarm is ON when the PV is lower than the SP by the deviation or more.		
4	Upper- and lower-limit range *1	ON OFF SP PV	*3	Set the upward deviation in the set point for the alarm upper limit (H) and the lower deviation in the set point for the alarm lower limit (L). The alarm is ON when the PV is inside this deviation range.		
5	Upper- and lower-limit with standby sequence *1	ON OFF SP PV	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6		
6	Upper-limit with standby sequence	ON OFF SP PV	ON X P	A standby sequence is added to the upper-limit alarm (2). *6		
7	Lower-limit with standby sequence	ON X PV	ON X PV	A standby sequence is added to the lower-limit alarm (3). *6		
8	Absolute-value upper- limit	ON OFF 0	ON ←X→ OPV	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.		
9	Absolute-value lower-limit	ON ←X→ OFF 0 PV	ON OFF O PV	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.		
10	Absolute-value upper- limit with standby sequence	ON OFF 0	ON OFF OPPV	A standby sequence is added to the absolute-value upper-limit alarm (8). *6		
11	Absolute-value lower-limit with standby sequence	ON ←X→ OFF 0 PV	ON OFF O PV	A standby sequence is added to the absolute-value lower-limit alarm (9). * 6		
12	LBA (alarm 1 type only)		-	*7		
13	PV change rate alarm		-	*8		
14	SP absolute-value upper-limit alarm	ON OFF 0 SP	ON OFF O	This alarm type turns ON the alarm when the set point (SP) is higher than the alarm value (X).		
15	SP absolute-value lower-limit alarm	ON ←X→ OFF 0 SP	ON OFF O SP	This alarm type turns ON the alarm when the set point (SP) is lower than the alarm value (X).		
16	MV absolute-value upper-limit alarm ∗9	Standard Control ON OFF ON MV Heating/Cooling Control (Heating MV)	Standard Control ON OFF Heating/Cooling Control (Heating MV)	This alarm type turns ON the alarm when the manipulated variable (MV) is higher than the alarm value (X).		
		ON OFF O MV	Always ON			
	MV shooth to the	Standard Control ON OFF OFF OFF OFF OFF OFF OFF	Standard Control ON OFF OFF ON OFF ON OFF	This clays to was to was ON the state of the		
17	MV absolute-value lower-limit alarm *9	Heating/Cooling Control (Cooling MV)	Heating/Cooling Control (Cooling MV)	This alarm type turns ON the alarm when the manipulated variable (MV) is lower than the alarm value (X).		
		ON OFF 0	Always ON			

E5EC-T/E5AC-T

 - *1. With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- *2. Set value: 1, Upper- and lower-limit alarm



 *3. Set value: 4, Upper- and lower-limit range



- *4. Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above *2
 - Case 1 and 2
 Always OFF when the upper-limit and lower-limit hysteresis overlaps.
 - · Case 3: Always OFF
- ***5.** Set value: 5, Upper- and lower-limit with standby sequence Always OFF when the upper-limit and lower-limit hysteresis overlaps.
- *6. Refer to the E5_C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the operation of the standby sequence.
- *7. Refer to the E5□C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the loop burnout alarm (LBA). This setting cannot be used with a position-proportional model.
- *8. Refer to the E5 C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the PV change rate alarm.
- *9. When heating/cooling control is performed, the MV absolute upper limit alarm functions only for the heating operation and the MV absolute lower limit alarm functions only for the cooling operation.

Characteristics

Indication accuracy (at the ambient temperature of 23°C)			Thermocouple: $(\pm 0.3\% \text{ of indication value or } \pm 1^{\circ}\text{C}$, whichever is greater) ± 1 digit max. ± 1 Platinum resistance thermometer: $(\pm 0.2\% \text{ of indication value or } \pm 0.8^{\circ}\text{C}$, whichever is greater) ± 1 digit max. Analog input: $\pm 0.2\% \text{ FS } \pm 1$ digit max. $\pm 5\% \text{ FS } \pm 1$ digit max. Potentiometer input: $\pm 5\% \text{ FS } \pm 1$ digit max.							
Transfer out	put accurac	су	±0.3% FS max.							
Influence of	temperatur	e *2	Thermocouple input (R, S, B, W, PL II): (±1% of indication							
Influence of	voltage *2		Other thermocouple input: (±1% of indication value or ± Platinum resistance thermometer: (±1% of indication value) Analog input: ±1%FS ±1 digit max.							
Influence of (at EN 61326			CT input: ±5% FS ±1 digit max.							
Input sampli	ing period		50ms							
Hysteresis			Temperature input: 0.1 to 999.9°C or °F (in units of 0.1 Analog input: 0.01% to 99.99% FS (in units of 0.01% F							
Proportiona	l band (P)		Temperature input: 0.1 to 999.9°C or °F (in units of 0.1 Analog input: 0.1 to 999.9% FS (in units of 0.1% FS)	°C or °F)						
Integral time	e (I)		Standard, heating/cooling, or Position-proportional (Clounits of 0.1 s) Position-proportional (Floating): 1 to 9999 s (in units of	1 s), 0.1 to 999.9 s (in units of 0.1 s) *4						
Derivative ti	me (D)		0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	.1 s) * 4						
Proportional	band (P) fo	or cooling	Temperature input: 0.1 to 999.9°C or °F (in units of 0.1 Analog input: 0.1 to 999.9% FS (in units of 0.1% FS)	°C or °F)						
Integral time (I) for cooling			0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0	.1 s) * 4						
Derivative time (D) for cooling			0 to 9999 s (in units of 1 s), 0.0 to 999.9 s (in units of 0.1 s) *4							
Control period			0.1, 0.2, 0.5, 1 to 99 s (in units of 1 s)							
Manual reset value			0.0 to 100.0% (in units of 0.1%)							
Alarm settin			-1999 to 9999 (decimal point position depends on input	t tyne)						
Influence of		·ce	Thermocouple: 0.1° C/ Ω max. (100Ω max.)							
resistance	Signal Soul		Platinum resistance thermometer: $0.1^{\circ}C/\Omega$ max. (10 Ω max.)							
Insulation re	sistance		20 MΩ min. (at 500 VDC)							
Dielectric st	renath		3,000 VAC, 50/60 Hz for 1 min between terminals of different charge							
	Malfunctio	n	10 to 55 Hz, 20 m/s ² for 10 min each in X, Y, and Z directions							
Vibration	Resistance		10 to 55 Hz, 20 m/s ² for 2 hrs each in X, Y, and Z directions							
	Malfunctio		100 m/s ² , 3 times each in X, Y, and Z directions							
Shock	Resistance		300 m/s², 3 times each in X, Y, and Z directions							
	ricoiotaric	E5EC-T	Controller: Approx. 210 g, Adapter: Approx. 4 g × 2							
Weight		E5AC-T	Controller: Approx. 250 g, Adapter: Approx. 4 g × 2							
Degree of pr	otootion	LJAC-1	Front panel: IP66, Rear case: IP20, Terminals: IP00							
Memory pro										
Setup Tool	lection		Non-volatile memory (number of writes: 1,000,000 times)							
Setup 1001			CX-Thermo version 4.61 or higher							
Setup Tool port			E5EC-T/E5AC-T top panel: An E58-CIFQ2 USB-Serial Conversion Cable is used to connect to a USB port on the computer.*5 E5EC-T/E5AC-T front panel: An E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Conversion Cable are used together to connect to a USB port on the computer.*5							
Standards Approved standards		standards	cULus: UL 61010-1/CSA C22.2 No.61010-1, Korean wireless regulations (Radio law: KC Mark) (Some models only.) *6							
	Conformed standards		EN 61010-1 (IEC 61010-1)							
EMC			EMI Radiated Interference Electromagnetic Field Strength: Noise Terminal Voltage: EMS: ESD Immunity: Electromagnetic Field Immunity: Burst Noise Immunity: Conducted Disturbance Immunity: Surge Immunity: Voltage Dip/Interrupting Immunity:	EN 61326-1 *7 EN 55011 Group 1, class A EN 55011 Group 1, class A EN 61326-1 *7 EN 61000-4-2 EN 61000-4-3 EN 61000-4-4 EN 61000-4-6 EN 61000-4-5 EN 61000-4-11						
and The Control		. f IZ ili	propulate in the -200 to 1300°C range. T and N thermoon							

^{*1.} The indication accuracy of K thermocouples in the -200 to 1300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is ±2°C ±1 digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples at a temperature of 400 to 800°C is ±3°C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W thermocouples is (±0.3% of PV or ±3°C, whichever is greater) ±1 digit max. The indication accuracy of PL II thermocouples is (±0.3% of PV or ±2°C, whichever is greater) ±1 digit max.

^{*2.} Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage

^{*3.} K thermocouple at -100°C max.: ±10°C max.

^{*4.} The unit is determined by the setting of the Integral/Derivative Time Unit parameter.

^{*5.} External communications (RS-485) and USB-serial conversion cable communications can be used at the same time.

^{*6.} Refer to your OMRON website for the most recent information on applicable models.

^{*7.} Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

E5EC-T/E5AC-T

Number of programs (patterns)		8	
Number of segments (steps)		32	
Segment setting method		Time setting (Segment set with set point and time.)	
		Slope setting (Segment set with segment type, set point, slope, and time.)	
Segment times		0 h 0 min to 99 h 59 min	
		0 min 0 s to 99 min 59 s	
Alarm setting		Set separately for each program.	
Reset operation		Select either stopping control or fixed SP operation.	
Startup operation		Select continuing, resetting, manual operation, or run mode.	
PID sets	Number of sets	8	
PID sets	Setting method	Set separately for each program (automatic PID group selection also supported)	
Alarm SP function		Select from ramp SP and target SP.	
Program status control	Segment operation	Advance, segment jump, hold, and wait	
Program status control	Program operation	Program repetitions and program links	
Wait operation	Wait method	Waiting at segment ends	
wait operation	Wait width setting	Same wait width setting for all programs	
	Number of outputs	2	
Time signals	Number of ON/OFF Operations	1 each per output	
	Setting method	Set separately for each program.	
Program status output		Program end output (pulse width can be set), run output, stage output	
	PV start	Select from segment 1 set point, slope-priority PV start	
Program startup operation	Standby	0 h 0 min to 99 h 59 min	
	Standby	0 day 0 h to 99 day 23h	
Operation end operation		Select from resetting, continuing control at final set point, and fixed SP control.	
Program SP shift		Same program SP shift for all programs	

USB-Serial Conversion Cable

Applicable OS	Windows XP/Vista/7/8/10 *1	
Applicable software	CX-Thermo version 4.61 or higher	
Applicable models	E5□C-T Series, E5□C Series, and E5CB Series	
USB interface standard	Conforms to USB Specification 2.0.	
DTE speed	38400 bps	
Connector specifications	Computer: USB (type A plug) Digital Temperature Controller: Special serial connector	
Power supply	Bus power (Supplied from USB host controller.)	
Power supply voltage	5 VDC	
Current consumption	450 mA max.	
Output voltage	4.7±0.2 VDC (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)	
Output current	250 mA max. (Supplied from USB-Serial Conversion Cable to the Digital Temperature Controller.)	
Ambient operating temperature	0 to 55°C (with no condensation or icing)	
Ambient operating humidity	10% to 80%	
Storage temperature	-20 to 60°C (with no condensation or icing)	
Storage humidity	10% to 80%	
Altitude	2,000 m max.	
Weight	Approx. 120 g	

Windows is a registered trademark of Microsoft Corporation in the United States and or other countries.

***1.** CX-Thermo version 4.65 or higher runs on Windows 10.

*2. Use a high-power port for the USB port.

Note: A driver must be installed on the computer. Refer to the *Instruction Manual* included with the Cable for the installation procedure.

Communications Specifications

<u>-</u>		
Transmission line connection method	RS-485: Multidrop	
Communications	RS-485 (two-wire, half duplex)	
Synchronization method	Start-stop synchronization	
Protocol	CompoWay/F, or Modbus	
Baud rate *	9600, 19200, 38400, or 57600 bps	
Transmission code	ASCII	
Data bit length *	7 or 8 bits	
Stop bit length *	1 or 2 bits	
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 Modbus	
Flow control	None	
Interface	RS-485	
Retry function	None	
Communications buffer	217 bytes	
Communications response wait time	0 to 99 ms Default: 20 ms	

^{*}The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Communications Functions

Programless communications *	You can use the memory in the PLC to read and write E5□C-T parameters, start and reset operation, etc. The E5□C-T automatically performs communications with PLCs. No communications programming is required. Number of connected Digital Temperature Controllers: 32 max. Applicable PLCs OMRON PLCs CS Series, CJ Series, or CP Series Mitsubishi Electric PLCs MELSEC Q Series, L Series
------------------------------	--

Component Communications	When Digital Temperature Controllers are connected, set points and RUN/STOP commands can be sent from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves. Slope and offsets can be set for the set point. Number of connected Digital Temperature Controllers: 32 max. (including master)
Copying *	When Digital Temperature Controllers are connected, the parameters can be copied from the Digital Temperature Controller that is set as the master to the Digital Temperature Controllers that are set as slaves.

MELSEC is a registered trademark of Mitsubishi Electric Corporation.

Current Transformer (Order Separately) Ratings


	_	
Dielectric strength	1,000 VAC for 1 min	
Vibration resistance	50 Hz, 98 m/s ²	
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g	
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)	

Heater Burnout Alarms and SSR Failure Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input	
Maximum heater current	50 A AC	
Input current indication accuracy	±5% FS ±1 digit max.	
Heater burnout alarm setting range *1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms *3	
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms *4	

- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- ***3.** The value is 30 ms for a control period of 0.1 s or 0.2 s.
- *4. The value is 35 ms for a control period of 0.1 s or 0.2 s.


Electrical Life Expectancy Curve for Relays (Reference Values)

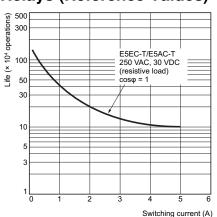

[★] Both the programless communications and the component communications support the copying.

E5EC-T/E5AC-T


External Connections

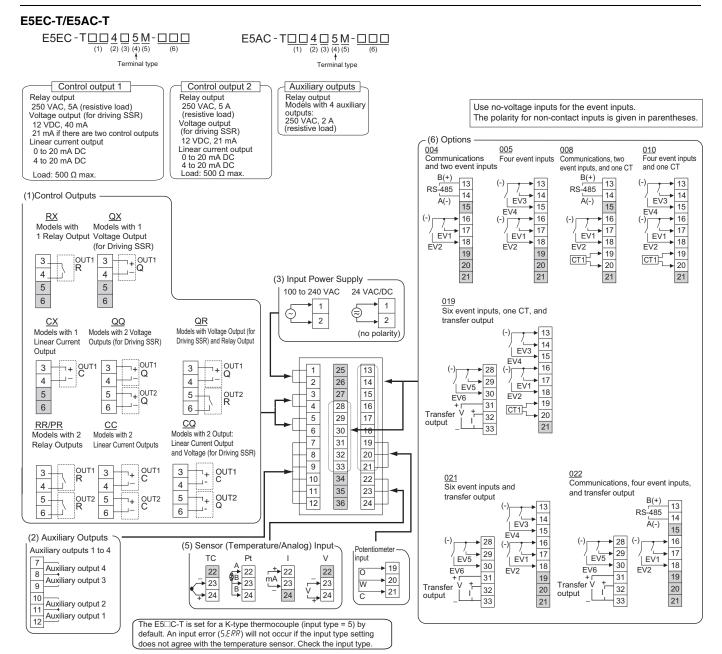

- Note: 1. The application of the terminals depends on the model.
 - 2. Do not wire the terminals that are shown with a gray background.
 - 3. When complying with EMC standards, the cable that connects the sensor must be 30 m or less. If the cable length exceeds 30 m, compliance with EMC standards will not be possible.
 - Connect M3 crimped terminals.


Isolation/Insulation Block Diagrams

Models with 4 Auxiliary Outputs

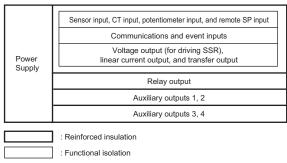


Note: Auxiliary outputs 1 to 2 and 3 to 4 are not insulated.

Nomenclature

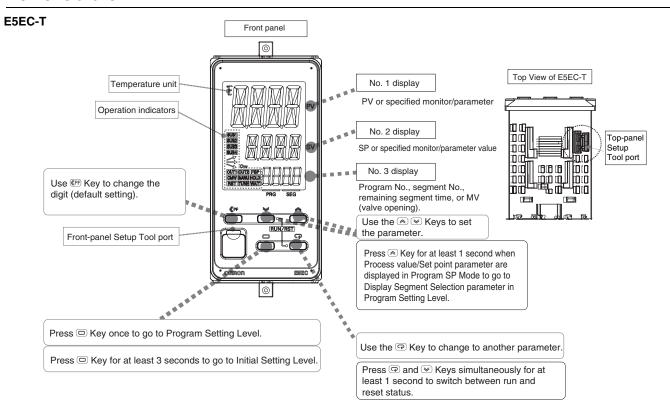

E5AC-T

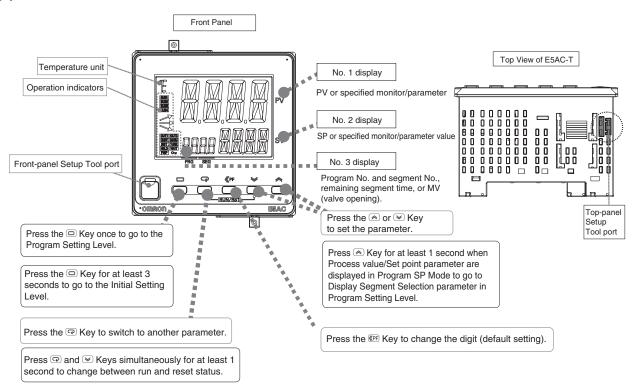



Dimensions (Unit: mm)

Controllers

 
E5EC-T



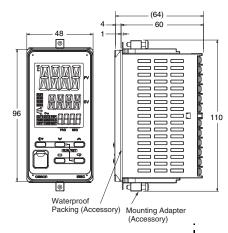





Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to connect to the port on the top panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Communications
 Conversion Cable are required to connect to the port on the front panel. (You cannot leave either port connected constantly during operation.)

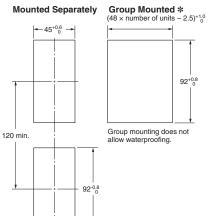


- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

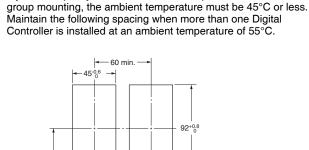


* Selections for Control Outputs 1 and 2: QQ, QR, RR, CC, PR, or CQ If you also specify 019, 021, 022 for the option selection and use

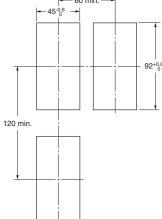

E5AC-T

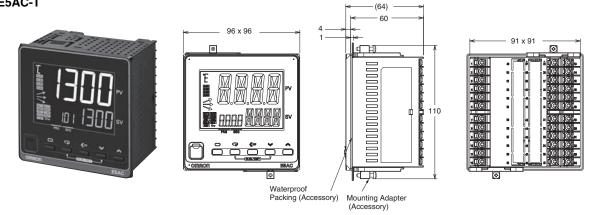

• Setup Tool ports are provided as standard feature. Use these ports to connect a computer to the Digital Temperature Controller. The E58-CIFQ2 USB-Serial Conversion Cable is required to connect to the port on the top panel. The E58-CIFQ2 USB-Serial Conversion Cable and E58-CIFQ2-E Communications Conversion Cable are required to connect to the port on the front panel. (You cannot leave either port connected constantly during operation.)

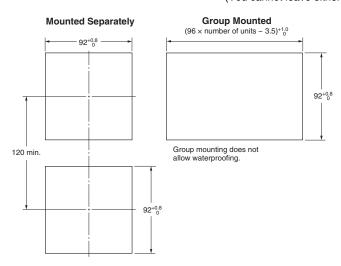


- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

Accessories (Order Separately)


USB-Serial Conversion Cable




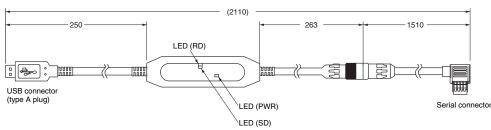


Conversion Cable E58-CIFQ2-E

   Conversion Cable









Note: Always use this product together with the E58-CIFQ2.

Terminal Covers E53-COV24 (Three Covers provided.)

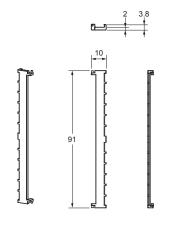

Waterproof Packing Y92S-P9 (for DIN 48 × 96)

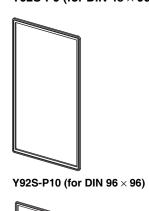

The Waterproof Packing is provided with the Temperature Controller.

Order the Waterproof Packing separately if it becomes lost or damaged.

The degree of protection when the Waterproof Packing is used is IP66.

Also, keep the Port Cover on the front-panel Setup Tool port of the E5EC-T/E5AC-T securely closed.

 
To maintain an IP66 degree of protection, the Waterproof Packing and the Port Cover for the front-panel Setup Tool port must be periodically replaced because they may deteriorate, shrink, or harden depending on the operating environment.

The replacement period will vary with the operating environment.

Check the required period in the actual application.


Use 3 years or sooner as a guideline.

Setup Tool Port Cover for top panel Y92S-P7




Order this Port Cover separately if the Port Cover on the front-panel Setup Tool port is lost or damaged. The Waterproof Packing must be periodically replaced because it may deteriorate, shrink, or harden depending on the operating environment.

 
Mounting Adapter Y92F-51 (Two Adapters provided.)




One pair is provided with the Controller.
Order this Adapter separately if it becomes lost or damaged.

 
Watertight Cover Y92A-49N (48 × 96)

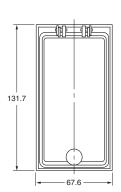



Watertight Cover Y92A-96N (96 × 96)

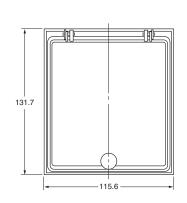


 

Current Transformers


E54-CT1



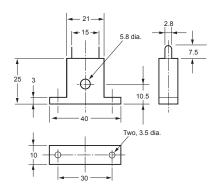


E54-CT3



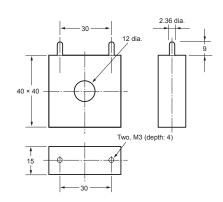


E54-CT3 Accessories

 
Armature



• Plug

 


Connection Example

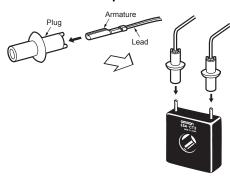

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT1

Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400±2

Winding resistance: 400 ± 2 Winding resistance: 18 ± 2 Ω

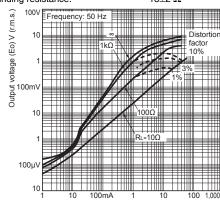


Thru-current (Io) A (r.m.s.)

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values) E54-CT3

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Digital Temperature Controller is 50 A.)

Number of windings: 400 ± 2 Winding resistance: $8\pm0.8~\Omega$

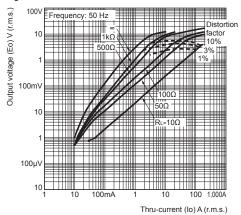


Operation

Setting Levels Diagram

Е5□С

This diagram shows all of the setting levels. To move to the advanced function setting level and calibration level, you must enter passwords. Some parameters are not displayed depending on the protect level setting and the conditions of use.


Control stops when you move from the operation level to the initial setting level.

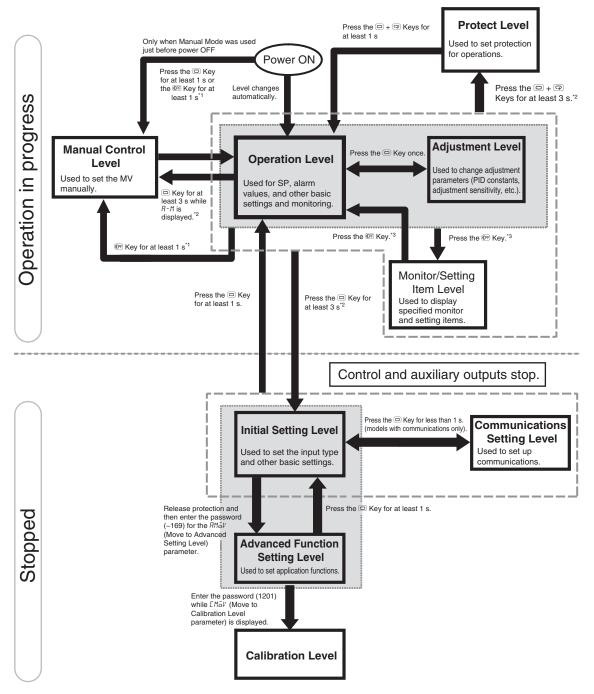

- ***1.** Set the PF Setting parameter to \mathcal{H} \mathcal{M} (Auto/Manual).
- ***2.** The No. 1 display will flash when the keys are pressed for 1 s or longer.
- *3. Set the PF Setting parameter to PF dP (monitor/setting items).

E5□C-T

This diagram shows all of the setting levels. To move to the advanced function setting level and calibration level, you must enter passwords. Some parameters are not displayed depending on the protect level setting and the conditions of use.

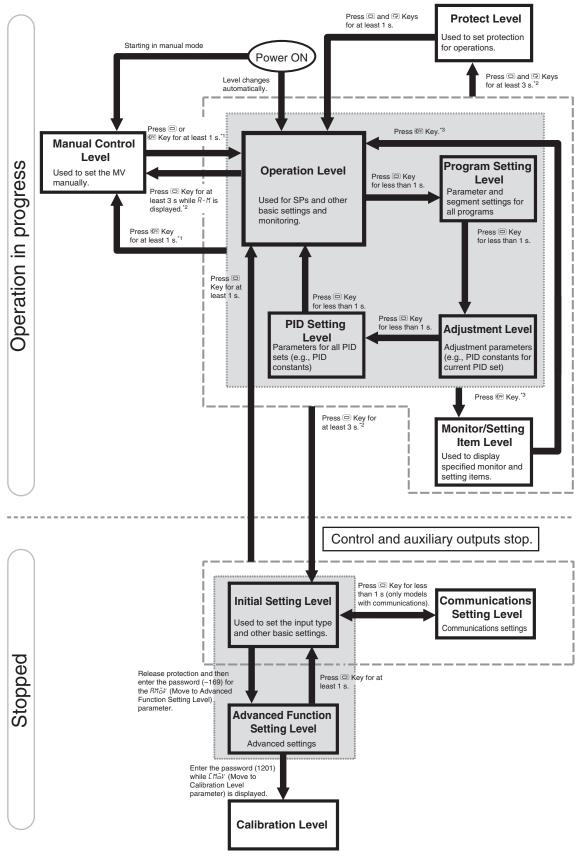


- ***1.** Set the PF Setting parameter to R-M (Auto/Manual).
- *2. The No. 1 display will flash when the keys are pressed for 1 s or longer.
- ***3.** Set the PF Setting parameter to PFdP (monitor/setting items).


Operation

Parameters


E5□C


The following pages describe the parameters set in each level. Pressing the ((Mode) Key at the last parameter in each level returns to the top parameter in that level. Some parameters may not be displayed depending on the model and other settings.

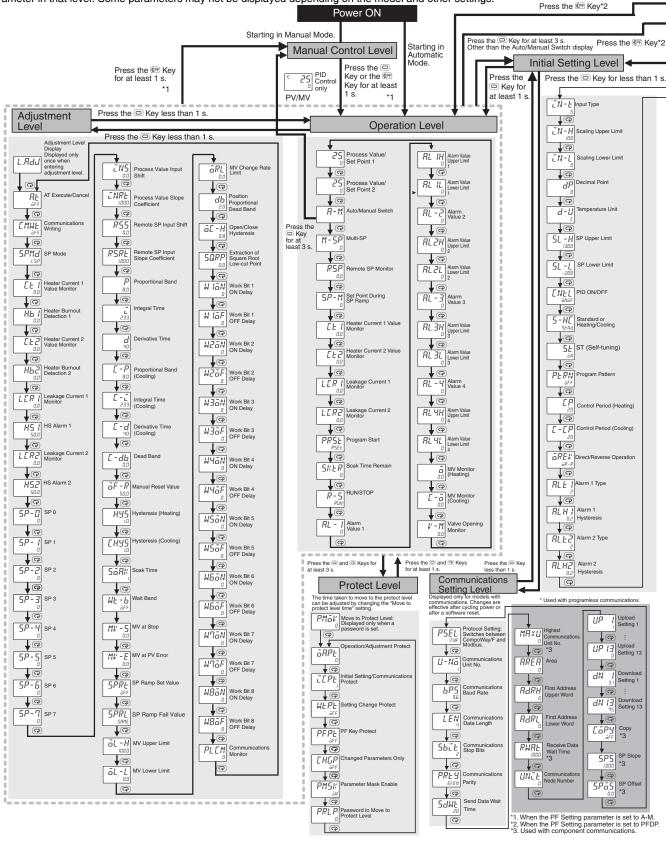


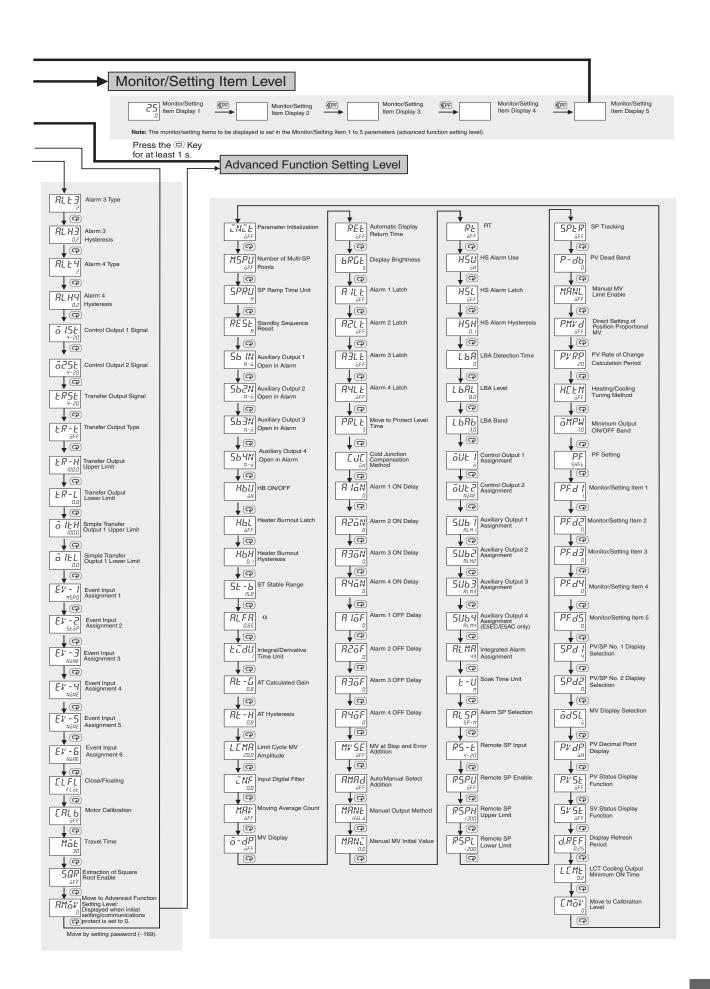

E5□**C-T**Some parameters may not be displayed depending on the model and other settings.

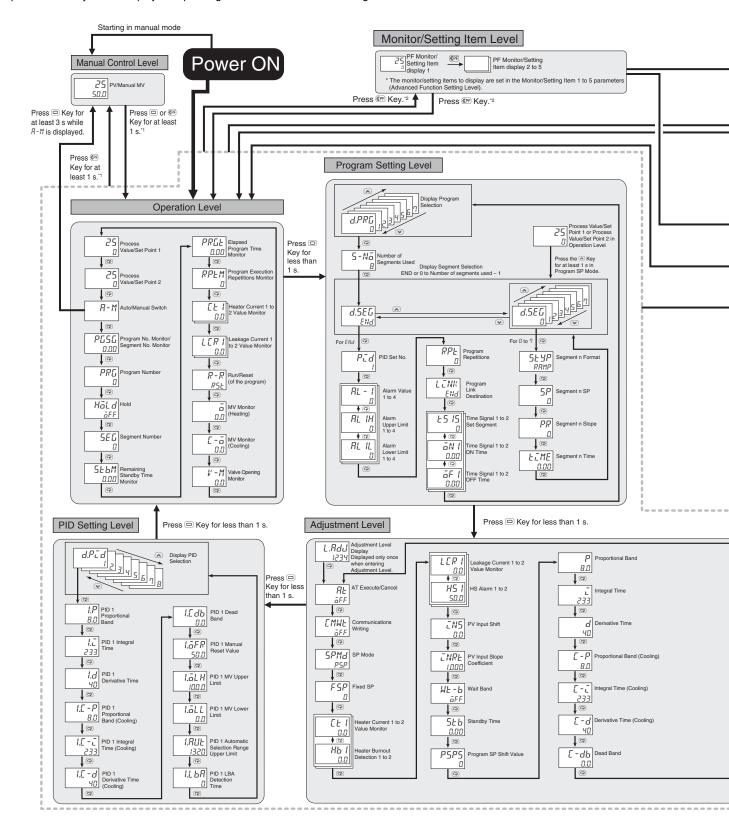

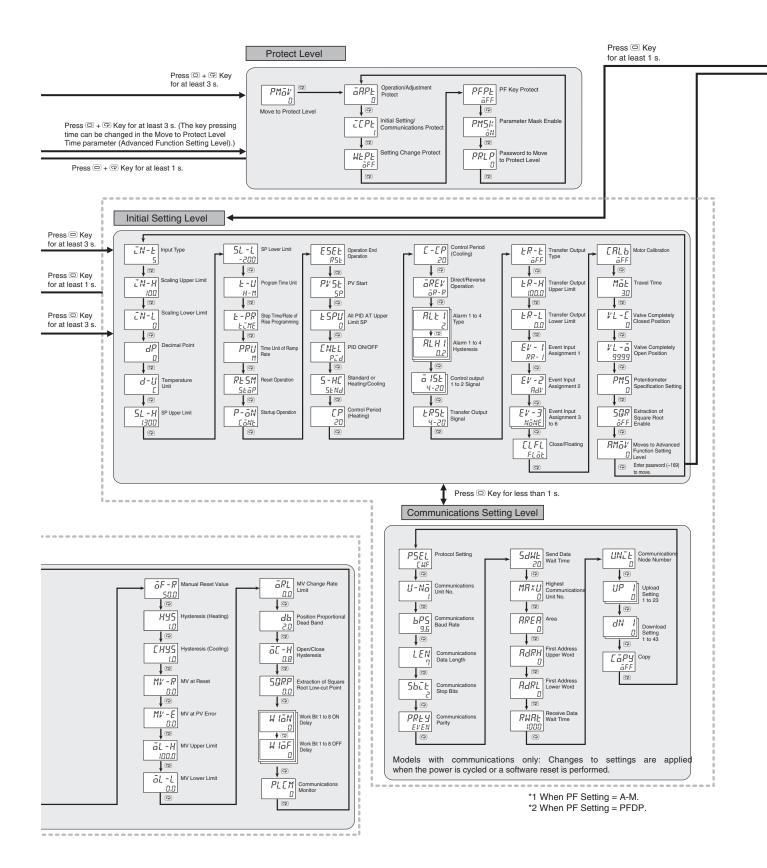

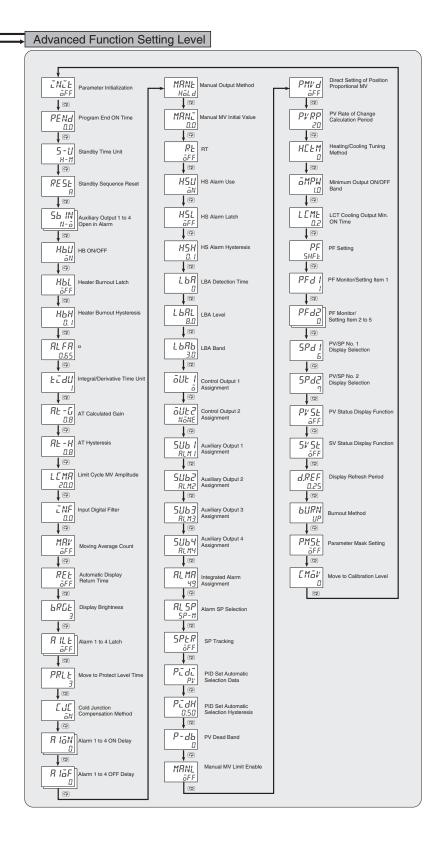

Error Displays (Troubleshooting)


When an error occurs, the No. 1 display or No. 2 display shows the error code. Take necessary measure according to the error code, referring the following table.

Display	Name		Meaning	Action	Operation
5.ERR	Input error	The input value exceeded the control range.* The input type is not set correctly. The sensor is disconnected or short-circuited. The sensor is not wired correctly. The sensor is not wired. * Control Range Temperature resistance thermometer or thermocouple input: SP Lower Limit - 20°C to SP Upper Limit + 20°C (SP Lower Limit - 40°F to SP Upper Limit + 40°F) ESIB input: Same as specified input range. Analog input: Scaling range -5% to 105%		Check the wiring for input to be sure it is wired correctly, not broken, and not shorted. Also check the input type. If there are no problems in the wiring or input type settings, cycle the power supply. If the display remains the same, replace the Digital Temperature Controller. If the display is restored to normal, then the probable cause is external noise affecting the control system. Check for external noise. Note: For a temperature resistance thermometer, the input is considered disconnected if the A, B, or B' line is broken.	After the error occurs and it is displayed, the alarm output will operate as if the upper limit was exceeded. It will also operate as if transfer output exceeded the upper limit. If an input error is assigned to a control output or auxiliary output, the output will turn ON when the input error occurs. The error message will appear in the display for the PV. Note: 1. The heating and cooling control outputs will turn OFF 2. When the manual MV, MV at stop, MV at reset, or MV at error is set, the control output is determined by the set value.
cccc	Display range exceeded	Below -1,999	This is not an error. It is displayed when the control range is wider than the display range and the PV exceeds the display range.	-	Control continues and operation is normal. The value will appear in the display for the PV. Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No.
2222		Above 9,999	The PV is displayed for the range that is given on the left (the number without the decimal point).		H174) or the E5□C-T Digital Temperature Controllers Programmable Type User's Manual (Cat. No. H185) for information on the controllable range.
E333	A/D converter error	There is an error in the internal circuits.		After checking the input error, turn the power OFF then back ON again. If the display remains the same, the controller must be repaired. If the display is restored to normal, then a probable cause can be external noise affecting the control system. Check for external noise.	The control outputs, auxiliary outputs, and transfer outputs turn OFF. (A current output will be approx. 0 mA and a linear voltage output will be approx. 0V.)
EIII	Memory	There is an error in the internal memory operation.		First, cycle the power supply. If the display remains the same, the controller must be repaired. If the display is restored to normal, then a probable cause can be external noise affecting the control system. Check for external noise.	The control outputs, auxiliary outputs, and transfer outputs turn OFF. (A current output will be approx 0 mA and a linear voltage output wil be approx. 0V.)
FFFF	Overcurrent	This error is displayed when the peak current exceeds 55.0 A.		-	Control continues and operation is normal. The error message will appear for the following displays. Heater Current Value 1 Monitor Heater Current Value 2 Monitor Leakage Current Value 1 Monitor Leakage Current Value 2 Monitor
CE I CE2 LCR I LCR2	HB or HS alarm	If there is a HB or HS alarm, the No. 1 display will flash in the relevant setting level.		-	The No. 1 display for the following parameter flashes in Operation Level or Adjustment Level. Heater Current Value 1 Monitor Heater Current Value 2 Monitor Leakage Current Value 2 Monitor Leakage Current Value 2 Monitor However, control continues and operation is normal.
	Potentiometer Input Error (Position- proportional Models Only)	 "" will be displayed for the Valve Opening Monitor parameter if any of the following error occurs. Motor calibration has not been performed. The wiring of the potentiometer is incorrect or broken. The potentiometer input value is incorrect (e.g., the input is out of range or the potentiometer has failed). 		Check for the above errors.	Close control: The control output is OFF or the value that is set for the MV at PV Error parameter is output. Floating control: Operation will be normal.


Safety Precautions

Be sure to read the precautions for all E5\(\to C/E5\(\to C-T\) models in the website at: http://www.ia.omron.com/.

Warning Indications

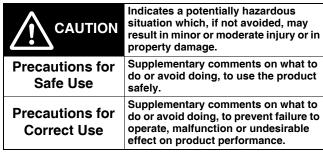

Meaning of Product Safety Symbols

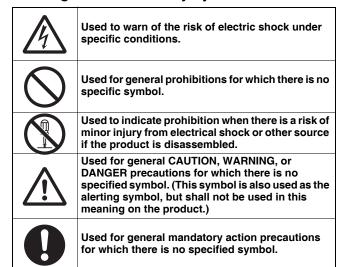


/ CAUTION

Do not touch the terminals while power is being supplied.

connectors with wet hands.

 connector.





Electric shock may occur. Do not touch any cables or

Minor electric shock, fire, or malfunction may occasionally occur. Do not allow any metal, conductors, chips from mounting work, or water to enter the interior of the Digital Controller, the Setting

Tool port, or between the pins on the Setting Tool cable

If you do not use the Setting Tool port on the front panel, close the cover securely so that the above foreign matter does not

Do not use the Digital Temperature Controller where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.



Not doing so may occasionally result in fire. Do not allow dirt or other foreign objects to enter the Setup Tool port or ports, or between the pins on the connectors on the Setup Tool cable.



Minor electric shock or fire may occasionally occur. Do not use any cables that are damaged.



Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur.



CAUTION - Risk of Fire and Electric Shock

 This product is UL listed *1 as Open Type Process Control Equipment. It must be mounted in an enclosure that does not allow fire to escape externally.



- More than one disconnect switch may be required to de-energize the equipment before servicing the product.
- 3. Signal inputs are SELV, limited energy. *2
- Caution: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits. *3

If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur.

Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.

Even if you replace only the Main Unit of the E5DC, check the condition of the Terminal Unit.

If corroded terminals are used, contact failure in the terminals may cause the temperature inside the Digital Temperature Controller to increase, possibly resulting in fire.



Tighten the terminal screws to the rated torque of between 0.43 and 0.58 N•m. *4 Loose screws may occasionally result in fire.



Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.



A malfunction in the product may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage.

To maintain safety in the event of malfunction of the product, take appropriate safety measures, such as installing a monitoring device on a separate line.

- ***1.** E5CC, E5EC, E5AC, and E5DC Digital Temperature Controllers that were shipped through November 2013 are UL recognized.
- ***2.** An SELV (separated extra-low voltage) system is one with a power supply that has double or reinforced insulation between the primary and the secondary circuits and has an output voltage of 30 V r.m.s. max. and 42.4 V peak max. or 60 VDC max.
- *3. A class 2 circuit is one tested and certified by UL as having the current and voltage of the secondary output restricted to specific levels.
- ***4.** The specified torque is 0.5 N·m for the E5CC-U.

Precautions for Safe Use

Be sure to observe the following precautions to prevent malfunction or adverse affects on the performance or functionality of the product. Not doing so may occasionally result in faulty operation. Do not handle the Digital Temperature Controller in ways that exceed the ratings.

- This product is specifically designed for indoor use only. Do not use this product in the following places:
 - · Places directly subject to heat radiated from heating equipment.
 - Places subject to splashing liquid or oil atmosphere.
 - · Places subject to direct sunlight.
 - Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
 - Places subject to intense temperature change.
 - · Places subject to icing and condensation.
 - · Places subject to vibration and large shocks.
- 2. Use and store the product within the rated ambient temperature and humidity.

Gang-mounting two or more Digital Temperature Controllers, or mounting Digital Temperature Controllers above each other may cause heat to build up inside the Digital Temperature Controllers, which will shorten their service life. In such a case, use forced cooling by fans or other means of air ventilation to cool down the Digital Temperature Controllers.

- To allow heat to escape, do not block the area around the Digital Temperature Controller.
 - Do not block the ventilation holes on the Digital Temperature Controller.
- Be sure to wire properly with correct signal name and polarity of terminals.
- 5. Use copper stranded or solid wires to connect bare wires.

Recommended Wire

Model	Wire Size	Wire Stripping length
E5CC/E5EC/ E5AC/E5DC/ E5□C-T/E5GC (Controllers with Screw Terminal Blocks)	AWG24 to AWG18 (0.21 to 0.82mm²)	6 to 8 mm
E5GC (Controllers with Screwless Clamp Terminal Blocks)		8 to 12 mm
E5CC-U (Plug-in model)	AWG24 to 14 (0.21 to 2.08mm ²)	5 to 6 mm
E5□C-B (Controllers with Push-In Plus Terminal Blocks)	0.25 to 1.5mm ² Equivalent to AWG24 to 16	Ferrules used: 10 mm *1 Ferrules not used: 8 mm

*1. Please use Ferrules with UL certification (R/C).

Use the specified size of crimped terminals to wire the E5CC, E5EC, E5AC, E5DC, and E5GC (models with screw terminal blocks) and the E5 \square C-T and E5CC-U (plug-in models).

Recommended Crimped Terminal Size

Model	Wire Size
E5CC/E5EC/E5AC/E5DC/E5□C-T/ E5GC (Controllers with Screw Terminal Blocks)	M3, Width: 5.8 mm max.
E5CC-U (Plug-in model)	M3.5, Width: 7.2 mm max.

For the E5\(\subseteq C-B(Push-In Plus model)\), connect only one wire to each terminal.

For other models, up to two wires of same size and type, or two crimp terminals, can be inserted into a single terminal.

When connecting two wires to one terminal on an E5GC Digital Temperature Controller with a screwless clamp terminal blocks, use two crimped ferrules with a diameter of 0.8 to 1.4 mm and an exposed conductor length of 8 to 12 mm. *2

***2.** The E5GC Digital Temperature Controller with screwless clamp terminal blocks underwent UL testing with one braided wire connected.

- 6. Do not wire the terminals that are not used.
- 7. Use a commercial power supply for the power supply voltage input to a Digital Temperature Controller with AC input specifications. Do not use the output from an inverter as the power supply. Depending on the output characteristics of the inverter, temperature increases in the Digital Temperature Controller may cause smoke or fire damage even if the inverter has a specified output frequency of 50/60 Hz.
- 8. To avoid inductive noise, keep the wiring for the product's terminal block away from power cables carry high voltages or large currents. Also, do not wire power lines together with or parallel to product wiring. Using shielded cables and using separate conduits or ducts is recommended.

Attach a surge suppressor or noise filter to peripheral devices that generate noise (in particular, motors, transformers, solenoids, magnetic coils, or other equipment that have an inductance component).

When a noise filter is used at the power supply, first check the voltage or current, and attach the noise filter as close as possible to the product.

Allow as much space as possible between the product and devices that generate powerful high frequencies (high-frequency welders, high-frequency sewing machines, etc.) or surge.

- 9. Use this product within the rated load and power supply.
- 10.Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
- 11.Make sure that the Digital Temperature Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- 12. When executing self-tuning with E5□C, turn ON power to the load (e.g., heater) at the same time as or before supplying power to the product. If power is turned ON to the product before turning ON power to the load, self-tuning will not be performed properly and optimum control will not be achieved.
- 13.A switch or circuit breaker must be provided close to the product. The switch or circuit breaker must be within easy reach of the operator, and must be marked as a disconnecting means for this unit.
- 14.Use a soft and dry cloth to clean the product carefully. Do not use organic solvent, such as paint thinner, benzine or alcohol to clean the product.
- **15.** Design the system (e.g., control panel) considering the 2 seconds of delay that the product's output to be set after power ON.
- 16. The output may turn OFF when you move to the initial setting level. Take this into consideration when performing control operations.
- 17. The number of non-volatile memory write operations is limited. Therefore, use RAM write mode when frequently overwriting data during communications or other operations.
- 18.Always touch a grounded piece of metal before touching the Digital Temperature Controller to discharge static electricity from your body.
- 19. Use suitable tools when taking the Digital Temperature Controller apart for disposal. Sharp parts inside the Digital Temperature Controller may cause injury.
- 20. For compliance with Lloyd's standards, the E5CC, E5CC-B, E5EC-B, E5CC-U, E5EC, E5AC, and E5DC must be installed under the conditions that are specified in *Shipping Standards*.
- 21.For the Digital Temperature Controller with two Setup Tool ports (E5EC/E5EC-B/E5AC/E5DC/E5GC), do not connect cables to both ports at the same time. The Digital Temperature Controller may be damaged or may malfunction.
- 22. Do not place heavy object on the Conversion Cable, bend the cable past its natural bending radius, or pull on the cable with undue force. The Digital Temperature Controller may be damaged.

- 23.Do not disconnect the Communications Conversion Cable or the USB-Serial Conversion Cable while communications are in progress. Damage or malfunction may occur.
- **24.** Do not touch the external power supply terminals or other metal parts on the Digital Temperature Controller.
- 25.Do not exceed the communications distance that is given in the specifications and use the specified communications cable. Refer to the E5□C Digital Temperature Controllers User's Manual (Cat. No. H174) for information on the communications distances and cables for the E5□C.
 - For details on the E5□C-T, refer to the *E5□C-T Digital Temperature Controllers Programmable Type User's Manual* (Cat. No. H185).
- 26.Do not bend the communications cables past their natural bending radius. Do not pull on the communications cables.
- 27.Do not turn the power supply to the Digital Temperature Controller ON or OFF while the USB-Serial Conversion Cable is connected. The Digital Temperature Controller may malfunction.
- 28.Make sure that the indicators on the USB-Serial Conversion Cable are operating properly. Depending on the application conditions, deterioration in the connectors and cable may be accelerated, and normal communications may become impossible. Perform periodic inspection and replacement.
- 29. Connectors may be damaged if they are inserted with excessive force. When connecting a connector, always make sure that it is oriented correctly. Do not force the connector if it does not connect smoothly.
- 30. Noise may enter on the USB-Serial Conversion Cable, possibly causing equipment malfunctions. Do not leave the USB-Serial Conversion Cable connected constantly to the equipment.
- 31. For the E5DC, when you attach the Main Unit to the Terminal Unit, make sure that the hooks on the Main Unit are securely inserted into the Terminal Unit.
- 32. For the E5CC-U, when you attach the Main Unit to the socket, make sure that the hooks on the socket are securely inserted into the Main Unit.
- 33.Install the DIN Track vertically to the ground.
- 34. For the E5DC, always turn OFF the power supply before connecting the Main Unit to or disconnecting the Main Unit from the Terminal Unit, and never touch nor apply shock to the terminals or electronic components. When connecting or disconnecting the Main Unit, do not allow the electronic components to touch the case.
- **35.** Observe the following precautions when you remove the terminal block or pulling out the interior of the product of the E5GC.
 - Always follow the instructions provided in the E5

 C Digital
 Temperature Controllers User's Manual (Cat. No. H174).
 - Turn OFF the power supply before you start and never touch nor apply shock to the terminals or electric components. When you insert the interior body of the Digital Temperature Controller, do not allow the electronic components to touch the case.
 - Check for any corrosion on the terminals.
 - When you insert the interior body into the rear case, confirm that the hooks on the top and bottom are securely engaged with the
- **36.**Observe the following precautions when you wire the E5□C-B.
 - Always follow the wiring instructions provided in Wiring Precautions for E5_C-B (Controllers with Push-In Plus Terminal Blocks) on page 116.
 - Do not wire anything to the release holes.
 - Do not tilt or twist a flat-blade screwdriver while it is inserted into a release hole on the terminal block. The terminal block may be damaged.
 - Insert a flat-blade screwdriver into the release holes at an angle.
 The terminal block may be damaged if you insert the screwdriver straight in.
 - Do not allow the flat-blade screwdriver to fall out while it is inserted into a release hole.
 - Do not bend a wire past its natural bending radius or pull on it with excessive force. Doing so may cause the wire to break.
 - Do not use crossover wiring except for the input power supply and communications.

Shipping Standards

The E5CC, E5CC-B, E5CC-U, E5EC, E5EC-B, E5AC, and E5DC comply with Lloyd's standards. When applying the standards, the following installation requirements must be met in the application. Also insert the Waterproof Packing on the backside of the front panel.

Application Conditions Installation Location

The E5CC, E5CC-B, E5CC-U, E5EC, E5EC-B, E5AC, and E5DC comply with installation category ENV1 and ENV2 of Lloyd's standards. Therefore, they must be installed in a location equipped with air conditioning. They cannot be used on the bridge or decks, or in a location subject to strong vibration.

Precautions for Correct Use

Service Life

- Use the product within the following temperature and humidity ranges:
 Temperature: -10 to 55°C (with no icing or condensation)
 Humidity: 25% to 85%
 - If the product is installed inside a control board, the ambient temperature must be kept to under 55°C, including the temperature around the product.
- 2. The service life of electronic devices like Digital Temperature Controllers is determined not only by the number of times the relay is switched but also by the service life of internal electronic components. Component service life is affected by the ambient temperature: the higher the temperature, the shorter the service life and, the lower the temperature, the longer the service life. Therefore, the service life can be extended by lowering the temperature of the Digital Temperature Controller.
- 3. When two or more Digital Temperature Controllers are mounted horizontally close to each other or vertically next to one another, the internal temperature will increase due to heat radiated by the Digital Temperature Controllers and the service life will decrease. In such a case, use forced cooling by fans or other means of air ventilation to cool down the Digital Temperature Controllers. When providing forced cooling, however, be careful not to cool down the terminals sections alone to avoid measurement errors.

Measurement Accuracy

- 1. When extending or connecting the thermocouple lead wire, be sure to use compensating wires that match the thermocouple types.
- When extending or connecting the lead wire of the platinum resistance thermometer, be sure to use wires that have low resistance and keep the resistance of the three lead wires the same.
- 3. Mount the product so that it is horizontally level.
- If the measurement accuracy is low, check to see if input shift has been set correctly.

Waterproofing (Not applicable to the E5CC-U/E5DC.)

The degree of protection is as shown below. Sections without any specification on their degree of protection or those with $IP\square 0$ are not waterproof.

Front panel: IP66, Rear case: IP20, Terminal section: IP00 When waterproofing is required, insert the Waterproof Packing on the backside of the front panel. Keep the Port Cover on the front-panel Setup Tool port of the E5EC/E5EC-B/E5AC/E5EC-T/E5AC-T securely closed. The degree of protection when the Waterproof Packing is used is IP66. To maintain an IP66 degree of protection, the Waterproof Packing and the Port Cover for the front-panel Setup Tool port must be periodically replaced because they may deteriorate, shrink, or harden depending on the operating environment. The replacement period will vary with the operating environment. Check the required period in the actual application. Use 3 years or sooner as a guideline.


Operating Precautions

- When using self-tuning, turn ON power for the load (e.g., heater) at the same time as or before supplying power to the Digital Temperature Controller. If power is turned ON for the Digital Temperature Controller before turning ON power for the load, selftuning will not be performed properly and optimum control will not be achieved.
 - When starting operation after the Digital Temperature Controller has warmed up, turn OFF the power and then turn it ON again at the same time as turning ON power for the load. (Instead of turning the Digital Temperature Controller OFF and ON again, switching from STOP mode to RUN mode can also be used.)
- Avoid using the Digital Temperature Controller in places near a radio, television set, or wireless installing. These devices can cause radio disturbances which adversely affect the performance of the Controller.

Others

- Do not Connect or disconnect the Conversion Cable connector repeatedly over a short period of time.
 The computer may malfunction.
- After connecting the Conversion Cable to the computer, check the COM port number before starting communications. The computer requires time to recognize the cable connection. This delay does not indicate failure.
- 3. Do not connect the Conversion Cable through a USB hub. Doing so may damage the Conversion Cable.
- Do not use an extension cable to extend the Conversion Cable length when connecting to the computer. Doing so may damage the Conversion Cable.

Mounting Mounting to a Panel E5GC

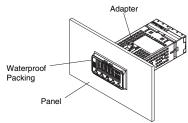


- For waterproof mounting, waterproof packing must be installed on the Digital Temperature Controller. Waterproofing is not possible when group mounting several Digital Temperature Controllers.
- 2. Insert the E5GC into the mounting hole in the panel.
- 3. Use two Mounting Adapters, either on the top and bottom or on the right and left.
- Push the Adapters from the terminals up to the panel, and temporarily fasten the E5GC.
- Tighten the two fastening screws on the Adapter. Alternately tighten the two screws little by little to maintain a balance. Tighten the screws to a torque of 0.29 to 0.39 N·m.

E5CC/E5CC-B/E5CC-U/E5CC-T


• E5CC/E5CC-T

There are two models of Terminal Covers that you can use with the E5CC/E5CC-T.

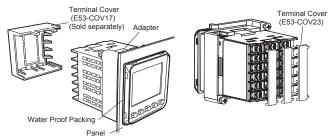


• E5CC-U

For the Wiring Socket for the E5CC-U, purchase the P2CF-11 or P3GA-11 separately.

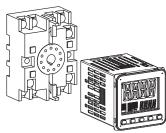


- For waterproof mounting, waterproof packing must be installed on the Digital Temperature Controller. Waterproofing is not possible when group mounting several Digital Temperature Controllers. The E5CC-U cannot be waterproofed even if the Waterproof Packing is inserted.
- Insert the E5CC/E5CC-B/E5CC-U/E5CC-T into the mounting hole in the panel.
- 3. Push the adapter from the terminals up to the panel, and temporarily fasten the E5CC/E5CC-B/E5CC-U/E5CC-T.
- 4. Tighten the two fastening screws on the adapter. Alternately tighten the two screws little by little to maintain a balance. Tighten the screws to a torque of 0.29 to 0.39 N·m.

E5EC/E5EC-B/E5AC/E5EC-T/E5AC-T

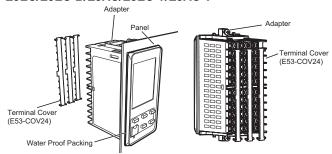

- 1. For waterproof mounting, waterproof packing must be installed on the Digital Temperature Controller. Waterproofing is not possible when group mounting several Digital Temperature Controllers.
- 2. Insert the E5EC/E5EC-B/E5AC/E5EC-T/E5AC-T into the mounting hole in the panel.
- Push the adapter from the terminals up to the panel, and temporarily fasten the E5EC/E5EC-B/E5AC/E5EC-T/E5AC-T.
- Tighten the two fastening screws on the adapter. Alternately tighten the two screws little by little to maintain a balance. Tighten the screws to a torque of 0.29 to 0.39 N·m.

E5DC

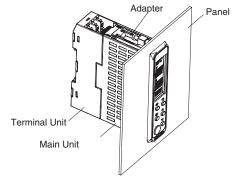

- 1. Insert the E5DC into the mounting hole in the panel. (Attach the Terminal Unit after you insert the Main Unit.)
- 2. Push the Adapter from the Terminal Unit up to the panel, and temporarily fasten the E5DC.
- Tighten the two fastening screws on the Adapter. Alternately tighten the two screws little by little to maintain a balance. Tighten the screws to a torque of 0.29 to 0.39 N·m.


Mounting to and Removing from DIN Track E5DC

· Mounting a Unit

Pull down the DIN Track hook on the Terminal Unit and catch the top hook on the DIN Track.


Press the Unit onto the DIN Track until the DIN Track hooks are locked in place.

2. Catch the top hook on

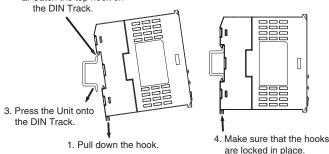


· Removing a Unit

 Pull down on the DIN Track Hook with a flat-blade screwdriver and lift up the Unit.




Removing the Main Unit

 Press in the two hooks on the Main Unit and remove the Main Unit from the Terminal Unit.



End Plate Installation

Make sure to attach PFP-M End Plates to the ends of the Units.

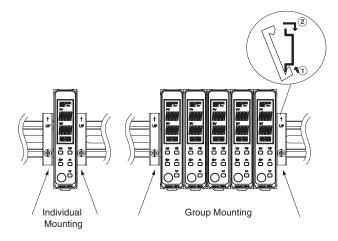


Mounting the DIN Track

Attach the DIN Track to the inside of the control panel with screws to at least three locations.

DIN Track (sold separately)
 PFP-50N (50 cm) and PFP-100N (100 cm)




Install the DIN Track vertically to the ground.

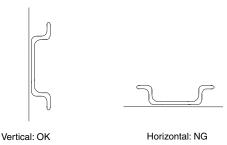

Mounting the Terminal Cover E5CC/E5CC-T


Slightly bend the E53-COV23 Terminal Cover to attach it to the terminal block as shown in the following diagram. The Terminal Cover cannot be attached in the opposite direction. E53-COV17 Terminal Cover can be also attached.

Make sure that the "UP" mark is facing up, and then attach the E53-COV17 Terminal Cover to the holes on the top and bottom of the Digital Temperature Controller.

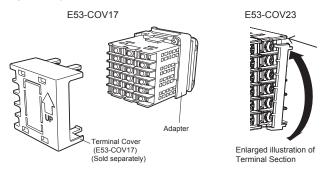


E5EC/E5AC/E5EC-T/E5AC-T

Slightly bend the E53-COV24 Terminal Cover to attach it to the terminal block as shown in the following diagram. The Terminal Cover cannot be attached in the opposite direction.

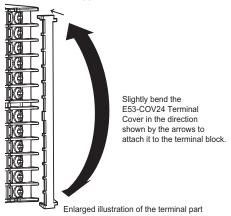


Attaching the End Cover E5DC


1. Install the E5DC in a panel.

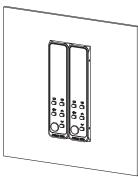


Peel off the release paper from the double-sided tape on the End Cover.

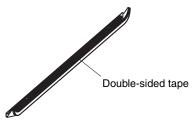

3. Align the tabs on the End Cover with the depressions on the E5DC and attach the End Cover.

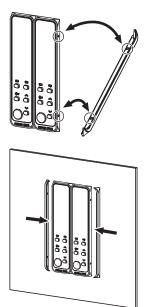

Secure the End Cover so that the double-sided tape is firmly attached.

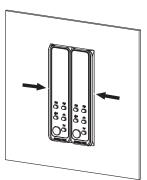


Removing the Digital Temperature Controller from the case E5GC

You can use the Y92F-55 Draw-out Jig to remove the interior body of the Digital Temperature Controller from the case to perform maintenance without removing the terminal wiring. This is possible only for the E5GC. Check the specifications of the case and Digital Temperature Controller before removing the Digital Temperature Controller from the case.

1. Draw out the interior body from the rear case.


 Slowly insert the Draw-out Jig into the Draw-out Jig insertion holes laterally until it clicks into place. (There is a hole at both the top and bottom.) (If you attempt to draw out the interior body of the Digital Controller when only one hook is engaged, the Digital Controller may be damaged.)

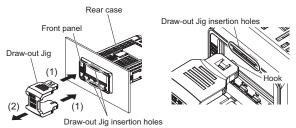


- Pull out the Draw-out Jig together with the front panel. Do not pull with excessive force. Slowly pull out the Digital Controller laterally. (If you pull the interior body out at an angle, the Digital Controller may be damaged.)
- After the interior body is free from the rear case, support the interior body with one hand and draw it out slowly in a horizontal direction.

2. Insert the new interior body into the rear case.

- When inserting the interior body back into the rear case, make sure the PCBs are parallel to each other, mount the sealing rubber, and press the interior body toward the rear case and into position, making sure that the sealing rubber does not move.
- 2. When you press the Digital Controller into position, press down on the rear case hooks so that the case hooks securely lock in place. (There are rear case hooks at both the top and bottom of the rear case.) If the Digital Controller is not correctly mounted into the rear case, the rear case may not be waterproof. When inserting the Digital Controller, do not allow the electronic components to touch the rear case.

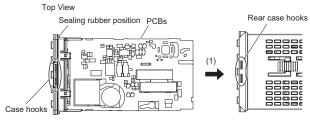


* Make sure that the top and bottom PCBs are parallel to each other and insert them into the rear case.

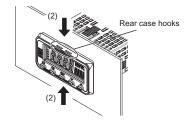

Removing the draw-out jig when only one hook is caught in the draw-out jig insertion hole

- 1. Pull the Draw-out Jig slowly in the direction shown in the figure. (This step is the same even if the other hook is caught.)
- Confirm that the Draw-out jig is free of the Draw-out jig insertion hole.
- 3. If the interior body separates from the rear case, slowly press the interior body into the rear case in a horizontal direction.

 If you do not follow the procedures above, the Digital Controller may be damaged.



Precautions when Wiring

- Separate input leads and power lines in order to prevent external noise.
- · Use crimp terminals when wiring the screw terminal blocks.
- Use the suitable wiring material and crimp tools for crimp terminals.
- Tighten the terminal screws to a torque of 0.43 to 0.58 N·m. The specified torque is 0.5 N·m for the E5CC-U.

E5CC/E5EC/E5AC/E5DC/E5□C-T/E5GC (Controllers with Screw Terminal Blocks) and E5CC-U (Plug-in model)

Wire Size


Use the wire sizes and stripping lengths given in the following table.

Model	Wire Size	Stripping length
E5CC/E5EC/E5AC/ E5DC/E5GC (Controllers with Screw Terminal Blocks) / E5□C-T	AWG24 to AWG18 (0.21 to 0.82 mm ²)	6 to 8 mm (without crimp terminals)
E5CC-U	AWG24 to AWG14 (0.21 to 2.08 mm ²)	5 to 6 mm (without crimp terminals)


- If you use crimp terminals, use the stripping length that is recommended by the manufacturer of the crimp terminals.
- To reduce the affects of noise, use shielded twisted-pair cable for the signal lines.

Crimp Terminal

 
For the E5CC/E5EC/E5AC/E5DC/E5GC (Controllers with Screw Terminal Blocks) or E5□C-T, use the following types of crimp terminals for M3 screws.



 For the E5CC-U, use the following types of crimp terminals for M3.5 screws.



  If you use crimp terminals for the E5DC, use crimp terminals with insulation sleeves. If you use a bare crimp terminal with no insulation, the terminal may short with the terminal above or below it. If you use bare crimp terminals, cover the crimped sections with insulating marking tubes. Secure the marking tubes so that they do not move.



Although you can connect two crimp terminals with insulation sleeves to one terminal, you cannot do so if the diameter of the insulation sleeves is too large.

Recommended Crimp Terminals with Insulation Sleeves for the E5DC


Manufacturer	Model number	
J.S.T. Mfg. Co.	V1.25-B3A V0.5-3A	

E5GC (Controllers with Screwless Clamp Terminal Blocks)

1. Connection Method for Screwless Clamp Terminals


The same method is used to connect stranded wires, solid wires, and ferrules.

Part Names of the Terminal Block

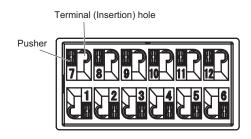


Connection Method

- 1. Press the pusher with a flat-blade screwdriver.
- 2. With the screwdriver still pressing the pusher, insert the wire into the terminal (Insertion) hole.
- 3. Remove the flat-blade screwdriver from the pusher.

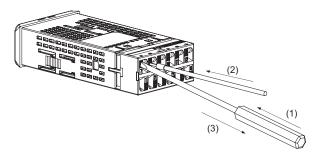

Checking Connections

 
 After insertion, pull gently on the wire to make sure that it will not come out (i.e., to confirm that it is held by the terminal block).



2. Removal Method for Screwless Clamp Terminals

The same method is used to remove stranded wires, solid wires, and ferrules.

- 1. Press the pusher with a flat-blade screwdriver.
- 2. With the screwdriver still pressing the pusher, pull the wire out of the terminal (Insertion) hole.
- 3. Remove the flat-blade screwdriver from the pusher.

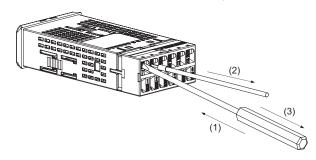

3. Recommended Wire Size and Ferrules Wire Size


Use the wire sizes and stripping lengths given in the following table.

Wire Size	Stripping length
AWG24 to AWG18 (0.21 to 0.82 mm²)	8 to 12 mm

Ferrules

Ferrules must be 0.8 to 1.4 mm in diameter.

 The exposed conductor inserted into the terminal must be 8 to 12 mm in length.




Recommended ferrules

Manufact	urer name	Model number	
Altech Corp.		2623.0	
Daido Solderless Terminal Mfg. Co.		AVA-0.5	
J.S.T. Mfg. Co.		TUB-0.5	
Nichifu Co., Ltd.	Single (1 wire)	TGNTC-1.25-9T TGVTC-1.25-11T TGNTC-1.25-11T TC0.3-9.5 TC1.25-11S-ST TC1.25-11S TC2-11S	
	Double (2 wires)	TGWVTC-1.25-9T TGWVTC-1.25-11T	


E5□C-B (Controllers with Push-In Plus Terminal Blocks)

 1. Connecting Wires to the Push-In Plus Terminal Block Part Names of the Terminal Block



Connecting Wires with Ferrules and Solid Wires

Insert the solid wire or ferrule straight into the terminal block until the end touches the terminal block.

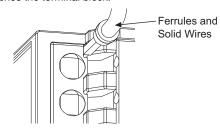


If a wire is difficult to connect because it is too thin, use a flat-blade screwdriver in the same way as when connecting stranded wire.

Connecting Stranded Wires


Use the following procedure to connect the wires to the terminal block.

 - Hold a flat-blade screwdriver at an angle and insert it into the release hole. The angle should be between 10° and 15°.
 If the flat-blade screwdriver is inserted correctly, you will feel the spring in the release hole.
- 2. With the flat-blade screwdriver still inserted into the release hole, insert the wire into the terminal hole until it strikes the terminal block
- 3. Remove the flat-blade screwdriver from the release hole.



Checking Connections

 
- After the insertion, pull gently on the wire to make sure that it will not come off and the wire is securely fastened to the terminal block.
- To prevent short circuits, insert stripped part of a stranded or solid wire or the conductor part of a ferrule until it is hidden inside the terminal insertion hole. (See the following diagram.)



2. Removing Wires from the Push-In Plus Terminal Block

Use the following procedure to remove wires from the terminal block. The same method is used to remove stranded wires, solid wires, and ferrules

 
- Hold a flat-blade screwdriver at an angle and insert it into the release hole.
- With the flat-blade screwdriver still inserted into the release hole, remove the wire from the terminal insertion hole.
- 3. Remove the flat-blade screwdriver from the release hole.



3. Recommended Ferrules and Crimp Tools Recommended ferrules

Applicat	ole wire	Ferrule	Recommended ferrules		rules
mm²	AWG	Con- ductor length (mm)	Manufactured by Phoenix Contact	Manufactured by Weidmuller	Manufactured by Wago
0.25	24	8	AI0.25-8	H0.25/12	FE-0.25-8N-YE
0.34	22	8	AI0.34-8	H0.34/12	FE-0.34-8N-TQ
0.5	20	8	AI0.5-8	H0.5/14	FE-0.5-8N-WH
0.75	18	8	AI0.75-8	H0.75/14	FE-0.75-8N-GY
1	18	8	Al1-8	H1.0/14	FE-1.0-8N-RD
1.5	16	8	Al1.5-8	H1.5/14	FE-1.5-8N-BK
Recomme	Recommended crimp tool		CRIMPFOX6 CRIMPFOX6T-F CRIMPFOX10S	PZ6 roto	Variocrimp4

 
- Note: 1. Make sure that the outer diameter of the wire coating is smaller than the inner diameter of the insulation sleeve of the recommended ferrule.
 - Make sure that the ferrule processing dimensions conform to the following figures.



Recommended Flat-blade Screwdriver

Use a flat-blade screwdriver to connect and remove wires. Use the following flat-blade screwdriver.

 The following table shows manufacturers and models as of 2015/Dec.



Model	Manufacturer
XW4Z-00B	Omron
ESD0.40×2.5	Wera
SZF 0.4×2.5	Phoenix Contact
0.4×2.5×75 302	Wiha
AEF.2.5×75	Facom
210-719	Wago
SDI 0.4×2.5×75	Weidmuller

Three-year Guarantee

Period of Guarantee

The guarantee period of the Unit is three years starting from the date the Unit is shipped from the factory.


Scope of Guarantee

The Unit is guaranteed under the following operating conditions.

1. Average Operating Temperature (see note): -10°C to 50°C

2. Mounting Method: Standard mounting

(Mounted to panel or DIN Track.)

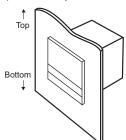

Example: Mounted to Panel

Note: Average Operating Temperature

Refer to the process temperature of the Unit mounted to a control panel and connected to peripheral devices on condition that the Unit is in stable operation, sensor input type K is selected for the Unit, the positive and negative thermocouple input terminals of the Unit are short-circuited, and the ambient temperature is stable.

Should the Unit malfunction during the guarantee period, OMRON shall repair the Unit or replace any parts of the Unit at the expense of OMRON.

MEMO
IVIEIVIO

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

OMRON Corporation Industrial Automation Company

Kyoto, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

Authorized Distributor:

© OMRON Corporation 2011-2016 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM_14_1_1016 Cat. No. H177-E1-09

0316 (1111)