


5 - Softstarters

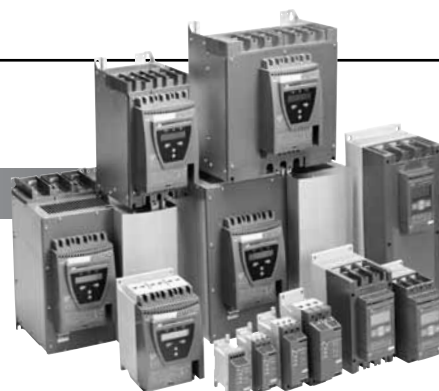

General information	5.1
Softstarter overview.....	5.2 - 5.3
Applications.....	5.4 - 5.5

PSR - The compact range

Description.....	5.7 - 5.8
Overview	5.9
Ordering details.....	5.10
Accessories.....	5.11
Technical data	5.12 - 5.13

PSE - The efficient range

Description.....	5.15 - 5.17
Overview	5.18 - 5.19
Ordering details.....	5.20 - 5.21
Accessories.....	5.22
Technical data	5.23 - 5.24

PST(B) - The advanced range

Description.....	5.25 - 5.27
Overview	5.28 - 5.29
Ordering details.....	5.30 - 5.33
Accessories.....	5.34
Technical data	5.35 - 5.39

FBP Field Bus Plug

DeviceNET, MODBUS-RTU and CANopen	5.40 - 5.41
Profibus DP	5.42 - 5.43

Wall mounting instructions.....	5.44
---------------------------------	------

Dimensions.....	5.45 - 5.47
-----------------	-------------

Circuit diagrams.....	5.48 - 5.54
-----------------------	-------------

prosoft (selection tool).....	5.55
-------------------------------	------

Certifications and approvals.....	5.56
-----------------------------------	------

Catalog number explanation, PST enclosed softstarters ..	5.57
--	------

PST Enclosed Products

Catalog number explanation.....	5.57
Ordering details.....	5.58 - 5.59
Factory installed options.....	5.60
Horsepower to PST Softstarter cross-reference.....	5.61
Approximate dimensions	5.62

PST Extreme Duty

Description.....	5.63
Ordering details	5.64



Softstarters

Type PSR, PSE, PST
General information

5


The complete range of Softstarters

The ABB softstarter portfolio now consists of 3 different ranges making it possible to find a suitable softstarter for almost all possible applications and motor sizes all the way up to 1800A. The softstarter family consists of the Compact PSR, the Efficient PSE and the Advanced PST(B) range.

Efficient PSE Range – World's first compact softstarter with Torque control

The latest addition to the ABB softstarter family is the efficient PSE range. This softstarter has been equipped with all the most important features making it a very efficient choice. During the development process, great focus has been put into making sure that both the softstarter and the process are even more reliable. Further more, the softstarter has been equipped with built-in by-pass to reduce the wiring and a back-lit display to provide easy set-up and monitoring.

Functionality

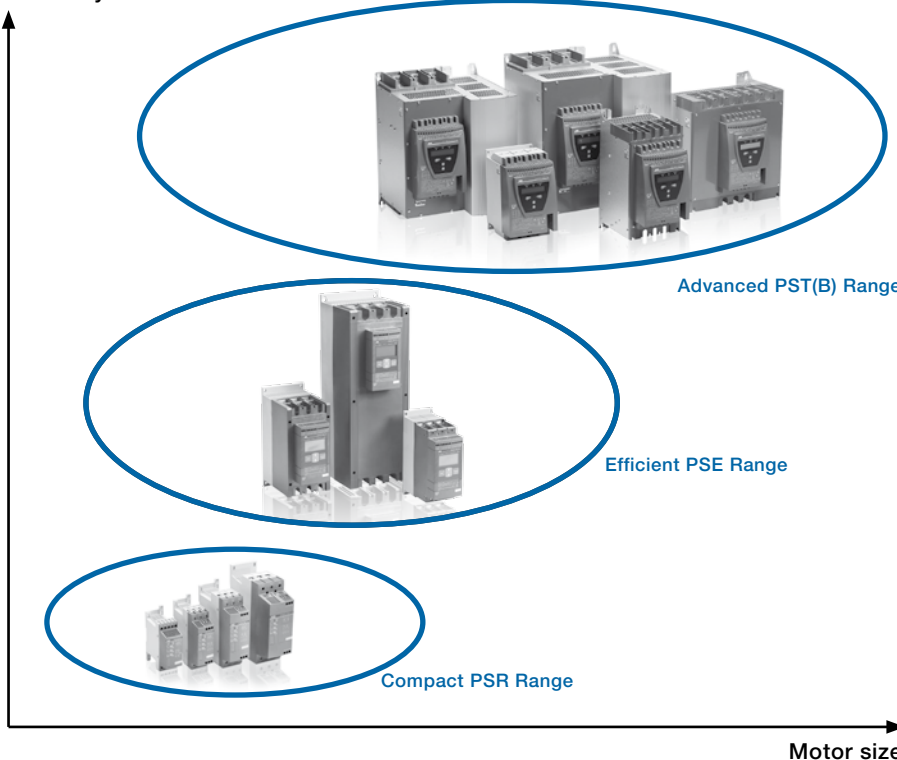

Softstarter overview

5

From the moment the first electrical motors were developed, engineers have been searching for a way to avoid electrical and mechanical problems that usually occur when starting the motor. These problems include high inrush current and current spikes as well as excessive mechanical wear. One traditional way to avoid this is to use a star delta starter. This starting method in many applications is insufficient, as problems with current spikes and torque peaks will remain. In addition, it does not provide any way to perform a soft stop. A softstarter on the other hand will provide far better performance during the start and also the possibility to soft stop the motor.

ABB has been producing softstarters since the beginning of the 1980's. The valuable experience gained since the early 80's has been incorporated into the design of today's product ranges. Matching modern power electronics with smart circuitry and software, the ABB softstarters offer superior control of the current and voltage during motor start-up and stop, in addition to several state of the art design features.


The solution to both mechanical and electrical problems
AC motors, "the workhorse of the industry", are used to drive fans, crushers, agitators, pumps, conveyors, etc. Depending

on how it is installed, too often unnecessary and unwanted torque and current peaks are an everyday reality in production plants all over the world, causing damage in several ways. Among them are:

- Electrical problems due to voltage and current transients arising from Direct-On-Line or Star-Delta starts. Such transients may overload the local supply network and cause unacceptable voltage variations that interfere with other electrical equipment connected to the network.
- Mechanical problems that address the entire drive chain, from motor to driven equipment, causing a big need for service and repair as well as unwanted down time.
- Operational problems, such as damage to products on conveyor belts.
- Water hammering and pressure surges in pipe systems when starting and stopping pumps.

The financial consequences are considerable; every technical problem and every breakdown costs money in terms of repairs as well as lost production.

The easy solution to all of these problems is to install an ABB Softstarter type PSR, PSE or PST(B). With ABB Softstarters, it is possible to start and stop smoothly while keeping mechanical and electrical stresses to a minimum.

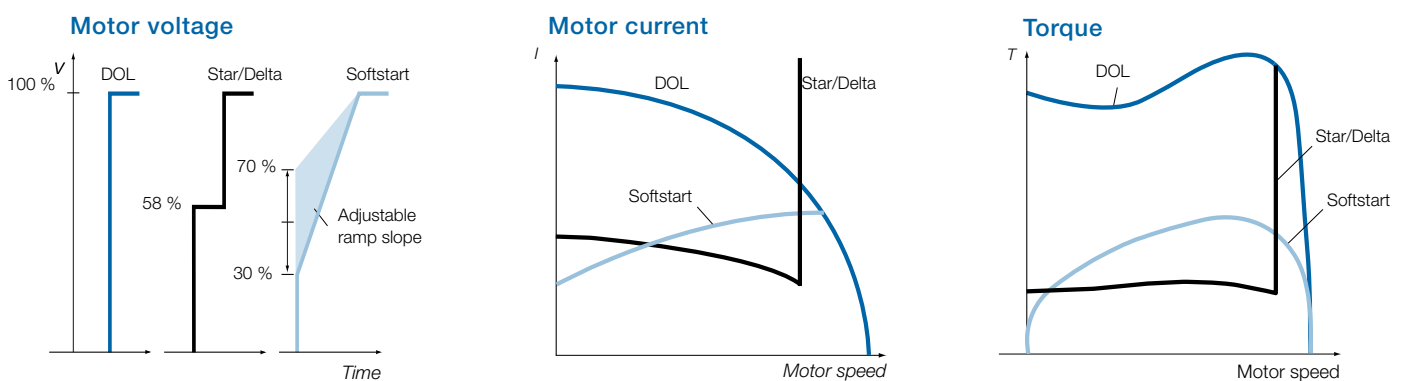

Graphs showing the basic differences between direct-on-line starting (DOL), star-delta starting and soft starting in terms of the motor voltage (V), motor current (I) and motor torque (T).

Softstarter overview

ABB softstarters – The complete range

ABB offers three different ranges of softstarters to cover every customer need for solutions for motor sizes up to 1800 A. This page describes the main characteristics of the different softstarter ranges

PSR – The compact range

The PSR softstarter is the most compact of all the softstarter ranges, thereby making it possible to design compact starting equipment. The system concept with Manual Motor Starters and the PSR provides a far more compact starting solution than for instance a star delta starter.

The built-in by-pass reduces the energy loss and makes the connection easier. With only three potentiometers, the set-up couldn't be any easier. Still, the optimized ramping characteristics will ensure a very smooth start and stop for all applications.

PSE – The efficient range

The PSE softstarter is the world's first compact softstarter with both built-in electronic overload for motor protection and torque control for an excellent control of pumps. The compact design with the most important functionality integrated provides a very efficient starting solution.

The illuminated language neutral display and the four button keypad make it easy to take advantage of all the advanced functionality in the softstarter. The display will also provide all the necessary information both during ramping and continuous operation.

PST(B) – The advanced range

The PST(B) softstarter is the most advanced softstarter in the range with almost all imaginable functionality included. All the advanced protections for the motor, the softstarter and the load ensure a trouble free operation. Pre-warnings even allow problems to be detected before the motor needs to be stopped and thereby avoiding unnecessary downtime.

The torque control function has been developed and tested together with well known pump manufacturers to ensure the best possible start/stop of pumps without water hammering and pressure surges.

With the full text LCD display in your own language, pre-programmed application settings and event logging, it couldn't be easier to set-up and operate.

By using the ABB FieldBusPlug, you can decide at any time which bus protocol to use. The fieldbus system will allow you to set-up, control and monitor the softstarter.


PSR	PSE	PST(B)	• Standard O Optional – Not available
•	•	• 1)	Built-in by-pass 1) on PSTB
–	–	•	Inside delta connection
–	•	O	Coated PCBs
–	•	•	Display and keypad
–	•	•	Torque control
–	•	•	Settable current limit function
–	•	•	Electronic motor overload protection
–	–	•	PTC input for motor protection
–	–	•	Phase imbalance protection
–	–	•	Phase reversal protection
–	•	•	Locked rotor protection
–	•	•	Thyristor overtemperature protection
–	•	•	Underload protection
–	–	•	Programmable warning functions
–	•	•	Analog output
O	O	•	FieldBus communication
–	O	•	Event log
–	O	O	External keypad

- Standard
- O Optional
- Not available

Pumps

5

Water is the world's most important resource and water facilities can be found all over the world. Examples of water applications are freshwater and wastewater systems, circulating water for heating or cooling and irrigation.

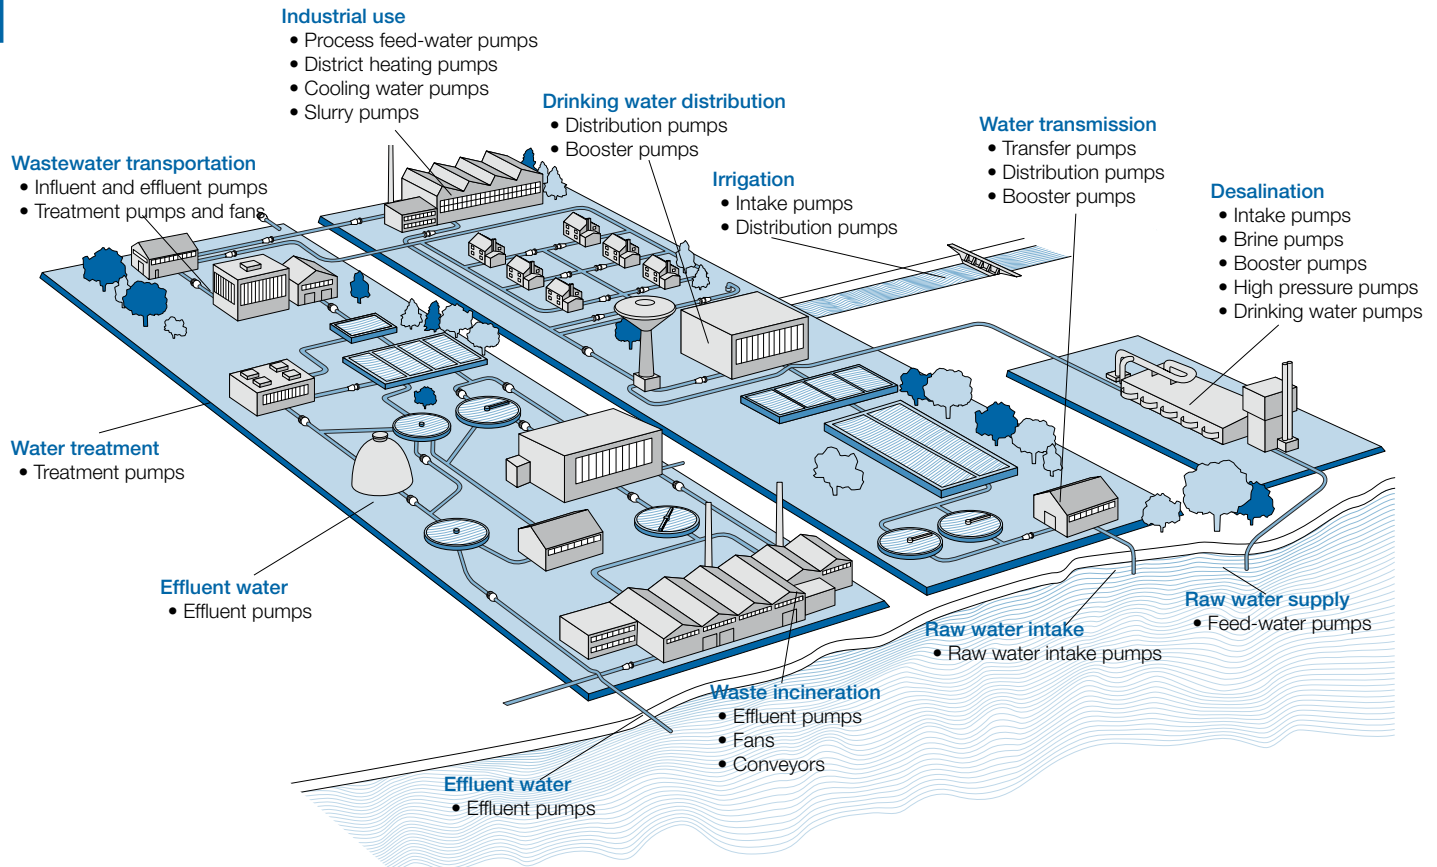

Common questions:

- How to avoid voltage drops on the network when starting?
- ABB softstarter will reduce the starting current and thereby avoid the voltage drops.
- How to avoid water hammering when stopping?
- Use our softstarters equipped with an optimized stop ramp or even better with torque control.
- How to ensure high reliability in harsh environments?
- Use our softstarters equipped with coated circuit boards to better withstand those environments.
- How to protect my pumping equipment in the best possible way?
- Use ABB softstarters equipped with our special designed protections such as overload, underload, and locked rotor protection.

Applications

Fans



Common questions:

- How to avoid extended voltage drops due to long starting time?
- Use an ABB softstarter equipped with current limit to keep control of the starting current.
- How to extend the life of the driving belts?
- Our softstarters will reduce the mechanical stress during start, thus avoiding slipping belts.
- How to ensure the operation of the fan?
- A softstarter with underload protection will detect broken belts, making the operator immediately aware of the problem.

5

Compressors



Common questions:

- How to ensure a long life of the compressor?
- Using a softstarter for starting will reduce the accelerating torque, thereby minimizing the mechanical stress.
- How to build a compact compressor unit?
- Using a compact softstarter like PSR or PSE will allow a much more compact starting equipment than for instance a star delta starter.

Conveyor belts



Common questions:

- How to reduce the need for service and repair of the conveyor belt?
- A softstarter from ABB will cause minimal mechanical stress on the conveyor belt.
- How to avoid that the conveyor belt is running in the wrong direction?
- Use a softstarter with phase reversal protection.
- How to improve the efficiency of the conveyor belt?
- Using softstarters with high and low current warnings allows you to load on and off the conveyor belt.
- How to ensure a successful start in high inertia loads?
- A softstarter with kick start function will provide sufficient torque to be able to overcome the initial high friction from a temporarily jammed belt.

Notes



Product description

- Wide rated operational voltage 208 – 600 V
- Rated control supply voltage 24 V DC or 100 – 240 V AC
- Rated operational current 3 – 105 A
- Wide ambient temperature range, -25 to +60 °C (-13 to 140 °F)
- Built-in by-pass on all sizes, saving energy and reducing installation time
- Potentiometer settings
- Run signal relay on all devices
- TOR signal relay on PSR25 ... PSR105
- Optional fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- DIN rail mounting on PSR3 ... PSR45
- Screw mounting on all sizes
- Connection kits for easy connection with ABB manual motor starters
- Sophisticated algorithm eliminating the DC-component and thereby providing excellent starting performance.

PSR – The compact range

Description

The PSR range is the most compact of all the ABB softstarter ranges, thereby making it possible to fit many devices into the same enclosure. The system concept with Manual Motor Starters provides a far more compact starting solution than for example a star delta starter.

5 Flexible mounting

PSR softstarters from 3 to 45 A are possible to mount on a din rail, ensuring quick and easy mounting. Naturally, all sizes can be screw mounted.

Few settings



The set-up of the PSR is easily done and confirmed using the three clearly marked potentiometers on the front.

Built-in by-pass for energy saving

The built-in by-pass on all sizes does not only save energy; it will also ensure the most compact ABB softstarter design and reduce the installation time.

Settings

- ① Start = 1 ... 20 sec
Stop = 0 ... 20 sec - including the step down voltage.
- ② Step down = 2% reduction for each second increased stop ramp
Stop ramp 10 sec -> Step down 80% (20% reduction)
- ③ U_{ini} = 40 ... 70% results in End voltage = 30 ... 60%

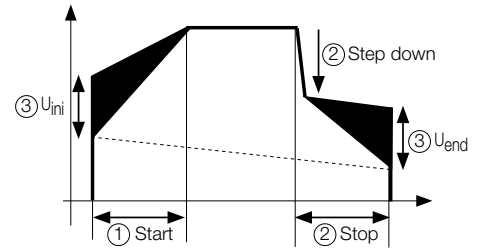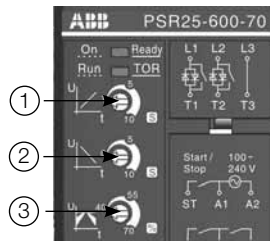

Suitable for stopping pumps

Even without using torque control, the PSR range is designed to reduce water hammering and will allow a superior stop compared to the direct stop resulting from a star delta starter or a DOL starter. See the special designed stop ramp with step down voltage below.

System concept with manual motor starters

All PSR softstarter sizes can easily be connected to the corresponding manual motor starters from ABB, using the special designed connection kits. This will both make the mounting and the connection easier and will provide a very compact starting solution containing short circuit and thermal protection, isolation function and softstarter - everything that you need.

PSR – The compact range

Overview

Softstarters
Type PSR



5

PSR3 ... PSR16					PSR25 ... PSR30		PSR37 ... PSR45		PSR60 ... PSR105				
Softstarter													
Normal start In-line connected	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
(480 V) hp	2	3	5	7.5	10	15	20	25	30	40	50	60	75
(600 V) hp	2	5	7.5	10	10	20	25	30	40	50	60	75	100
UL/CSA, Max FLA	3.4	6.1	9	11	15.2	24.2	28	34	46.2	59.4	68	80	104
Using manual motor starter, type 1 coordination will be achieved													
Manual motor starter (5 kA, 600 V, 40 °C)													
MS116				MS132				MS450		MS495			—
Using J fuses, type 1 coordination will be achieved													
J type fuse protection (85 kA)													
175 % rating	5 A	10 A	15 A	15 A	25 A	40 A	45 A	50 A	80 A	100 A	110 A	125 A	175 A
Max rating	35 A	35 A	35 A	35 A	35 A	60 A	60 A	90 A	90 A	110 A	125 A	150 A	200 A
Minimum enclosure size ¹⁾	254 x 204 x 153 mm / 10 x 8 x 6 in					305 x 254 x 204 mm / 12 x 10 x 8 in				600 x 400 x 210 mm / 24 x 16 x 8 in			
Fusible disconnect switch for the above J fuses													
Fusible disconnect switch													
OS30					OS60			OS100		OS200			
Overload protection is used to protect the motor from over heating													
Thermal overload relay													
TF42DU								TA75DU		TA110DU			
The line contactor is not required for the softstarter itself but often used to open if OL trips													
Line contactor													
AF9			AF12	AF16	AF26	AF30	AF50		AF63	AF75	AF95	AF110	
Using by-pass will reduce the power loss and allow more starts per hour													
Bypass contacts													
Built-in													

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PSR – The compact range

Ordering details

PSR3 ... PSR105

Rated operational voltage U_e , 208-600 V AC

Rated control supply voltage, U_s , 100 - 240 V AC

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_o A	Weight kg (lb)	Catalog number
0.75	1.5	2.2	0.5	0.75	2	2	3.4	0.450 (0.99)	PSR3-600-70
1.5	3	4	1	1.5	3	5	6.1	0.450 (0.99)	PSR6-600-70
2.2	4	4	2	2	5	7.5	9	0.450 (0.99)	PSR9-600-70
3	5.5	5.5	3	3	7.5	10	11	0.450 (0.99)	PSR12-600-70
4	7.5	7.5	3	5	10	10	15.2	0.450 (0.99)	PSR16-600-70
5.5	11	15	7.5	7.5	15	20	24.2	0.650 (1.43)	PSR25-600-70
7.5	15	18.5	7.5	10	20	25	28	0.650 (1.43)	PSR30-600-70
7.5	18.5	22	10	10	25	30	34	1.000 (2.20)	PSR37-600-70
11	22	30	15	15	30	40	46.2	1.000 (2.20)	PSR45-600-70
15	30	37	20	20	40	50	59.4	2.200 (4.85)	PSR60-600-70
22	37	45	20	25	50	60	68	2.270 (5.00)	PSR72-600-70
22	45	55	25	30	60	75	80	2.270 (5.00)	PSR85-600-70
30	55	55	30	40	75	100	104	2.270 (5.00)	PSR105-600-70



PSR3 ... PSR16



PSR25 ... PSR30



PSR37 ... PSR45



PSR60 ... PSR105

Rated operational voltage U_e , 208-600 V AC


Rated control supply voltage, U_s , 24 V DC

0.75	1.5	2.2	0.5	0.75	2	2	3.4	0.450 (0.99)	PSR3-600-81
1.5	3	4	1	1.5	3	5	6.1	0.450 (0.99)	PSR6-600-81
2.2	4	4	2	2	5	7.5	9	0.450 (0.99)	PSR9-600-81
3	5.5	5.5	3	3	7.5	10	11	0.450 (0.99)	PSR12-600-81
4	7.5	7.5	3	5	10	10	15.2	0.450 (0.99)	PSR16-600-81
5.5	11	15	7.5	7.5	15	20	24.2	0.650 (1.43)	PSR25-600-81
7.5	15	18.5	7.5	10	20	25	28	0.650 (1.43)	PSR30-600-81
7.5	18.5	22	10	10	25	30	34	1.000 (2.20)	PSR37-600-81
11	22	30	15	15	30	40	46.2	1.000 (2.20)	PSR45-600-81
15	30	37	20	20	40	50	59.4	2.200 (4.85)	PSR60-600-81
22	37	45	20	25	50	60	68	2.270 (5.00)	PSR72-600-81
22	45	55	25	30	60	75	80	2.270 (5.00)	PSR85-600-81
30	55	55	30	40	75	100	104	2.270 (5.00)	PSR105-600-81

PSR – The compact range Accessories

5

Connection kit

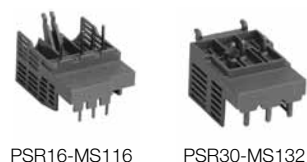

PSR16-MS116

PSR30-MS132



PSR45-MS450

PSR105-MS495



PSR-FAN

PSR-FAN 60-105 A



PSLW

PS-FBPA

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSR3...PSR16 with MS116	1	0.030 (0.07)	PSR16-MS116
PSR25...PSR30 with MS132	1	0.030 (0.07)	PSR30-MS132
PSR37...PSR45 with MS450	1	0.030 (0.07)	PSR45-MS450
PSR60...PSR105 with MS495	1	0.050 (0.11)	PSR105-MS495

Fan

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSR3...PSR45	1	0.010 (0.02)	PSR-FAN
PSR60...PSR105	1	0.013 (0.03)	PSR-FAN 60-105 A

Terminal enlargements


For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSR60...105 Wire range mm2 1x10...50, 2x10...25	1	0.150 (0.33)	PSLW-72

FieldBus plug connection accessory

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
The same accessory for all sizes	1	0.060 (0.13)	PS-FBPA

ABB Field Bus Plug suitable for all sizes. See page 5.40 - 5.43

Connection kit

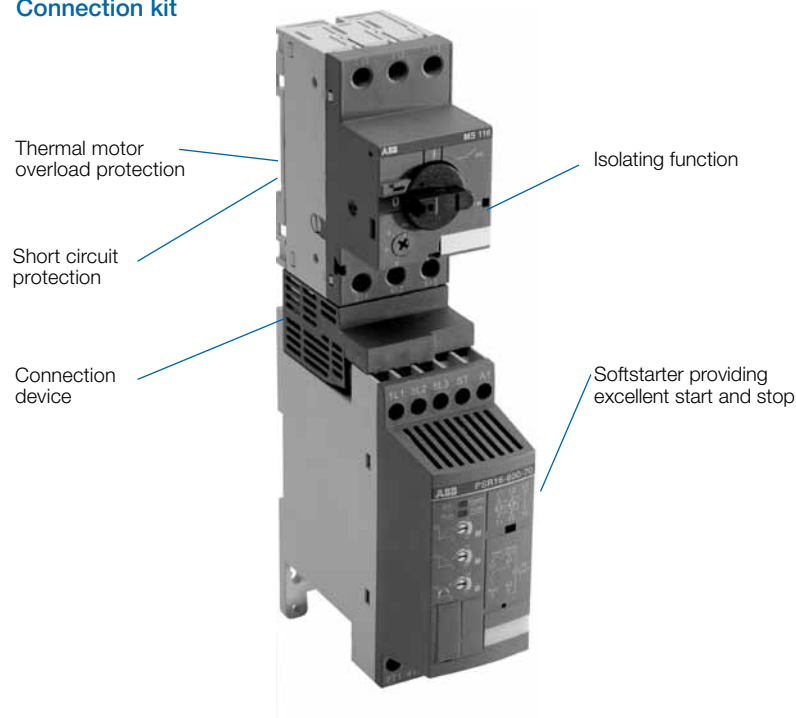

PSR – The compact range

Technical data

Rated insulation voltage U_i		600 V												
Rated operational voltage U_n		208...600 V +10 %/-15 %, 50/60 Hz ± 5 %												
Rated control supply voltage U_s		100...240 V AC, 50/60Hz ± 5 % or 24 V DC, +10 %/-15 %,												
Power consumption		PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
Supply circuit														
at 100-240 V AC		12 VA						10 VA						
at 24 V DC		5 W												
Max. Power loss at rated I_e		PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
		0.7 W	2.9 W	6.5 W	11.5 W	20.5 W	25 W	36 W	5.5 W	8.1 W	3.6 W	5.2 W	7.2 W	6.6 W
Starting capacity at I_e		4 x I_r for 6 sec.												
Number of starts per hour		See table on page 5.13.												
standard		10 ¹⁾												
with aux. fan		20 ¹⁾												
Service factor		100 %												
Ambient temperature														
during operation		-25 °C to + 60 °C (-13 to 140 °F) ²⁾												
during storage		-40 °C to + 70 °C (-40 to 158 °F)												
Maximum altitude		4000 m (13123 ft) ³⁾												
Degree of protection		PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
main circuit		IP20						IP10						
control circuit		IP20												
Connection		PSR3-PSR16					PSR25-PSR30		PSR37-PSR45		PSR60-PSR105			
main circuit														
cable area		1 x 2.5mm ²					1 x 2.5 - 10 mm ²		1 x 6 - 35 mm ²		1 x 10 - 95 mm ²			
		1 x 14 AWG					1 x 12 - 8 AWG		1 x 8 - 4 AWG		1 x 6 - 2/0 AWG			
tightening torque		1 Nm - 9 lb.in					2.3 Nm - 20 lb.in		4.0 Nm - 35 lb.in		8.0 Nm - 71 lb.in			
control circuit		PSR3-PSR16					PSR25-PSR105							
cable area		1 x 1.5 - 2.5 mm ²					1 x 1.5 - 2.5 mm ²							
		2 x 1.5 mm ²					2 x 1.5 mm ²							
		1 x 16 - 14 AWG					1 x 16 - 14 AWG							
		2 x 16 AWG					2 x 16 AWG							
tightening torque		1 Nm - 9 lb.in					0.6 Nm - 5 lb.in							
Signal relays		PSR3-PSR16					PSR25-PSR105							
for Run signal														
Resistive load		240 V AC, 3 A / 24 V DC, 3 A					240 V AC, 3 A / 24 V DC, 3 A							
AC-15 (Contactor)		240 V AC, 0.5 A / 24 V DC, 0.5 A					240 V AC, 0.5 A / 24 V DC, 0.5 A							
for Top ramp signal														
Resistive load		-					240 V AC, 3 A / 24 V DC, 3 A							
AC-15 (Contactor)		-					240 V AC, 0.5 A / 24 V DC, 0.5 A							
LED														
for On/Ready		Green												
for Run/Top Of Ramp		Green												
Settings														
Ramp time during start		1-20 sec.												
Ramp time during stop		0-20 sec.												
Initial- and End Voltage		40-70%												

¹⁾ Valid for 50 % on time and 50 % off time. 4 x I_e for 6 sec., if other data is required, contact your sales office.

²⁾ Above 40 °C (104 °F) up to max. 60 °C (140 °F) reduce the rated current with 0.8 % per °C (0.44 % per °F).

³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$\left[\% \text{ of } I_e = 100 - \frac{x - 1000}{150} \right] \quad x = \text{actual altitude for the softstarter in meter}$$

$$\left[\% \text{ of } I_e = 100 - \frac{x - 3280}{497} \right] \quad x = \text{actual altitude for the softstarter in feet}$$

PSR – The compact range

Technical data

Softstarters
Type PSR

Number of starts per hour using PSR softstarters

Motor
current
 I_e

Starts/hour without auxiliary fan

I _e	10	20	30	40	50	60	80	100
3 A	PSR3							PSR6
6 A	PSR6					PSR9		
9 A	PSR9			PSR12		PSR16	PSR25	
12 A	PSR12		PSR16	PSR25		PSR30		
16 A	PSR16	PSR25		PSR30		PSR37		
25 A	PSR25	PSR30	PSR37		PSR45		PSR60	
30 A	PSR30	PSR37		PSR45		PSR60		PSR72
37 A	PSR37	PSR45		PSR60		PSR72	PSR85	PSR105
45 A	PSR45		PSR60		PSR72	PSR85	PSR105	-
60 A	PSR60		PSR72	PSR85	PSR105		-	-
72 A	PSR72	PSR85	PSR105		-	-	-	-
85 A	PSR85	PSR105		-	-	-	-	-
105 A	PSR105	-	-	-	-	-	-	-

Starts/hour with auxiliary fan

	10	20	30	40	50	60	80	100
	PSR3							
	PSR6							PSR9
	PSR9				PSR12			
	PSR12			PSR16		PSR25		
	PSR16	PSR25			PSR30			
	PSR25	PSR30	PSR37			PSR45		
	PSR30	PSR37		PSR45				
	PSR37	PSR45				PSR60		
	PSR45		PSR60			PSR72		
	PSR60		PSR72		PSR85	PSR105	-	
	PSR72		PSR85	PSR105		-		-
	PSR85	PSR105		-	-	-		-
	PSR105	-	-	-	-	-		-

Data based on an ambient temperature of 40 °C (104 °F), starting current of $4 \times I_e$ and ramp time 6 seconds.
For more optimized selections, or to use PSR for heavy duty starts, please use the softstarter selection program, prosoft.

5

Notes



Product description

- Wide rated operational voltage 208 – 600 V AC
- Wide rated control supply voltage 100 – 250 V, 50/60 Hz
- Rated operational current 18 to 370 A
- Wide ambient temperature range, -25 to +60 °C (-13 to 140 °F)
- Coated circuit boards for reliable operation in harsh environment
- Built-in by-pass on all sizes, saving energy and reducing installation time
- User friendly HMI with illuminated language neutral display and four button keypad
- Optional external keypad, IP66
- Torque control for excellent control of pumps
- Current limit, adjustable between $1.5 - 7 \times I_e$
- Motor overload protection with classes 10A, 10, 20 and 30
- Motor underload protection to detect pumps running dry
- Locked rotor protection, detecting jammed pumps
- Kick start to start jammed pumps or conveyor belts
- Analog output showing operational current, 4 – 20 mA
- Optional fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- Sophisticated algorithm eliminating the DC-component and thereby providing excellent starting performance.

PSE – The efficient range

Description

5

The PSE softstarter range is the world's first compact softstarters with Torque Control. This makes the PSE range an excellent choice for pumping application where water hammering normally is a big problem. With its compact design and advanced functionality, the PSE is also a very efficient solution for other common applications such as compressors and fans.

Torque control

The most important function when stopping pumps is torque control. Since the PSE softstarter is optimized for controlling pumps, this feature is a must.

Built-in by-pass for energy saving

Using the built-in by-pass after reaching full voltage will greatly reduce the power loss and thereby save energy. In the PSE softstarter range, the by-pass is built-in on all sizes, which will give the most compact starting solution and reduce the need for wiring during installation.

Coated circuit boards

All circuit boards in the new PSE softstarter have a protective coating to ensure a reliable operation even in tough environments like wastewater plants, where corrosive gases and acids may exist.

Motor protection

The PSE softstarter is equipped with built-in electronic overload protection, protecting the motor from overheating. Since no additional overload device is needed, our efficient design saves both space, installation time, and ultimately money.

Analog output

The analog output terminals can be connected to an analog current meter to show the current during operation and thereby eliminating the need for an additional current transformer. The analog output signal can also be used as an analog input to a PLC.

Display and keypad

The set-up of the PSE softstarter is done by using the four button keypad and the illuminated display, providing a quick and easy set-up. While operating, the display will also provide important status information such as current and voltage.

External keypad


As an option the PSE softstarter can be equipped with an external keypad for easy set-up and monitoring of the unit without opening the enclosure door. The keypad can also be used to copy parameters between different softstarters.

PSE – The efficient range



Description

The PSE Softstarter can be selected according to the rated motor power in normal duty applications like pumps, compressors, elevators, escalators, short conveyor belts and bow thrusters. See page 5.20.

For heavy duty applications like centrifugal fans, crushers, mixers, mills, stirrers and long conveyor belts, select a softstarter from page 5.21. The softstarter selection tool prosoft can also be used for a more optimized selection.

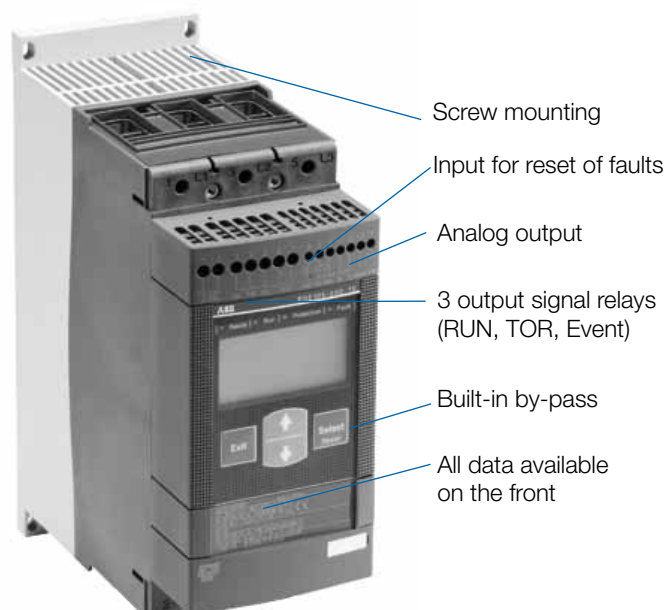

Settings

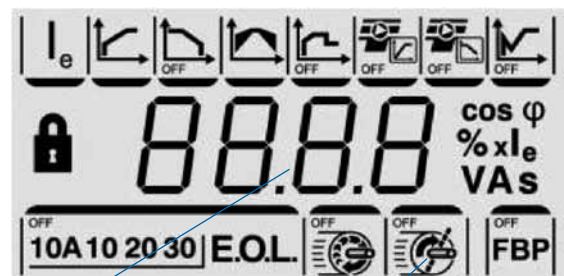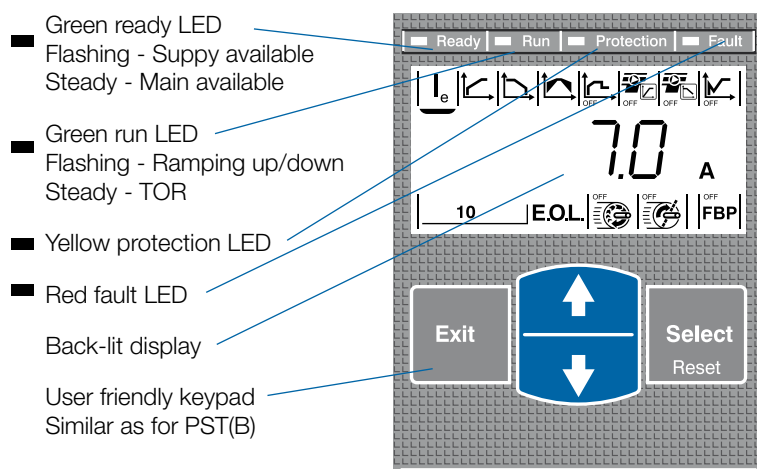

Four digits showing values and messages

Icon's for showing functions. Language neutral

PSE – The efficient range Overview

5



PSE18 ... PSE105

Normal start In-line connected (480 V) hp (600 V) hp UL/CSA, Max FLA	Softstarter								
	PSE18	PSE25	PSE30	PSE37	PSE45	PSE60	PSE72	PSE85	PSE105
	10	15	20	25	30	40	50	60	75
	15	20	25	30	40	50	60	75	100
	18	25	28	34	42	60	68	80	104
Using MCCB only, type 1 coordination will be achieved									
MCCB (25 kA/600V, 35 kA/480V, 40°C)									
T3S070TW		T3S100TW		T3S125TW	T3S150TW	T3S225TW	T4S250TW	T5S300TW	
Using J fuses, type 1 coordination will be achieved									
J type fuse protection (85 kA)									
175 % rating	30 A	40 A	45 A	50 A	70 A	100 A	110 A	125 A	175 A
Max rating	40 A	50 A	60 A	80 A	100 A	125 A	150 A	175 A	225 A
Minimum enclosure size ¹⁾ 600 x 500 x 300 mm / 24 x 20 x 12 in									
Fusible disconnect switch									
Fusible disconnect switch for the above J fuses	OS30	OS60			OS100		OS200		
Line contactor									
The line contactor is not required for the softstarter itself but often used to open if OL trips	AF26		AF30	AF50		AF63	AF75	AF95	AF110
Electronic overload relay									
Overload protection is used to protect the motor from over heating	Built-in								
By-pass									
The by-pass will reduce the power loss of the softstarter	Built-in								

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PSE – The efficient range

Overview

Softstarters
Type PSE

5



PSE142 ... PSE170

PSE210 ... PSE370

Normal start
In-line connected

(480 V) hp

(600 V) hp

UL/CSA, Max FLA

Softstarter

	PSE142	PSE170	PSE210	PSE250	PSE300	PSE370
(480 V) hp	100	125	150	200	250	300
(600 V) hp	125	150	200	250	300	350
UL/CSA, Max FLA	130	169	192	248	302	361

Using MCCB only, type 1
coordination will be achieved

MCCB (25 kA/600V, 35 kA/480V, 40°C)

MCCB (25 kA/600V, 50 kA/480V, 40°C)

Max rating

T5S400BW

T6S600BW

T6S800BW

Using J fuses, type 1
coordination will be
achieved

175 % rating

Max rating

J type fuse protection (85 kA)

225 A	250 A	300 A	400 A	500 A	600 A
300 A	350 A	450 A	500 A	600 A	700 A

Minimum enclosure size ¹⁾

900 x 760 x 300 mm /
36 x 30 x 12 in

1200 x 900 x 300 mm / 48 x 36 x 12 in

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch

OS400

OS600

The line contactor is not
required for the softstarter
itself but often used to open
if OL trips

Line contactor

AF145

AF185

AF210

AF260

AF300

AF400

Overload protection is used
to protect the motor from
over heating

Electronic overload relay

Built-in

The by-pass will reduce the
power loss of the softstarter

By-pass

Built-in

How to select correct size

By using the guide here, you can quickly
select a suitable softstarter for the most
common applications.

If a more precise selection is required,
you can use prosoft, a selection software
available at www.abb.com/lowvoltage

Quick guide for selection

Normal start Class 10

Heavy duty start class 30

Ordering - see page 5.20

Ordering - see page 5.21

Typical applications

- Bow thruster
- Centrifugal pump
- Centrifugal fan
- Conveyor belt (long)
- Compressor
- Conveyor belt (short)
- Crusher
- Mill
- Elevator
- Escalator
- Mixer
- Stirrer

! If more than 10 starts/h
Select one size larger than the standard selection

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PSE – The efficient range

Normal starts, class 10, in-line, ordering details

PSE18 ... PSE370

Rated operational voltage, U_e , 208 - 600 V AC

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PSE18 ... PSE105



PSE142 ... PSE170



PSE210 ... PSE370

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Weight kg (lb)	Catalog number
4	7.5	11	5	5	10	15	18	2.4 (5.29)	PSE18-600-70
5.5	11	15	7.5	7.5	15	20	25	2.4 (5.29)	PSE25-600-70
7.5	15	18.5	7.5	10	20	25	28	2.4 (5.29)	PSE30-600-70
9	18.5	22	10	10	25	30	34	2.4 (5.29)	PSE37-600-70
11	22	30	10	15	30	40	42	2.4 (5.29)	PSE45-600-70
15	30	37	20	20	40	50	60	2.4 (5.29)	PSE60-600-70
18.5	37	45	20	25	50	60	68	2.5 (5.51)	PSE72-600-70
22	45	55	25	30	60	75	80	2.5 (5.51)	PSE85-600-70
30	55	75	30	40	75	100	104	2.5 (5.51)	PSE105-600-70
40	75	90	40	50	100	125	130	4.2 (9.26)	PSE142-600-70
45	90	110	60	60	125	150	169	4.2 (9.26)	PSE170-600-70
59	110	132	60	75	150	200	192	12.4 (27.34)	PSE210-600-70
75	132	160	75	100	200	250	248	13.9 (30.64)	PSE250-600-70
90	160	200	100	100	250	300	302	13.9 (30.64)	PSE300-600-70
110	200	250	125	150	300	350	361	13.9 (30.64)	PSE370-600-70

PSE – The efficient range

Heavy duty starts, class 30, in-line, ordering details

PSE18 ... PSE370

Rated operational voltage, U_e , 208 - 600 V AC

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PSE18 ... PSE105



PSE142 ... PSE170



PSE210 ... PSE370

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Weight kg (lb)	Catalog number
3	5.5	7.5	3	3	7.5	10	11	2.4 (5.29)	PSE18-600-70
4	7.5	11	5	5	10	15	18	2.4 (5.29)	PSE25-600-70
5.5	11	15	7.5	7.5	15	20	25	2.4 (5.29)	PSE30-600-70
7.5	15	18.5	7.5	7.5	20	25	28	2.4 (5.29)	PSE37-600-70
9	18.5	22	10	10	25	30	34	2.4 (5.29)	PSE45-600-70
11	22	30	15	15	30	40	42	2.4 (5.29)	PSE60-600-70
15	30	37	20	20	40	50	60	2.5 (5.51)	PSE72-600-70
18.5	37	45	25	25	50	60	68	2.5 (5.51)	PSE85-600-70
22	45	55	30	30	60	75	80	2.5 (5.51)	PSE105-600-70
30	55	75	40	40	75	100	104	4.2 (9.26)	PSE142-600-70
40	75	90	50	50	100	125	130	4.2 (9.26)	PSE170-600-70
45	90	110	60	60	125	150	169	12.4 (27.34)	PSE210-600-70
59	110	132	75	75	150	200	192	13.9 (30.64)	PSE250-600-70
75	132	160	75	75	200	250	248	13.9 (30.64)	PSE300-600-70
90	160	200	125	125	250	300	302	13.9 (30.64)	PSE370-600-70

PSE – The efficient range

Accessories

5



ATK...

Cable connectors for Al and Cu cables

For softstarter type	Wire range mm ² (AWG)	Tightening torque max. Nm (lb-in)	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSE142 ...170	25-150 (4 AWG - 300 MCM)	13.5 (275 lb-in)	3	0.100 (0.220)	ATK185
PSE210 ... 370	25-185 (4 AWG - 400 MCM)	43 (375 lb-in)	3	0.168 (0.370)	ATK300
PSE210 ... 370	2 x 25-240 (2 x 4 AWG - 500 MCM)	43 (375 lb-in)	3	0.434 (0.957)	ATK300/2



LW...



LE185



LT ... -AL



PSEK



PS-FBPA

Terminal enlargements

For softstarter type	Dimensions hole ø mm (in)	Bar mm (in)	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSE142...170	10.5 (0.413)	20 x 5 (0.787 x 0.197)	1	0.450 (0.992)	LW185
PSE210...370	13 (0.512)	40 x 6 (1.575 x 0.236)	1	1.230 (2.712)	LW300

Terminal nut washer kits ¹⁾

For softstarter type	Req. qty	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSE142...170	2	2	0.200 (0.441)	LE185
PSE210...370	2	2	0.300 (0.661)	LE300

Terminal shrouds

For softstarter type	Suitable for	Req. qty	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSE142...170	Compression lugs	2	2	0.220 (0.485)	LT185-AL
PSE210...370	Compression lugs	2	2	0.280 (0.617)	LT300-AL ²⁾

External keypad including a 3m cable

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PSE18...370	1	–	PSEK

Fieldbus plug connection accessory

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
The same accessory for all sizes	1	0.060 (0.132)	PS-FBPA

ABB Field Bus Plug suitable for all sizes. See page 5.40 - 5.43

¹⁾ The terminal nut washer kits come standard with the PSE unit.

²⁾ The LT300-AL is not compatible with ATK300/2 cable connector.

PSE – The efficient range

Technical data

Softstarters
Type PSE

Rated insulation voltage U_i	600 V
Rated operational voltage U_e	208 ... 600 V +10 %/-15 %
Rated control supply voltage U_s	100 ... 250 V +10 %/-15 %, 50/60 Hz ± 5 %
Rated control circuit voltage U_c	Internal 24 V DC
Starting capacity	$4xI_g$ for 10 sec.
Number of starts per hour	10^{-1}
Overload capability, Overload Class	10
Ambient temperature During operation	-25 ... +60 °C (-13 to 140 °F) ²⁾
During storage	-40 ... +70 °C (-40 to 158 °F)
Maximum Altitude	4000 m (13123 ft) ³⁾
Degree of protection Main circuit	IP00
Supply and Control circuit	IP20
Main circuit Built-in By-pass	Yes
Cooling system - Fan cooled (thermostat controlled)	Yes
HMI for settings Display	4 7-segments and icons. Illuminated
Keypad	2 selection keys and 2 navigation keys
Main settings Setting current	Size dependent
Ramp time during start	1-30 sec
Ramp time during stop	0-30 sec
Initial / end voltage	30-70%
Current limit	$1,5-7xI_g$
Torque control for start	Yes / No
Torque control for stop	Yes / No
Kick start	Off, 30-100%
Signal relays Number of signal relays	3
K2	Run signal
K3	TOR (By-pass) signal
K1	Event signal
Rated operational voltage U_e	250 V AC / 24 V DC ⁴⁾
Rated thermal current I_{th}	3 A
Rated operational current I_g at AC-15 ($U_e = 250$ V)	1.5 A

Analog output

Output signal reference	4 ... 20 mA
Type of output signal	I Amp
Scaling	Fixed at $1.2 \times I_g$

Control circuit

Number of inputs	3 (start, stop, reset of faults)
------------------	----------------------------------

Signal indication LED's

On / Ready	Green flashing / steady
Run / TOR	Green flashing / steady
Protection	Yellow
Fault	Red

Protections


Electronic overload	Yes (Class 10A, 10, 20, 30)
Locked rotor protection	Yes
Underload protection	Yes

Field bus connection

Connection for ABB FieldBusPlug	Yes (option)
------------------------------------	--------------

External keypad

Display LCD type	
Ambient temperature during operation	-25 ... +60 °C (-13 to 140 °F)
during storage	-40 ... +70 °C (-40 to 158 °F)
Degree of protection	IP66

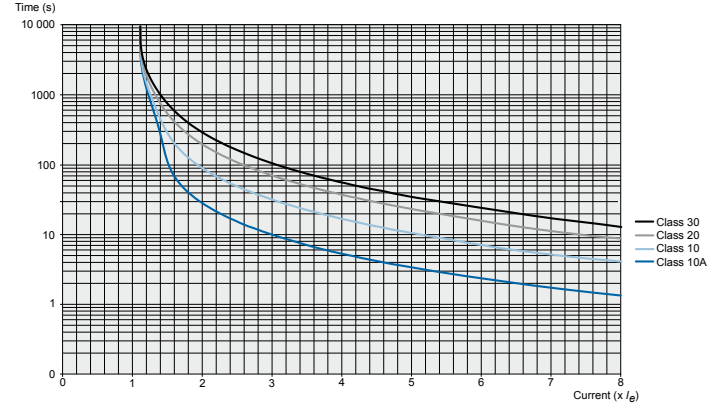

Tripping curves for electronic overload protection (Cold)

¹⁾ Valid for 50 % on time and 50 % off time, with $3.5 \times I_g$ for 7 seconds. If other data is required, please contact your sales office

²⁾ Above 40 °C (104 °F) up to max. 60 °C (140 °F) reduce the rated current with 0.6 % per °C (0.33 % per °F).

³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$[\% \text{ of } I_g = 100 - \frac{x - 1000}{150}] \quad x = \text{actual altitude for the softstarter in meter}$$





$$[\% \text{ of } I_g = 100 - \frac{x - 3280}{497}] \quad x = \text{actual altitude for the softstarter in feet}$$

⁴⁾ A common voltage needs to be used for all 3 signal relays.

PSE – The efficient range

Technical data

Cross section of connection cables

		Softstarter PSE18 ... PSE105	PSE142 ... PSE170	PSE210 ... PSE370
Main circuit				
Connection clamp				
Solid/stranded	1 x mm ² (AWG)	2.5 – 70 (14-1/0)	See accessories	
Solid/stranded	2 x mm ² (AWG)	2.5 – 70 (14-1/0)	See accessories	
Tightening torque (recommended)	Nm (lb-in)	9 (79.66)	See accessories	
Connection bar				
Width and thickness	mm (in)	13 (0.512) x 3 (0.118)	17.5 (0.689) x 5 (0.197)	20 (0.787) x 5 (0.197)
Hole diameter	mm (in)	6.5 (0.256)	8.5 (0.335)	10.2 (0.402)
Tightening torque (recommended)	Nm (lb-in)	9 (79.66)	18 (159.31)	28 (247.82)
Supply and control circuit				
Connection clamp				
Solid/stranded	1 x mm ² (AWG)	2.5 (14)	2.5 (14)	2.5 (14)
Solid/stranded	2 x mm ² (AWG)	1.5 (16)	1.5 (16)	1.5 (16)
Tightening torque (recommended)	Nm (lb-in)	0.5 (4.43)	0.5 (4.43)	0.5 (4.43)

Semi-conductor fuse ratings and power losses

For Softstarter	Overload protection		Max power loss at rated I _B (Internal by-pass)	Max semi-conductor fuse rating - main circuit Coordination type 2 (85 kA)			Supply circuit power requirements ¹⁾
	Type	Current range A		Bussman Fuses, DIN43 620			
				A	Type	Size	VA/VA pull in
PSE							
PSE18	Integrated	5.4-18	0.2	40	170M1563	000	16
PSE25	Integrated	7.5-25	0.4	50	170M1564	000	16
PSE30	Integrated	9-30	0.5	80	170M1566	000	16
PSE37	Integrated	11.1-37	0.8	100	170M1567	000	16
PSE45	Integrated	13.5-45	1.2	125	170M1568	000	16
PSE60	Integrated	18-60	2.2	160	170M1569	000	16
PSE72	Integrated	21.6-72	3.1	250	170M1571	000	16
PSE85	Integrated	25.5-85	4.3	315	170M1572	000	16
PSE105	Integrated	31.8-106	6.6	400	170M3819	1	16
PSE142	Integrated	42.9-143	12.1	450	170M5809	2	16
PSE170	Integrated	51.3-171	17.6	500	170M5810	2	16
PSE210	Integrated	63-210	8.8	630	170M5812	2	23/350
PSE250	Integrated	75-250	12.5	700	170M5813	2	23/350
PSE300	Integrated	90.6-302	18	800	170M6812	3	23/350
PSE370	Integrated	111-370	27.4	900	170M6813	3	23/350

¹⁾ For the supply circuit use a maximum 6 A time-delay fuse or an MCB with type C characteristics.



Description

- Wide rated operational voltage 208 – 690 V AC
- Wide rated control supply voltage 100 – 250 V, 50/60 Hz
- Rated operational current 30 to 1050 A (Up to 1810 A inside delta)
- Wide ambient temperature range, -25 to +50 °C (-13 to 122 °F)
- Both in line and inside delta connection
- Coated circuit boards available, for reliable operation even in harsh environments
- Full text display in 14 languages and 4 button keypad for easy set-up and operation
- Optional external keypad, IP66
- Built-in by-pass contactor on PSTB (from 370 A) for energy saving and easy installation
- Prepared for external by-pass on PST (30 – 300 A)
- Torque Control for excellent control of pumps
- Current limit, adjustable between $1.5 - 7 \times I_g$
- Fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- Dual motor overload protection with classes 10A, 10, 20 and 30
- Adaptable motor underload protection to detect pumps running dry
- Adaptable locked rotor protection to detect jammed pumps
- PTC protection to protect the motor from overheating
- Adjustable kick start to start jammed pumps
- Programmable output signal relays
- Programmable pre-warning functions
- Event log with time stamp
- Analog output showing current, voltage, power factor etc.
0 – 10 V, 0 – 20 mA, 4 – 20 mA

PST(B) – The advanced range Description

The PST(B) softstarter is the most advanced softstarter in the ABB product portfolio and is equipped with almost all imaginable features. This makes the PST(B) ideal for almost every application.

Torque Control

- 5 The ABB torque control function is developed together with pump manufacturers to ensure the best possible pump stop, eliminating problems with water hammering and pressure surges.

By-pass for energy saving

By-passing the softstarter after reaching full voltage, will save energy and reduce the heat generation. The PST softstarters are equipped with extra terminals making the connection of an external by-pass contactor easier and allowing all protections to be active during by-pass. On the PSTB softstarters, an ABB AF-contactor is already built-in, ensuring a compact starting solution with minimal wiring during installation.

Advanced protections

The PST(B) softstarters are equipped with almost all protections imaginable for protecting the motor, the softstarter and the application. To offer more flexibility, all protections can be tailored to your specific needs.

Flexible analog output

The analog output terminals can be connected to an analog current meter to show the current during operation and thereby eliminating the need for an additional current transformer. The analog output signal can also be used as an analog input to a PLC.

Fieldbus communication

Using the ABB FieldBusPlug, all the most common fieldbus protocols are supported. Using the PLC system it is possible to set-up the softstarter, read status information and also to control the softstarter.

Display and keypad



The PST(B) softstarter is equipped with a full text display showing all information in clear text in your own language. To make it even easier to set-up, there are standard settings for many common applications, such as centrifugal pump. Selecting this will automatically provide all required settings including torque control when stopping.

External keypad

As an option, the PST(B) softstarter can be equipped with an external keypad for easy set-up and monitoring of the unit without opening the enclosure door. The keypad can also be used to copy parameters between different softstarters.

PST(B) – The advanced range Description

The PST Softstarter can be selected according to the rated motor power in normal duty applications like pumps, compressors, elevators, escalators, short conveyor belts and bow thrusters. See page 5.30 - 5.31, For heavy duty applications like centrifugal fans, crushers, mixers, mills, stirrers and long conveyor belts, select a softstarter from page 5.32 - 5.33. The softstarter selection tool prosoft can also be used for a more optimized selection.

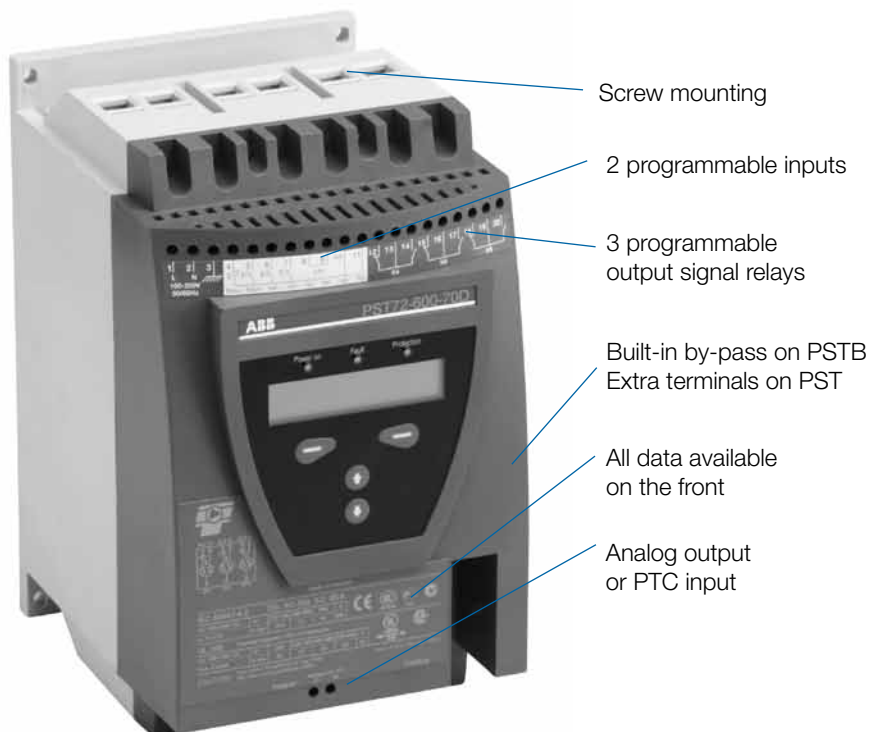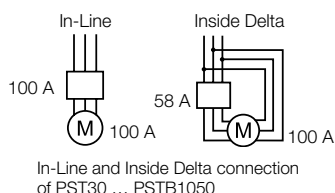

5



- Green on LED
- Yellow protection LED
- Red fault LED

Full text display in 14 languages

User friendly keypad

Pre set application settings



External keypad with same design as the fixed one

PST(B) – The advanced range

Overview

5



PST30 ... PST72

PST85 ... PST142

Normal start
In-Line connected

Softstarter

(480 V) hp
(600 V) hp
UL/CSA, Max FLA

PST30	PST37	PST44	PST50	PST60	PST72	PST85	PST105	PST142
20	25	30	40	40	50	60	75	100
25	30	40	50	50	60	75	100	125
28	34	42	54	60	68	80	104	130

Using MCCB only, type 1
coordination will be achieved

MCCB (10kA, 480-600 V, 40 °C)

Ts3	T4
-----	----

Using J fuses, type 1
coordination will be
achieved 175 % rating

J type fuse protection (85 kA)

Max rating

45 A	50 A	70 A	90 A	100 A	110 A	125 A	175 A	225 A
90 A	110 A	150 A	175 A	225 A		250 A	350 A	400 A

Minimum enclosure size ¹⁾

500 x 500 x 300 mm / 20 x 20 x 12 in	600 x 500 x 300 mm / 24 x 20 x 12 in
--------------------------------------	--------------------------------------

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch

OS60	OS100	OS200	OS400
------	-------	-------	-------

The line contactor is not
required for the softstarter
itself but often used to
open if OL trips

Line contactor

AF30	AF50	AF63	AF75	AF95	AF110	AF145
------	------	------	------	------	-------	-------

Overload protection is used
to protect the motor from
over heating

Electronic overload relay

Built-in

The bypass contactor will
reduce the power loss of
the softstarter. All softstart-
ers can be operated without
by-pass

By-pass contactor (AC-1)

AF16	AF26	AF30	AF50	AF75	AF110
------	------	------	------	------	-------

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PST(B) – The advanced range

Overview

Softstarters
Type PST



5

	PST175 ... PST300				PSTB370 ... PSTB470		PSTB570 ... PSTB1050					
Normal start In-Line connected	Softstarter											
	PST175	PST210	PST250	PST300	PSTB370	PSTB470	PSTB570	PSTB720	PSTB840	PSTB1050		
	(480 V) hp	125	150	200	250	300	400	500	600	700	900	
	(600 V) hp	150	200	250	300	350	500	600	700	800	1000	
	UL/CSA, Max FLA	156	192	248	302	361	480	590	720	840	1062	
Using MCCB only, type 1 coordination will be achieved	MCCB (18 kA, 480-600 V, 40 °C)				MCCB (30 kA, 480-600 V, 40 °C)			MCCB (42 kA, 480-600 V, 40 °C)				
	T4	T5			T6			T7		T8		
Using J or L fuses, type 1 coordination will be achieved	J or L type fuse protection (85 kA)											
	250 A	300 A	400 A	500 A	600 A	800 A	1000 A	1200 A	1400 A	1800 A		
	175 % rating		250 A	300 A	400 A	500 A	600 A	800 A	1000 A	1200 A	1400 A	1800 A
	Max rating		400 A		450 A	600 A	700 A	1200 A		-	-	
	Minimum enclosure size ¹⁾		760 x 760 x 300 mm / 30 x 30 x 12 in				1220 x 915 x 407 mm /48 x 36 x 16 in					
Fusible disconnect switch for the above J fuses	Fusible disconnect switch											
	OS400			OS600		OS800	OS1200		-	-		
The line contactor is not required for the softstarter itself but often used to open if OL trips	Line contactor											
	AF185	AF210	AF260	AF300	AF400	AF580		AF750	AF1350	AF1650		
Overload protection is used to protect the motor from over heating	Electronic overload relay											
	Built-in											
The bypass contactor will reduce the power loss of the softstarter. All softstart- ers can be operated without by-pass	By-pass contactor (AC-1)											
	AF145		AF185	AF210	Built-in							

How to select correct size

By using the guide here, you can quickly select a suitable softstarter for the most common applications.

If a more precise selection is required, you can use prosoft, a selection software available at www.abb.com/lowvoltage

Quick guide for selection

Normal start Class 10	Heavy duty start class 30
Ordering - see page 5.30 - 5.31	Ordering - see page 5.32 - 5.33
Typical applications	
• Bow thruster • Compressor • Elevator	• Centrifugal pump • Conveyor belt (short) • Escalator • Centrifugal fan • Crusher • Mixer • Conveyor belt (long) • Mill • Stirrer
! If more than 10 starts/h Select <u>one</u> size larger than the standard selection	

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PST(B) – The advanced range

Normal starts, class 10, In-Line, ordering details

PST30 ... PSTB1050

Rated operational voltage U_o , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_o A	Weight kg (lb)	Catalog number ^{*)}
15	18.5	-	7.5	10	20	25	28	4.80 (10.58)	PST30-600-70□
18.5	22	-	10	10	25	30	34	4.80 (10.58)	PST37-600-70□
22	25	-	10	15	30	40	42	4.80 (10.58)	PST44-600-70□
25	30	-	15	20	40	50	54	4.80 (10.58)	PST50-600-70□
30	37	-	20	20	40	50	60	5.00 (11.02)	PST60-600-70□
37	45	-	20	25	50	60	68	5.00 (11.02)	PST72-600-70□
45	55	-	25	30	60	75	80	11.20 (24.69)	PST85-600-70□
55	75	-	30	40	75	100	104	13.00 (28.66)	PST105-600-70□
75	90	-	40	50	100	125	130	13.00 (28.66)	PST142-600-70□
90	110	-	50	60	125	150	156	21.50 (47.40)	PST175-600-70□
110	132	-	60	75	150	200	192	21.50 (47.40)	PST210-600-70□
132	160	-	75	100	200	250	248	23.00 (50.71)	PST250-600-70□
160	200	-	100	100	250	300	302	23.00 (50.71)	PST300-600-70□
200	257	-	125	150	300	350	361	31.00 (68.34)	PSTB370-600-70□
250	315	-	150	200	400	500	480	31.00 (68.34)	PSTB470-600-70□
315	400	-	200	250	500	600	590	52.00 (114.64)	PSTB570-600-70□
400	500	-	250	300	600	700	720	55.00 (121.25)	PSTB720-600-70□
450	600	-	300	350	700	800	840	60.00 (133.28)	PSTB840-600-70□
560	730	-	400	450	900	1000	1062	60.00 (133.28)	PSTB1050-600-70□

PST30 ... PSTB1050

Rated operational voltage U_o , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

15	18.5	25	-	-	20	25	28	4.80 (10.58)	PST30-690-70□
18.5	22	30	-	-	25	30	34	4.80 (10.58)	PST37-690-70□
22	25	37	-	-	30	40	42	4.80 (10.58)	PST44-690-70□
25	30	45	-	-	40	50	54	4.80 (10.58)	PST50-690-70□
30	37	55	-	-	40	50	60	5.00 (11.02)	PST60-690-70□
37	45	59	-	-	50	60	68	5.00 (11.02)	PST72-690-70□
45	55	75	-	-	60	75	80	11.20 (24.69)	PST85-690-70□
55	75	90	-	-	75	100	104	13.00 (28.66)	PST105-690-70□
75	90	132	-	-	100	125	130	13.00 (28.66)	PST142-690-70□
90	110	160	-	-	125	150	156	21.50 (47.40)	PST175-690-70□
110	132	184	-	-	150	200	192	21.50 (47.40)	PST210-690-70□
132	160	220	-	-	200	250	248	23.00 (50.71)	PST250-690-70□
160	200	257	-	-	250	300	302	23.00 (50.71)	PST300-690-70□
200	257	355	-	-	300	350	361	31.00 (68.34)	PSTB370-690-70□
250	315	450	-	-	400	500	480	31.00 (68.34)	PSTB470-690-70□
315	400	560	-	-	500	600	590	52.00 (114.64)	PSTB570-690-70□
400	500	710	-	-	600	700	720	55.00 (121.25)	PSTB720-690-70□
450	600	800	-	-	700	800	840	60.00 (133.28)	PSTB840-690-70□
560	730	1000	-	-	900	1000	1062	60.00 (133.28)	PSTB1050-690-70□

^{*)} Add code letter in Type acc. to below:

□ No code letter = Normal
T = Coated PCBs



PST(B) – The advanced range

Normal starts, class 10, Inside Delta, ordering details

Softstarters
Type PST

PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_o A	Weight kg (lb)	Catalog number *)
25	30	-	10	15	30	40	42	4.80 (10.58)	PST30-600-70□
30	37	-	15	20	40	50	54	4.80 (10.58)	PST37-600-70□
37	45	-	20	25	50	60	72	4.80 (10.58)	PST44-600-70□
45	55	-	25	30	60	75	80	4.80 (10.58)	PST50-600-70□
55	75	-	30	40	75	100	104	5.00 (11.02)	PST60-600-70□
59	80	-	30	40	75	100	104	5.00 (11.02)	PST72-600-70□
75	90	-	40	50	100	125	130	11.20 (24.69)	PST85-600-70□
90	110	-	50	60	125	150	156	13.00 (28.66)	PST105-600-70□
132	160	-	60	75	150	200	192	13.00 (28.66)	PST142-600-70□
160	200	-	75	100	200	250	248	21.50 (47.40)	PST175-600-70□
184	250	-	100	100	250	300	302	21.50 (47.40)	PST210-600-70□
220	295	-	125	150	300	350	361	23.00 (50.71)	PST250-600-70□
257	355	-	150	200	400	500	480	23.00 (50.71)	PST300-600-70□
355	450	-	200	250	500	600	590	31.00 (68.34)	PSTB370-600-70□
450	600	-	250	300	600	700	720	31.00 (68.34)	PSTB470-600-70□
540	700	-	300	350	700	800	840	52.00 (114.64)	PSTB570-600-70□
710	880	-	400	500	1000	1200	1247	55.00 (121.25)	PSTB720-600-70□
800	1000	-	500	600	1200	1500	1454	60.00 (133.28)	PSTB840-600-70□
1000	1250	-	600	700	1500	1800	1839	60.00 (133.28)	PSTB1050-600-70□

PST30 ... PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

25	30	45	-	-	30	40	42	4.80 (10.58)	PST30-690-70□
30	37	55	-	-	40	50	54	4.80 (10.58)	PST37-690-70□
37	45	59	-	-	50	60	72	4.80 (10.58)	PST44-690-70□
45	55	75	-	-	60	75	80	4.80 (10.58)	PST50-690-70□
55	75	90	-	-	75	100	104	5.00 (11.02)	PST60-690-70□
59	80	110	-	-	75	100	104	5.00 (11.02)	PST72-690-70□
75	90	132	-	-	100	125	130	11.20 (24.69)	PST85-690-70□
90	110	160	-	-	125	150	156	13.00 (28.66)	PST105-690-70□
132	160	220	-	-	150	200	192	13.00 (28.66)	PST142-690-70□
160	200	257	-	-	200	250	248	21.50 (47.40)	PST175-690-70□
184	250	315	-	-	250	300	302	21.50 (47.40)	PST210-690-70□
220	295	400	-	-	300	350	361	23.00 (50.71)	PST250-690-70□
257	355	500	-	-	400	500	480	23.00 (50.71)	PST300-690-70□
355	450	600	-	-	500	600	590	31.00 (68.34)	PSTB370-690-70□
450	600	800	-	-	600	700	720	31.00 (68.34)	PSTB470-690-70□
540	700	960	-	-	700	800	840	52.00 (114.64)	PSTB570-690-70□
710	880	1200	-	-	1000	1200	1247	55.00 (121.25)	PSTB720-690-70□
800	1000	1400	-	-	1200	1500	1454	60.00 (133.28)	PSTB840-690-70□
1000	1250	1700	-	-	1500	1800	1839	60.00 (133.28)	PSTB1050-690-70□

*) Add code letter in Type acc.
to below:
□ No code letter = Normal
T = Coated PCBs



PST(B) – The advanced range

Heavy Duty, class 30, In-Line, ordering details

PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_s A	Weight kg (lb)	Catalog number ^{*)}
11	15	-	5	7.5	15	20	25	4.80 (10.58)	PST30-600-70□
15	18.5	-	7.5	10	20	25	28	4.80 (10.58)	PST37-600-70□
18.5	22	-	10	10	25	30	34	4.80 (10.58)	PST44-600-70□
22	25	-	10	15	30	40	42	4.80 (10.58)	PST50-600-70□
25	30	-	15	20	40	50	54	5.00 (11.02)	PST60-600-70□
30	37	-	20	20	40	50	60	5.00 (11.02)	PST72-600-70□
37	45	-	20	25	50	60	68	11.20 (24.69)	PST85-600-70□
45	55	-	25	30	60	75	80	13.00 (28.66)	PST105-600-70□
55	75	-	30	40	75	100	104	13.00 (28.66)	PST142-600-70□
75	90	-	40	50	100	125	130	21.50 (47.40)	PST175-600-70□
90	110	-	50	60	125	150	156	21.50 (47.40)	PST210-600-70□
110	132	-	60	75	150	200	192	23.00 (50.71)	PST250-600-70□
132	160	-	75	100	200	250	248	23.00 (50.71)	PST300-600-70□
160	200	-	100	100	250	300	302	31.00 (68.34)	PSTB370-600-70□
200	257	-	125	150	300	350	361	31.00 (68.34)	PSTB470-600-70□
250	315	-	150	200	400	500	480	52.00 (114.64)	PSTB570-600-70□
315	400	-	200	250	500	600	590	55.00 (121.25)	PSTB720-600-70□
400	500	-	250	300	600	700	720	60.00 (133.28)	PSTB840-600-70□
450	600	-	300	350	700	800	840	60.00 (133.28)	PSTB1050-600-70□

PST30...PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

11	15	18.5	-	-	15	20	25	4.80 (10.58)	PST30-600-70□
15	18.5	25	-	-	20	25	28	4.80 (10.58)	PST37-600-70□
18.5	22	30	-	-	25	30	34	4.80 (10.58)	PST44-600-70□
22	25	37	-	-	30	40	42	4.80 (10.58)	PST50-600-70□
25	30	45	-	-	40	50	54	5.00 (11.02)	PST60-600-70□
30	37	55	-	-	40	50	60	5.00 (11.02)	PST72-600-70□
37	45	59	-	-	50	60	68	11.20 (24.69)	PST85-600-70□
45	55	75	-	-	60	75	80	13.00 (28.66)	PST105-600-70□
55	75	90	-	-	75	100	104	13.00 (28.66)	PST142-600-70□
75	90	132	-	-	100	125	130	21.50 (47.40)	PST175-600-70□
90	110	160	-	-	125	150	156	21.50 (47.40)	PST210-600-70□
110	132	184	-	-	150	200	192	23.00 (50.71)	PST250-600-70□
132	160	220	-	-	200	250	248	23.00 (50.71)	PST300-600-70□
160	200	257	-	-	250	300	302	31.00 (68.34)	PSTB370-600-70□
200	257	355	-	-	300	350	361	31.00 (68.34)	PSTB470-600-70□
250	315	450	-	-	400	500	480	52.00 (114.64)	PSTB570-600-70□
315	400	560	-	-	500	600	590	55.00 (121.25)	PSTB720-600-70□
400	500	710	-	-	600	700	720	60.00 (133.28)	PSTB840-600-70□
450	600	800	-	-	700	800	840	60.00 (133.28)	PSTB1050-600-70□

^{*)} Add code letter in Type acc.
to below:

□ No code letter = Normal
T = Coated PCBs



PST(B) – The advanced range

Heavy Duty, class 30, Inside Delta, ordering details

Softstarters
Type PST

PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_o A	Weight kg (lb)	Catalog number *)
18.5	25	-	7.5	10	25	30	34	4.80 (10.58)	PST30-600-70□
25	30	-	10	15	30	40	42	4.80 (10.58)	PST37-600-70□
30	37	-	15	20	40	50	54	4.80 (10.58)	PST44-600-70□
37	45	-	20	25	50	60	72	4.80 (10.58)	PST50-600-70□
45	55	-	25	30	60	75	80	5.00 (11.02)	PST60-600-70□
55	75	-	30	40	75	100	104	5.00 (11.02)	PST72-600-70□
59	80	-	40	40	75	100	104	11.20 (24.69)	PST85-600-70□
75	90	-	40	50	100	125	130	13.00 (28.66)	PST105-600-70□
90	110	-	50	60	125	150	156	13.00 (28.66)	PST142-600-70□
132	160	-	60	75	150	200	192	21.50 (47.40)	PST175-600-70□
160	200	-	75	100	200	250	248	21.50 (47.40)	PST210-600-70□
184	250	-	100	100	250	300	302	23.00 (50.71)	PST250-600-70□
220	295	-	125	150	300	350	361	23.00 (50.71)	PST300-600-70□
257	355	-	150	200	400	500	480	31.00 (68.34)	PSTB370-600-70□
355	450	-	200	250	500	600	590	31.00 (68.34)	PSTB470-600-70□
450	600	-	250	300	600	700	720	52.00 (114.64)	PSTB570-600-70□
540	700	-	300	350	700	800	840	55.00 (121.25)	PSTB720-600-70□
710	880	-	400	500	1000	1200	1247	60.00 (133.28)	PSTB840-600-70□
800	1000	-	500	600	1200	1500	1454	60.00 (133.28)	PSTB1050-600-70□

PST30...PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

18.5	25	37	-	-	25	30	34	4.80 (10.58)	PST30-690-70□
25	30	45	-	-	30	40	42	4.80 (10.58)	PST37-690-70□
30	37	55	-	-	40	50	54	4.80 (10.58)	PST44-690-70□
37	45	59	-	-	50	60	72	4.80 (10.58)	PST50-690-70□
45	55	75	-	-	60	75	80	5.00 (11.02)	PST60-690-70□
55	75	90	-	-	75	100	104	5.00 (11.02)	PST72-690-70□
59	80	110	-	-	75	100	104	11.20 (24.69)	PST85-690-70□
75	90	132	-	-	100	125	130	13.00 (28.66)	PST105-690-70□
90	110	160	-	-	125	150	156	13.00 (28.66)	PST142-690-70□
132	160	220	-	-	150	200	192	21.50 (47.40)	PST175-690-70□
160	200	257	-	-	200	250	248	21.50 (47.40)	PST210-690-70□
184	250	315	-	-	250	300	302	23.00 (50.71)	PST250-690-70□
220	295	400	-	-	300	350	361	23.00 (50.71)	PST300-690-70□
257	355	500	-	-	400	500	480	31.00 (68.34)	PSTB370-690-70□
355	450	600	-	-	500	600	590	31.00 (68.34)	PSTB470-690-70□
450	600	800	-	-	600	700	720	52.00 (114.64)	PSTB570-690-70□
540	700	960	-	-	700	800	840	55.00 (121.25)	PSTB720-690-70□
710	880	1200	-	-	1000	1200	1247	60.00 (133.28)	PSTB840-690-70□
800	1000	1400	-	-	1200	1500	1454	60.00 (133.28)	PSTB1050-690-70□

*) Add code letter in Type acc. to below:

□ No code letter = Normal
T = Coated PCBs



PST(B) – The advanced range Accessories

Terminal lug kits for Al and Cu cables

For PST(B)85...1050 without external bypass (line/load lugs and terminal nut washer)

For softstarter type	Wire range AWG	Tightening torque max. Nm (lb-in)	Packing piece	Catalog number
PST85 ...142	#6 - 250 MCM (1 per phase)	13.5 (275 lb-in)	6	PSLK-185
PST175 ...300	#4 - 400 MCM (1 per phase)	43 (375 lb-in)	6	PSLK-300
PST175...300	#4 - 500 MCM (2 per phase)	43 (375 lb-in)	6	PSLK-300/2
PSTB370...470	2/0 - 500 MCM (2 per phase)	43 (375 lb-in)	6	PSLK-580/2
PSTB570 ...1050	2/0 - 500 MCM (3 per phase)	43 (375 lb-in)	6	PSLK-750/3

For PST85...300 with external bypass (line/load lugs and terminal nut washer)

PST85 ...142	#6 - 250 MCM (1 per phase)	13.5 (275 lb-in)	9	PSLK-185-B
PST175 ...300	#4 - 400 MCM (1 per phase)	43 (375 lb-in)	9	PSLK-300-B
PST175 ...300	#4 - 500 MCM (2 per phase)	43 (375 lb-in)	9	PSLK-300/2-B

Terminal extensions

For softstarter type	Dimensions hole ø mm² (in²)	Bar mm (in)	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST85...142	8.5 (0.0132)	17.5 x 5 (0.689 x 0.197)	1	0.250 (0.551)	LX185 ¹⁾
PST175...300	10.5 (0.0163)	20 x 5 (0.787 x 0.197)	1	0.350 (0.772)	LX300 ²⁾
PSTB370...470	10.5 (0.0163)	25 x 5 (0.984 x 0.197)	1	0.500 (1.102)	LX460
PSTB570...1050	13 (0.0202)	40 x 6 (1.575 x 0.236)	1	0.850 (1.874)	LX750

Terminal enlargements

For softstarter type	Dimensions hole ø mm² (in²)	Bar mm (in)	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST30...72	6.5 (0.0101)	15 x 3 (0.591 x 0.118)	1	0.100 (0.220)	LW110 ¹⁾
PST85...142	10.5 (0.0163)	17.5 x 5 (0.689 x 0.197)	1	0.250 (0.551)	LW185 ¹⁾
PST175...300	10.5 (0.0163)	20 x 5 (0.787 x 0.197)	1	0.450 (0.992)	LW300 ¹⁾
PSTB370...470	10.5 (0.0163)	25 x 5 (0.984 x 0.197)	1	0.730 (1.609)	LW460
PSTB570...1050	13 (0.0202)	40 x 6 (1.575 x 0.236)	1	1.230 (2.712)	LW750

Terminal nut washer

For softstarter type	Req. qty	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST85...142	1	2	0.200 (0.441)	LE185 ¹⁾
PST175...300	3	2	0.300 (0.661)	LE300 ²⁾
PSTB370...470	6	6	0.600 (1.323)	LE460
PSTB570...1050	6	6	0.750 (1.653)	LE750

Terminal shrouds

For softstarter type	Suitable for	Req. qty	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST85...142	Compression lugs and cable connectors	1 pc	2	0.220 (0.485)	LT185-AL
		1 pc	2	0.800 (1.764)	LT460-AL
PST175...300	Compression lugs and cable connectors	3 pcs	2	0.280 (0.617)	LT300-AL ^{2) 3)}
PSTB370...470	Compression lugs and cable connectors	2 pcs	2	0.800 (1.764)	LT460-AL
PSTB570...1050	Compression lugs and cable connectors	2 pcs	2	0.825 (1.819)	LT750-AL

External keypad including a 3m cable

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST30...300 PSTB370...1050	1	0.400 (0.882)	PSTEK

Marine Kit

For softstarter type	Packing piece	Weight kg (lb) 1 piece	Catalog number
PST85...142	1	0.240 (0.529)	PSTM-2

Fieldbus plug - ABB Fieldbus Plug suitable for all sizes. See page 5.40 - 5.43

¹⁾ Only fits on the motor side.

²⁾ Use two sets of the accessories on the line side and one set on the motor side.

³⁾ The LT300-AL is not compatible with PSLK-300/2 cable connector.



PST(B) – The advanced range

Technical data

Softstarters
Type PST

5

Rated insulation voltage U_i	690 V	
Rated operational voltage U_e	208...600 V, 400...690 V + 10 % / -15 % 50/60 Hz $\pm 5\%$	
Rated control supply voltage U_s	100...250 V +10% / -15% 50/60 Hz $\pm 5\%$	
Rated control circuit voltage U_c	Internal or external 24 V DC	
Starting capacity at I_r	3 x I_e for 15 sec.	
Number of starts per hour	PST30...300 30 ¹⁾	PSTB370...1050 10 ¹⁾
Overload capability		
Overload class	10	
Service factor	PST(B)30...840 115 %	PSTB1050 100 %
Ambient temperature		
during operation	$\pm 0 \dots +50 \text{ }^\circ\text{C}$ (32 to 122 $^\circ\text{F}$) ²⁾	
during storage	$-25 \dots +70 \text{ }^\circ\text{C}$ (-13 to 158 $^\circ\text{F}$)	
Maximum altitude	4000 m ³⁾	
Degree of protection	PST30...72 IP10	PST85...PSTB1050 IP00
main circuit		
Supply and control circuit	IP20	
Main circuit	PST30...300 No	PSTB370...1050 Yes
Built-in By-pass contactor		
Cooling system - Fan cooled	Yes (thermostat controlled)	
HMI for settings (Human Machine Interface)		
Display	Full text	
Languages	English, German, Italian, Dutch, Chinese, Finnish, Swedish, French, Spanish, Russian, Portuguese, Turkish, Polish and Czech	
Keypad	2 selection keys and 2 navigating keys	
Signal relays		
Number of programmable signal relays	3 (each relay can be programmed to be Run, By-pass or Event signal)	
K4	Default as Run signal	
K5	Default as TOR (By-pass) signal	
K6	Default as Event signal	
Rated operational voltage, U_e	250 V AC / 24 V DC	
Rated thermal current I_{th}	5 A	
Rated operational current I_e at AC-15 ($U_e=250$ V)	1.5 A	
Analog output		
Output signal reference	0 ... 10 V, 0 ... 20 mA, 4 ... 20 mA	
Type of output signal	I Amp, U Volt, P kW, P hp, Q kVAr, S kVA, TmpMot, TmpSCR, cosPhi	

Control circuit	
Number of inputs	2 (start, stop)
Number of additional programmable inputs	2 (Each input can be programmed to be either: Non, Reset, Enable, Jog, DOL- On, Start motor 2, Start motor 3 or FB-Dis)

Signalling indication LED	
Power on	Green
Fault	Red
Protection	Yellow

Protections	
Electronic overload	Yes (Class 10A, 10, 20, 30)
Dual overload	Yes (separate overload function for start and run)
PTC connection	Yes
Locked rotor protection	Yes (Level and delay adjustable)
Underload protection	Yes (Level and delay adjustable)
Phase imbalance	Yes (Level and delay adjustable)
High current ($8 \times I_e$)	Yes
Phase reversal protection	Yes

Warnings (pre-warning)	
High current	Yes (Level and delay adjustable)
Low current (underload)	Yes (Level and delay adjustable)
Overload trip	Yes (Level and delay adjustable)
Overtmp, thyristor (SCR)	Yes

Start of several motors	
Possible to set-up and start three different motors	Yes (Different parameter sets)

Field bus connection	
Connection for ABB FieldBusPlug	Yes

PTC input	
Switch off resistance	2825 ohm $\pm 20\%$
Switch on resistance	1200 ohm $\pm 20\%$

External keypad	
Display	LCD type
Ambient temperature	
During operation	$\pm 0 \dots +50 \text{ }^\circ\text{C}$ (32 to 122 $^\circ\text{F}$)
During storage	$-25 \dots +70 \text{ }^\circ\text{C}$ (-13 to 158 $^\circ\text{F}$)
Degree of protection	IP66

PSTB Integrated by-pass ratings

Softstarter	PSTB370	PSTB470	PSTB570	PSTB720	PSTB840	PSTB1050
Integrated contactor	AF300		AF460	AF580	AF750	
AC-3 rating (A)	305		460	580	750	

¹⁾ Valid for 50 % on time and 50 % off time. $3.5 \times I_e$ for 7 sec., if other data is required, contact your sales office.

²⁾ Above 40 $^\circ\text{C}$ (104 $^\circ\text{F}$) up to max. 50 $^\circ\text{C}$ (122 $^\circ\text{F}$) reduce the rated current with 0.8 % per $^\circ\text{C}$ (0.44 % per $^\circ\text{F}$).

³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$\left[\% \text{ of } I_e = 100 - \frac{x - 1000}{150} \right] \quad x = \text{actual altitude for the softstarter in meter}$$

$$\left[\% \text{ of } I_e = 100 - \frac{x - 3280}{497} \right] \quad x = \text{actual altitude for the softstarter in feet}$$

PST(B) – The advanced range

Technical data

Major possible settings and the displayed text and the set default values

Description	Text on display	Values on display	Default value
Setting current for overload, locked rotor etc.	Setting I _e	9.0 ... 1207 A divided into 19 overlapping ranges.	See page 5.37
Time for start ramp	Start Ramp	1 ... 30 s, 1 ... 120 s (Range depends on Start Range)	10 s
Time for stop ramp	Stop Ramp	0 ... 30 s, 0 ... 120 s (Range depends on Stop Range)	0 s
Initial voltage for start ramp	Init Volt	30 ... 70 %	30 %
End voltage for stop ramp	End Volt	30 ... 70 %	30 %
Step down voltage	Step Down	30 ... 100 %	100 %
Level of the current limit.	Current Lim	1.5 ... 7.0 x I _e	4.0 x I _e
Selection of Kick start	Kick Start	Yes, No	No
Level of Kick start if selected	Kick Level	50 ... 100 %	50 %
Time for Kick start if selected	Kick Time	0.1 ... 1.5 s	0.2
Selectable range for start ramp	Start Range	1 ... 30 s, 1 ... 120 s	1 ... 30 s
Selectable range for stop ramp	Stop Range	0 ... 30 s, 0 ... 120 s	0 ... 30 s
Overload protection	Overload	No, Normal, Dual	Normal
Overload Class	OL Class	10 A, 10, 20, 30	10
Overload Class, Dual type, Start Class	OL Class S	10A, 10, 20, 30	10
Overload Class, Dual type, Run Class	OL Class R	10A, 10, 20, 30	10
Type of operation for overload protection	OL Op	Stop-M, Stop-A, Ind	Stop-M
Locked rotor protection	Locked Rotor	Yes, No	No
Trip level for locked rotor protection	Lock R Lev	0.5 ... 8.0 x I _e	4.0 x I _e
Trip time for locked rotor protection	Lock R Time	0.2 ... 10 s	1.0 s
Type of operation for locked rotor protection	Lock R Op	Stop-M, Stop-A, Ind	Stop-M
Underload protection	Underload	Yes, No	No
Trip level for Underload protection	Underl Lev	0.4 ... 0.8 x I _e	0.5 x I _e
Trip time for Underload protection	Underl Time	1 ... 30 s	10 s
Type of operation for Underload protection	Underl Op	Stop-M, Stop-A, Ind	Stop-M
Phase imbalance protection	Phase Imb	Yes, No	No
Trip level for phase imbalance protection	Ph Imb Lev	10 ... 80 %	80 %
Type of operation for phase imbalance protection	Ph Imb Op	Stop-M, Stop-A, Ind	Stop-M
High current protection	High I	Yes, No	No
Type of operation for high current protection	High I Op	Stop-M, Stop-A, Ind	Stop-M
Phase reversal protection	Phase Rev	Yes, No	No
Type of operation for phase reversal protection	Ph Rev Op	Stop-M, Stop-A, Ind	Stop-M
PTC protection	PTC	Yes, No	No
Type of operation for PTC protection	PTC Op	Stop-M, Stop-A	Stop-M
An external Bypass contactor is used	Ext ByPass	Yes, No	No
High current warning	Warn I=High	Yes, No	No
Trip level for high current warning	Wa I=H Lev	0.5 ... 5.0 x I _e	1.2 x I _e
Low current warning	Warn I=Low	Yes, No	No
Trip level for low current warning	Wa I=L Lev	0.4 ... 1.0 x I _e	0.8 x I _e
Overload warning	Warn OL	Yes, No	No
Trip level for overload warning	Wa OL Lev	40 ... 99 %	90 %
Thyristor overload warning	Warn SCR OL	Yes, No	No
Type of operation for phase loss fault	Ph Loss Op	Stop-M, Stop-A	Stop-M
Type of operation for by-pass doesn't close	BP open Op	Stop-M, Stop-A	Stop-M
Type of operation for by-pass doesn't open	BP closed Op	Stop-M, Stop-A	Stop-M
Type of operation for fieldbus fault	FB Fault Op	Stop-M, Stop-A	Stop-M
Type of operation for frequency fault	Freq F Op	Stop-M, Stop-A	Stop-M
Type of operation for heat sink over temperature fault	HS Temp Op	Stop-M, Stop-A	Stop-M
Type of operation for thyristor short circuit fault	SCR SC Op	Stop-M, Stop-A	Stop-M
Function of programmable input In_0	In0	None, Reset, Enable, Jog, DOL, Start 2, FB-Dis	Reset
Function of programmable input In_1	In1	None, Reset, Enable, Jog, DOL, Start 3, FB-Dis	Reset
Function of programmable relay output K4	Relay K4	Run, TOR, Event	Run
Function of programmable relay output K5	Relay K5	Run, TOR, Event	TOR
Function of programmable relay output K6	Relay K6	Run, TOR, Event	Event
Control of the softstarter with fieldbus	Fieldb Ctrl	Yes, No	No
Number of sequences for sequence start.	No of Seq	No, 2, 3	No
Language to use on display	Language	US/UK, FI, SE, PT, NL, IT, FR, ES, DE, CN, RU, TR, PL, CZ	US/UK

PST(B) – The advanced range

Technical data


Softstarters
Type PST

Description	Text on display	Values on display	Default value
Password for display	Password	No, 1 ... 255	
Start mode	Start Mode	Volt, Torque	Volt
Stop mode	Stop Mode	Volt, Torque	Volt
Torque limit	Torque limit	20 ... 200 %	150 %
Analog output	Analogue Out	Yes, No	No
Analog output, reference	Anl Ref	0 ... 10 V, 0 ... 20 mA, 4 ... 20 mA	4 ... 20 mA
Analog output, type of value	Anl Type	I Amp, U Volt, P kW, P hp, Q kVAr, S kVA, TmpMot, TmpSCR, cosPhi	I Amp

5

Tripping curves for the integrated electronic overload protection



All units have an integrated electronic overload protection possible to set on four different tripping classes. Below you find a curve for each tripping class in cold state. These tripping curves are valid for PSE, PST and PSTB

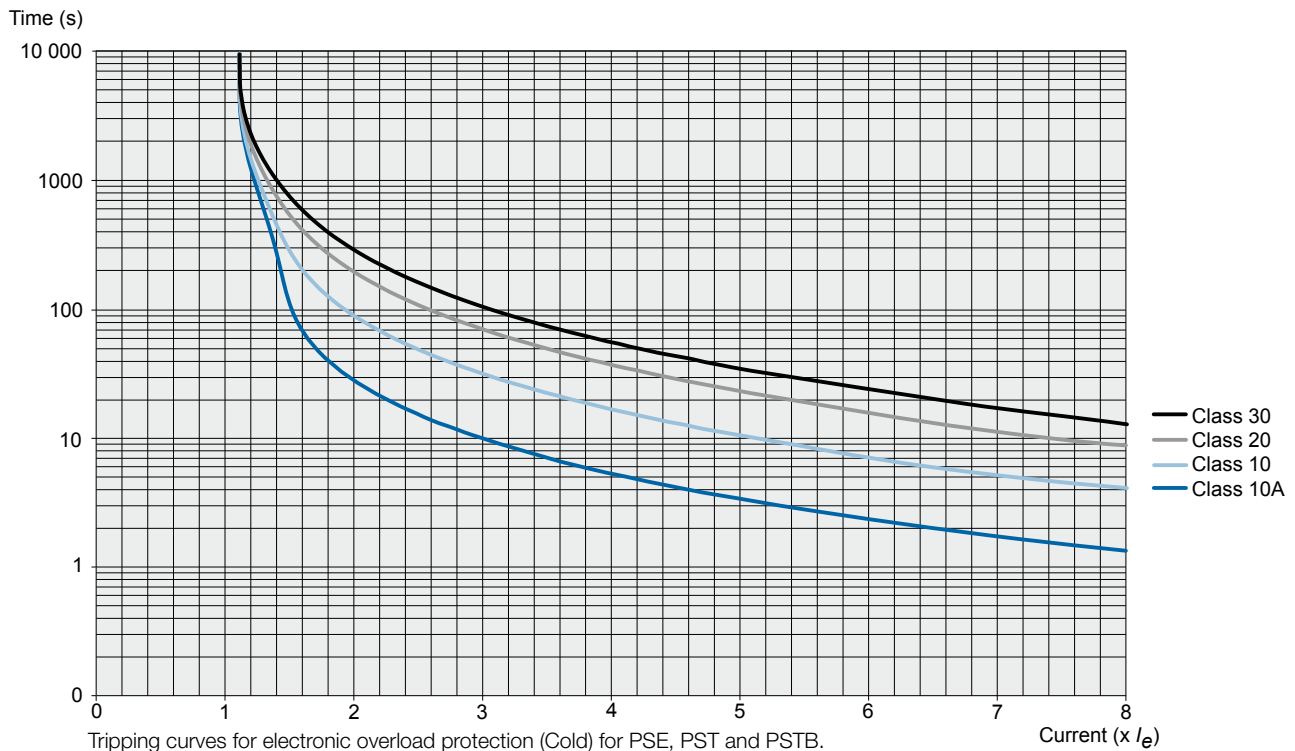

PST(B) – The advanced range

Technical data

Cross section of connection cables

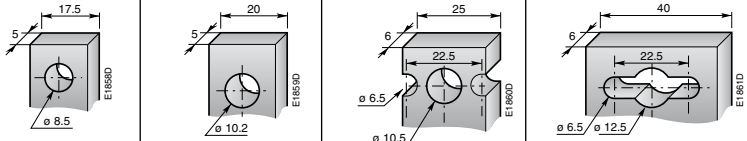		Softstarter								
		PST30 ... 72	PST85 ... 142	PST175 ... 300	PSTB370 ... 470	PSTB570 ... 1050				
Main circuit										
Available terminals:	L1, L2, L3	Yes	Yes	Yes	Yes	Yes				
	T1, T2, T3	Yes	Yes	Yes	Yes	Yes				
(For external by-pass)	B1, B2, B3	Yes	Yes	Yes	No	No				
Connection clamp										
Solid/stranded	1 x mm ² (AWG)						10 ... 95 (8-3/0)	See accessories		
Solid/stranded	2 x mm ² (AWG)						6 ... 35 (10-2)	See accessories		
Tightening torque (recommended)	Nm (lb-in)						6.0 (53.10)	See accessories		
Connection bar										
Width and thickness	mm (in)	—	17.5 x 5 (0.689 x 0.197)	20 x 5 (0.787 x 0.197)	25 x 6 (0.984 x 0.236)	40 x 6 (1.575 x 0.236)				
Hole diameter	mm (in)	—	8.5 (0.335)	10.2 (0.402)	10.5 (0.413)	6.5, 12.5 (0.256, 0.492)				
Tightening torque (recommended)	Nm (lb-in)	—	18 (159.3)	28 (247.8)	35 (309.8)	45 (398.3)				
Supply and control circuit										
Connection clamp				Yes						
Solid/stranded	1 x mm ² (AWG)	2.5 (14)								
Solid/stranded	2 x mm ² (AWG)	1.5 (16)								
Tightening torque (recommended)	Nm (lb-in)	0.5 (4.43)								

PST(B) – The advanced range

Technical data

Softstarters
Type PST

Fuse ratings and power losses

For Softstarter	Recommended ABB Overload protection		Max power loss at rated I _e		Max semi-conductor fuse rating - main circuit Coordination type 2 (65 kA) ³⁾			Supply circuit power requirements ¹⁾ VA/VA pull in
	Type	Current range	without by-pass ²⁾	with by-pass	Bussman Fuses, DIN43 620			
					A	Type	Size	
PST								
PST30	Integrated	9...35	100	9.5	80	170M1566	000	5
PST37	Integrated	11...43	120	10.5	125	170M1568	000	5
PST44	Integrated	13...51	140	13.5	160	170M1569	000	5
PST50	Integrated	15...58	160	13.5	160	170M1569	000	5
PST60	Integrated	18...69	190	15.5	200	170M1570	000	5
PST72	Integrated	22...83	230	17	250	170M1571	000	5
PST85	Integrated	25...98	270	30.5	315	170M1572	000	10
PST105	Integrated	32...120	325	35	400	170M3819	1	10
PST142	Integrated	43...163	435	37	450	170M5809	2	10
PST175	Integrated	53...201	540	62	500	170M5810	2	15
PST210	Integrated	63...241	645	67	630	170M5812	2	15
PST250	Integrated	75...288	765	67	700	170M5813	2	15
PST300	Integrated	90...345	920	90	900	170M6813	3	15
PSTB 600 V								
PSTB370	Integrated	111...425	N/A	90	700	170M5813	2	20/480
PSTB470	Integrated	141...540	N/A	110	900	170M6813	3	20/480
PSTB570	Integrated	171...655	N/A	105	900	170M6813	3	25/900
PSTB720	Integrated	216...828	N/A	110	1250	170M8554	3	25/860
PSTB840	Integrated	252...966	N/A	170	1500	170M8556	3	25/860
PSTB1050	Integrated	315...1207	N/A	170	1800	170M8558	3	25/860
PSTB 690 V								
PSTB370	Integrated	111...425	N/A	90	700	170M5813	2	20/480
PSTB470	Integrated	141...540	N/A	110	900	170M6813	3	20/480
PSTB570	Integrated	171...655	N/A	105	900	170M6813	3	25/900
PSTB720	Integrated	216...828	N/A	110	1250	170M8554	3	25/860
PSTB840	Integrated	252...966	N/A	170	1500	170M8556	3	25/860
PSTB1050	Integrated	315...1207	N/A	170	1600	170M8557	3	25/860

¹⁾ For the supply circuit use a maximum 6 A time-delay fuse or an MCB with type C characteristics.

²⁾ Calculated power loss at operational current (I_{op}) without by-pass.

P_{tot} = 3 x I_{op} + VA value
Example: PST 60 running at 52 A
P_{tot} = 3 x 52 + 5 = 161 W

³⁾ Max fuse rating independent of In-Line or Inside Delta connection. In Inside Delta connections of PST, the fuses can be placed outside of the delta. For PSTB the fuses shall be placed inside the delta. Contact ABB for more information.

FBP FieldBusPlug

DeviceNet, MODBUS-RTU and CANopen, ordering details

DeviceNet FieldBusPlug

Ready-made DeviceNet fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED



Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
DeviceNet-FBP	0.25 m (0.82 ft)	DNP21-FBP.025	1	0.09 (0.198)	1SAJ230000R1003
DeviceNet-FBP	0.50 m (1.64 ft)	DNP21-FBP.050	1	0.10 (0.220)	1SAJ230000R1005
DeviceNet-FBP	1.00 m (3.28 ft)	DNP21-FBP.100	1	0.13 (0.287)	1SAJ230000R1010
DeviceNet-FBP	5.00 m (16.40 ft)	DNP21-FBP.500	1	0.36 (0.794)	1SAJ230000R1050

MODBUS-RTU FieldBusPlug

Ready-made MODBUS-RTU fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
MODBUS-RTU-FBP	0.25 m (0.82 ft)	MRP21-FBP.025	1	0.09 (0.198)	1SAJ250000R0003
MODBUS-RTU-FBP	0.50 m (1.64 ft)	MRP21-FBP.050	1	0.10 (0.220)	1SAJ250000R0005
MODBUS-RTU-FBP	1.00 m (3.28 ft)	MRP21-FBP.100	1	0.13 (0.287)	1SAJ250000R0010
MODBUS-RTU-FBP	5.00 m (16.40 ft)	MRP21-FBP.500	1	0.36 (0.794)	1SAJ250000R0050

CANopen FieldBusPlug

Ready-made CANopen fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
CANopen-FBP	0.25 m (0.82 ft)	COP21-FBP.025	1	0.09 (0.198)	1SAJ230100R1003
CANopen-FBP	0.50 m (1.64 ft)	COP21-FBP.050	1	0.10 (0.220)	1SAJ230100R1005
CANopen-FBP	1.00 m (3.28 ft)	COP21-FBP.100	1	0.13 (0.287)	1SAJ230100R1010



DNP21-FBP
MRP21-FBP
COP21-FBP

To connect the PST Softstarter to a DeviceNet or CANopen fieldbus system...

you need specific software for PLC set-up, (EDS file) which is available at www.abb.com/lowvoltage on the Softstarter pages. Look under the documentation-link named Software. If you need help or advice, please contact your local ABB office.

FBP FieldBusPlug

DeviceNet, MODBUS-RTU and CANopen accessories, ordering details

Accessories for the DeviceNet, MODBUS-RTU and CANopen bus connector



DNF11-FBP.050



DNM11-FBP.050

DeviceNet, MODBUS-RTU and CANopen round cable for bus junctions

Ready-made bus cable with an M12 connector and an open cable end.

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Round cable with female connector	0.50 m (1.64 ft)	DNF11-FBP.050	1	0.04 (0.088)	1SAJ923002R0005
Round cable with male connector	0.50 m (1.64 ft)	DNM11-FBP.050	1	0.04 (0.088)	1SAJ923003R0005

5

DeviceNet, MODBUS-RTU and CANopen round cable for bus extension

Ready-made bus cable with M12 male and female connectors

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Extension cable	1.00 m (3.28 ft)	DNX11-FBP.100	1	0.08 (0.176)	1SAJ923001R0010
Extension cable	3.00 m (9.84 ft)	DNX11-FBP.300	1	0.20 (0.441)	1SAJ923001R0030
Extension cable	5.00 m (16.40 ft)	DNX11-FBP.500	1	0.31 (0.683)	1SAJ923001R0050
Round cable	100.00 m (328 ft)	DNC11-FBP.999	1	5.60 (12.346)	1SAJ923004R1000



DNX11-FDP



DNM11-FBP.0

DNF11-FBP.0



DNR11-FBP.120

DeviceNet, MODBUS-RTU and CANopen round cable connectors

Bus cable and coupling accessories

Designation	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Male connector for round cable	DNM11-FBP.0	5	0.15 (0.331)	1SAJ923005R0001
Female connector for round cable	DNF11-FBP.0	5	0.15 (0.331)	1SAJ923006R0001

DeviceNet, MODBUS-RTU and CANopen termination resistor

Designation	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Termination Resistor, 120 Ohm	DNR11-FBP.120	1	0.02 (0.044)	1SAJ923007R0001

FBP FieldBusPlug

Profibus DP, ordering details

5



PDP22-FBP



PDQ22-FBP



Profibus DP FieldBusPlug

Ready-made Profibus DP fieldbus interface with various cable lengths.

- Supports PROFIBUS DP V0 and V1
- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED



Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Profibus DP FBP	0.25 m (0.82 ft)	PDP22-FBP.025	1	0.09 (0.198)	1SAJ240100R1003
Profibus DP FBP	0.50 m (1.64 ft)	PDP22-FBP.050	1	0.10 (0.220)	1SAJ240100R1005
Profibus DP FBP	1.00 m (3.28 ft)	PDP22-FBP.100	1	0.13 (0.287)	1SAJ240100R1010
Profibus DP FBP	2.00 m (6.56 ft)	PDP22-FBP.200	1	0.20 (0.441)	1SAJ240100R1020
Profibus DP FBP	5.00 m (16.40 ft)	PDP22-FBP.500	1	0.36 (0.794)	1SAJ240100R1050

Profibus DP FieldBusPlug for 4 devices

PDQ22 is a member of the ABB FieldBusPlug family of bus connectors. It allows the connection of up to four devices to Profibus DP by just using one Profibus node access. This allows a cost efficient device integration for devices that are located physically nearby. PDQ22 supports DP-V0 and DP-V1. The degree of protection is IP66. There are separate diagnosis LEDs for bus and device status.

Note that the accessory PDP22-FBP only works with the PSR and PSE and not with the PST(B) softstarter.

Designation	Type	Packing piece		Catalog number
Quadruple bus connector	PDQ22-FBP	1		1SAJ240200R0050
DINrail adapter for PDQ22-FBP	CDA11-FBP. 0	1		1SAJ929300R0001
Fixing bracket for passive plug of connection cable	CDP11-FBP.0	1		1SAJ929100R0001

Configuration software

This cable and software can be used for set-up and commissioning of the softstarter as well as to keep back-up of the parameter settings.

Designation	Type	Packing piece		Catalog number
USB to FBP interface cable	UTF21-FBP	1		1SAJ929400R0002
PDP22/PDQ22 Device Type Manager (DTM) incl. FDT/DTM frame application	PBDTM-FBP	1		1SAJ924012R0003

To connect the PST Softstarter to a Profibus DP fieldbus system...

you need specific software for PLC set-up, (GSD file) which is available at www.abb.com/lowvoltage on the Softstarter pages. Look under the documentation-link named Software. If you need help or advice, please contact your local ABB office.

PDP21 is replaced by PDP22.

Use PDP22 with the GSD-file Abb_082d.gsd regardless if the PLC is a DP/V0 or DP/V1.

FBP FieldBusPlug

Profibus DP accessories, ordering details



Accessories for the Profibus DP Bus Connector

Profibus DP Round Cable for Bus Junctions

Ready-made bus cable with an M12 connector and an open cable end.

- Application on bus junctions such as e.g. Profibus DB couplers or devices with an integrated Profibus DB interface



PDF11-FBP.50



PDM11-FBP.50

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Round Cable with female connector	0.50 m (1.64 ft)	PDF11-FBP.050	1	0.04 (0.088)	1SAJ924002R0005
Round Cable with male connector	0.50 m (1.64 ft)	PDM11-FBP.050	1	0.04 (0.088)	1SAJ924003R0005

5

Profibus DP Round Cable for Bus Extension

Ready-made bus cable with M12 male and female connectors

Round cable on coil



PDX11-FBP



PDM11-FBP



PDF11-FBP



PDR11-FBP.150



PDV11-FBP,
PDV12-FBP



PDA11-FBP.050



PDA12-FBP.050

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Extension Cable	0.50 m (1.64 ft)	PDX11-FBP.050	1	0.04 (0.088)	1SAJ924001R0005
Extension Cable	1.00 m (3.28 ft)	PDX11-FBP.100	1	0.08 (0.176)	1SAJ924001R0010
Extension Cable	3.00 m (9.84 ft)	PDX11-FBP.300	1	0.20 (0.441)	1SAJ924001R0030
Extension Cable	5.00 m (16.40 ft)	PDX11-FBP.500	1	0.31 (0.683)	1SAJ924001R0050
Round Cable	100.00 m (328 ft)	PDC11-FBP.999	1	5.60 (12.346)	1SAJ924004R1000

Profibus DP Accessories for Bus Extension

Designation	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Male Connector for round cable	PDM11-FBP.0	5	0.03 (0.066)	1SAJ924005R0001
Female Connector for round cable	PDF11-FBP.0	5	0.03 (0.066)	1SAJ924006R0001

Profibus DP Termination Resistor, Miscellaneous Accessories

Designation	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Termination Resistor, 150 Ohm	PDR11-FBP.150	1	0.03 (0.066)	1SAJ924007R0001
Feeding connector 24V DC, Code B-A	PDV11-FBP.0	1	0.04 (0.088)	1SAJ924008R0001
Feeding connector 24V DC, Code A-A	PDV12-FBP.0	1	0.04 (0.088)	1SAJ924011R0001
Adaptor M12-Dsub9-M12 Cable length 0.50m	PDA11-FBP.050	1	0.04 (0.088)	1SAJ924009R0005
Adaptor M12-Dsub9-M12 Cable length 2 x 0.50m	PDA12-FBP.050	1	0.04 (0.088)	1SAJ924010R0005





Extension cable

Designation	Cable length	Type	Packing piece	Weight kg (lb) 1 piece	Catalog number
Extension cable (female/male), shielded	0.3 m (0.98 ft)	CDP15-FBP.030	1		1SAJ929140R0003
Extension cable (female/male), shielded	0.6 m (1.97 ft)	CDP15-FBP.060	1		1SAJ929140R0006
Extension cable (female/male), shielded	1.5 m (4.92 ft)	CDP15-FBP.150	1	0.20 (0.441)	1SAJ929140R0015
Extension cable (male/open), shielded	1.5 m (4.92 ft)	CDP16-FBP.150	1	0.20 (0.441)	1SAJ929150R0015

Wall mounting instructions Softstarters

Minimum distance to wall/front

5

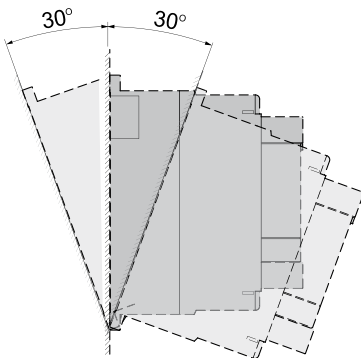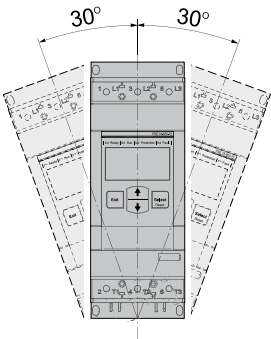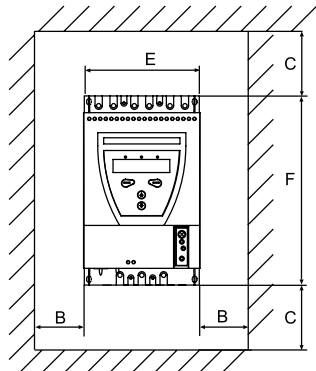
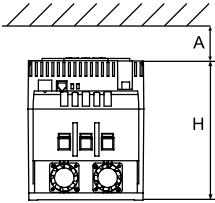


Dimensions (mm/in)

Softstarter	A	B	C	E	F	H
PSR						
PSR3 ... 16	25/0.984	0*	0	45/1.77	140/5.51	114/4.49
PSR25 ... 30	25/0.984	0*	0	45/1.77	160/6.30	128/5.04
PSR37 ... 45	25/0.984	0*	0	54/2.13	187/7.36	153/6.02
PSR60 ... 105	25/0.984	0*	0	70/2.76	220/8.66	180/7.09
PSE						
PSE18 ... 105	20/0.787	10/0.394	100/3.94	90/3.54	245/9.65	185.5/7.30
PSE142 ... 170	20/0.787	10/0.394	100/3.94	130/5.12	295/11.61	219.5/8.64
PSE210 ... 370	20/0.787	10/0.394	100/3.94	190/7.48	550/21.65	236.5/9.31
PST						
PST30 ... 72	20/0.787	10/0.394	100/3.94	160/6.30	260/10.24	196/7.72
PST85 ... 142	20/0.787	10/0.394	100/3.94	186/7.32	390/15.35	270/10.63
PST175 ... 300	20/0.787	10/0.394	100/3.94	360/14.17	420/16.54	270/10.63
PSTB						
PSTB370 ... 470	20/0.787	15/0.394	150/5.91	365/14.37	460/18.11	361/14.21
PSTB570 ... 1050	20/0.787	15/0.394	150/5.91	435/17.13	515/20.28	381/14.21

*) 5 mm/0.197 inch for the 24 V DC version

Dimensions PSTEK

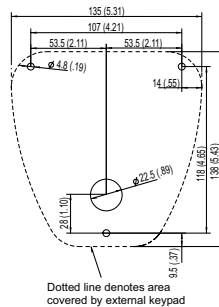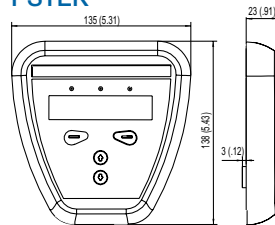


Dimensions in mm (and inches)


Dimensions PSR softstarters

5


PSR3 ... 16

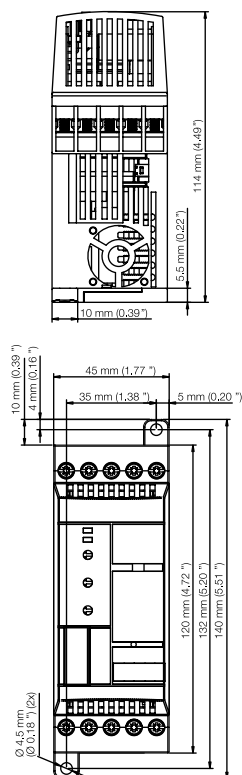


PSR25 ... 30

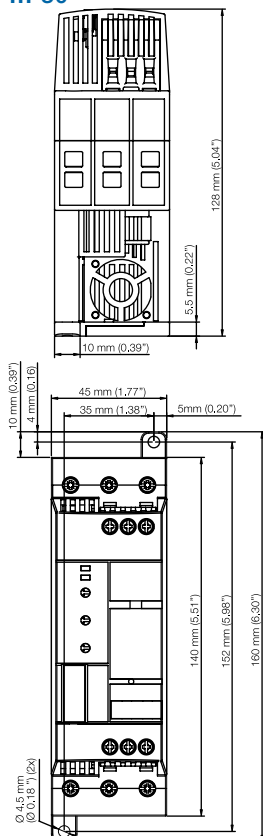

PSR37 ... 45

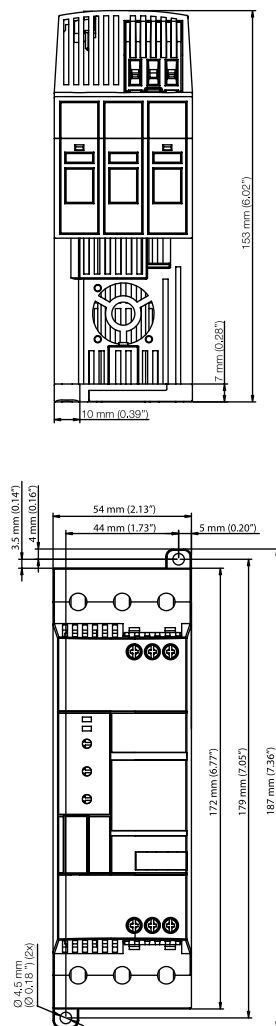

PSR60 ... 105

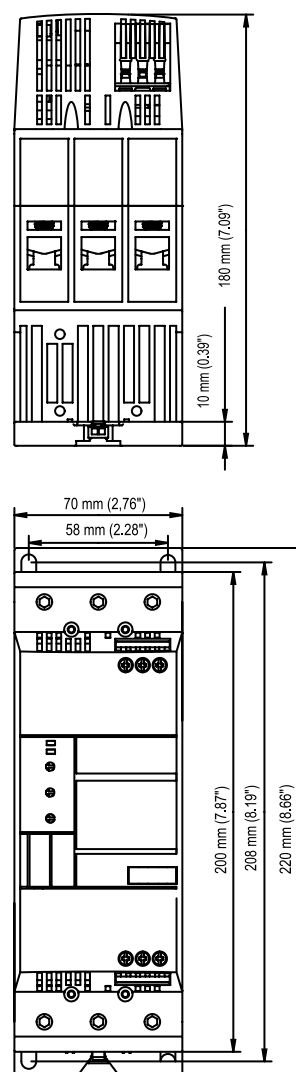


Dimensions in mm (and inches)


Dimensions

PSE softstarters





PSE18 ... 105

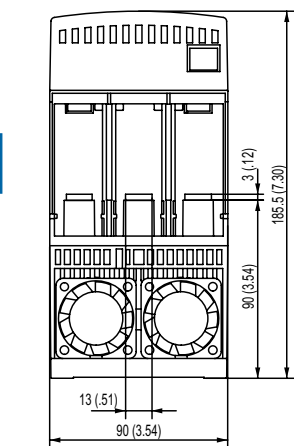

PSE142 ...170

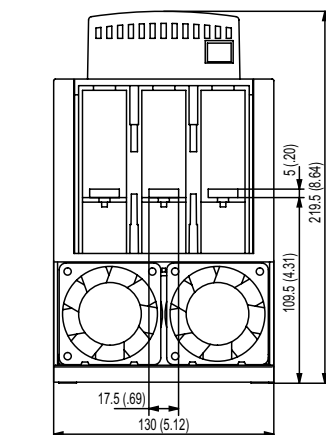

PSE210 ... 370

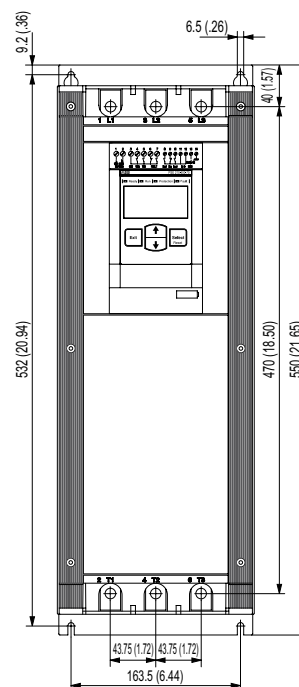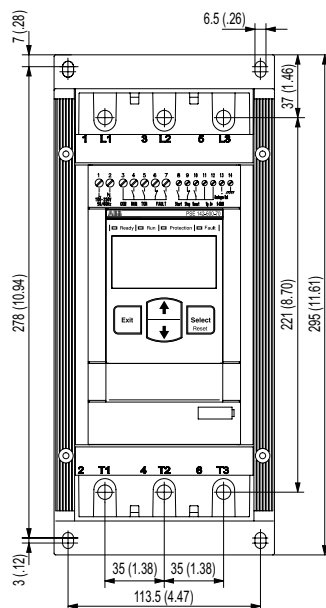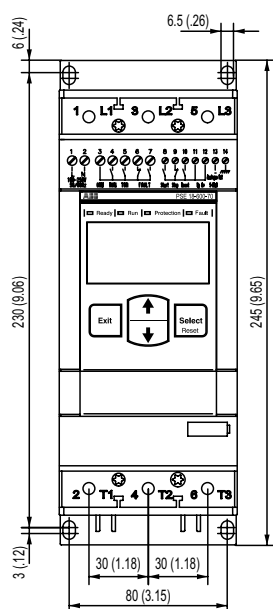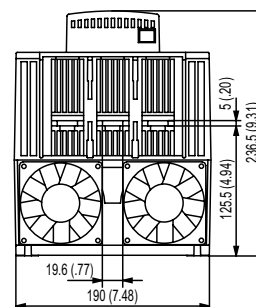

Dimensions in mm (and inches)


Dimensions

PST and PSTB softstarters


Softstarters
Type PST

5


PST30 ... 72

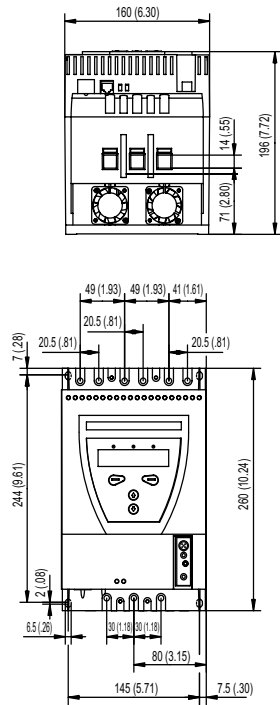


PST85 ...142

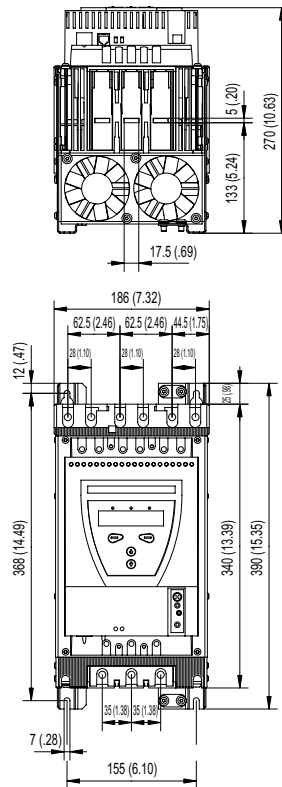


PST85 ...142 with marine kit

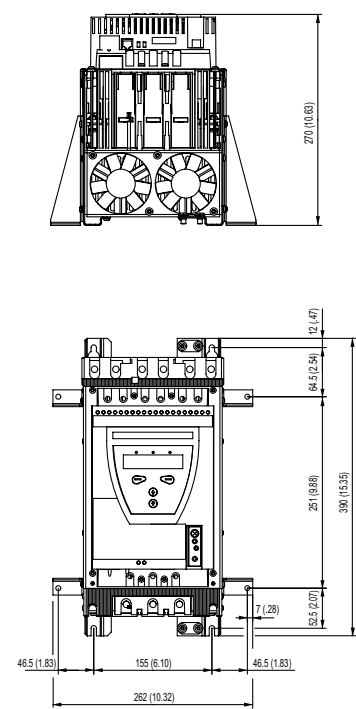


PST175 ... 300

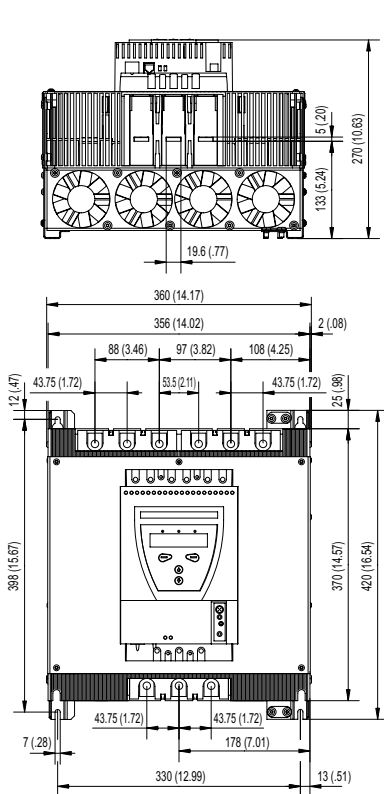

PSTB370 ... 470

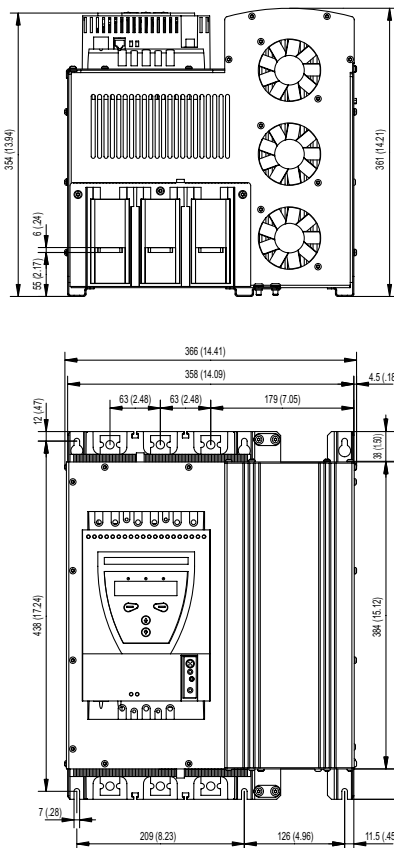

PSTB570 ... 1050

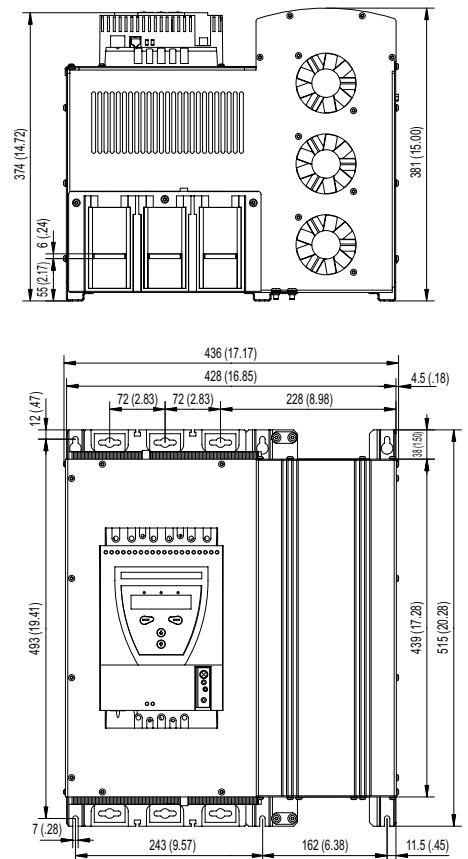


Dimensions in mm (and inches)
Low Voltage Products & Systems


Circuit diagrams PSR softstarters

PSR3 ...16


A) With MMS

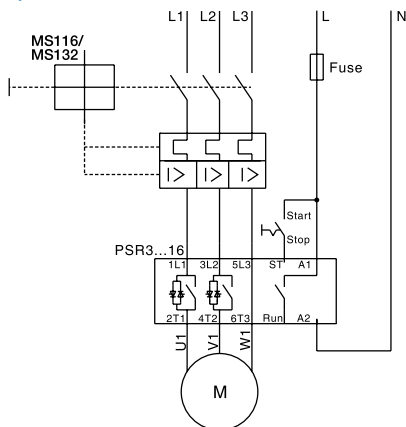

B) With MMS and auxiliary contact

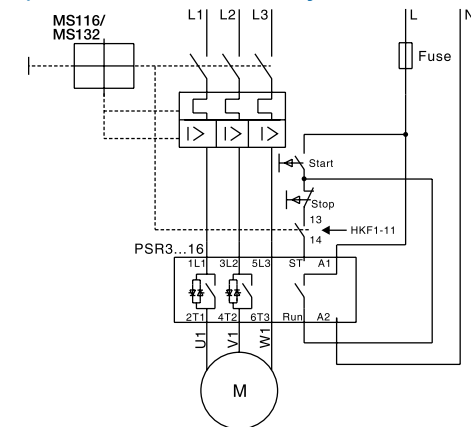


C) With fuses, contactor and O.L.

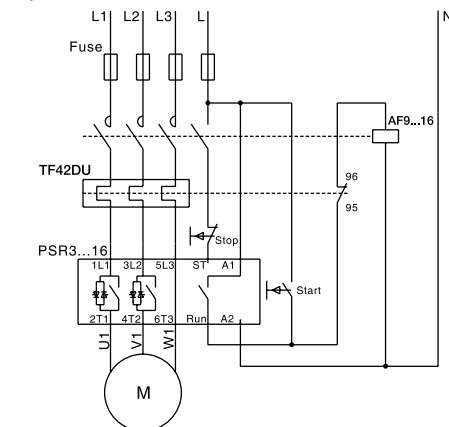


PSR25 ... 45


D) With MMS

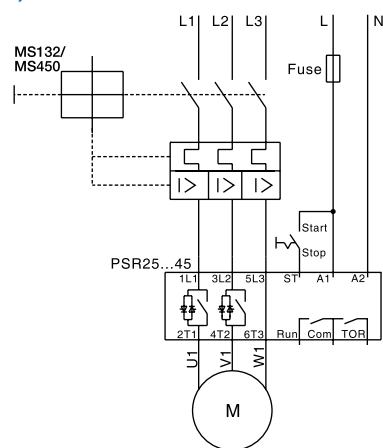

E) With MMS and auxiliary contact

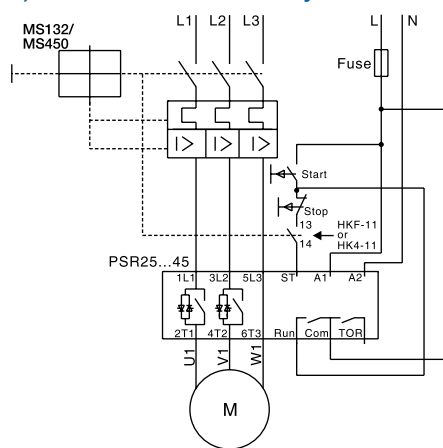


F) With fuses, contactor and O.L.

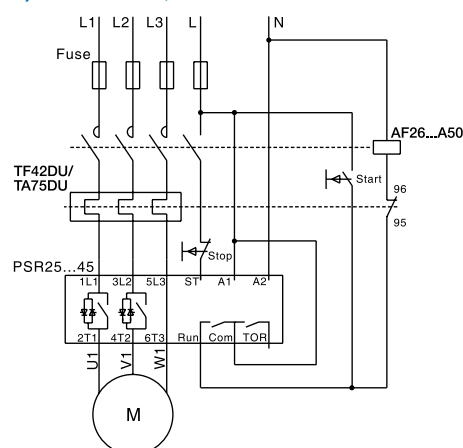


PSR60 ... 105


G) With MMS

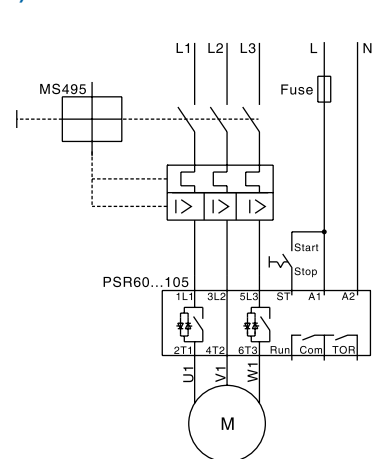

H) With MMS and auxiliary contact

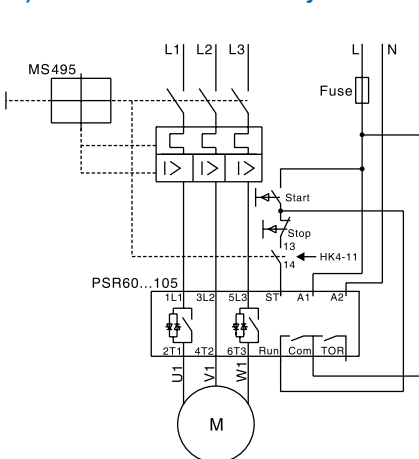

I) With fuses, contactor and O.L.


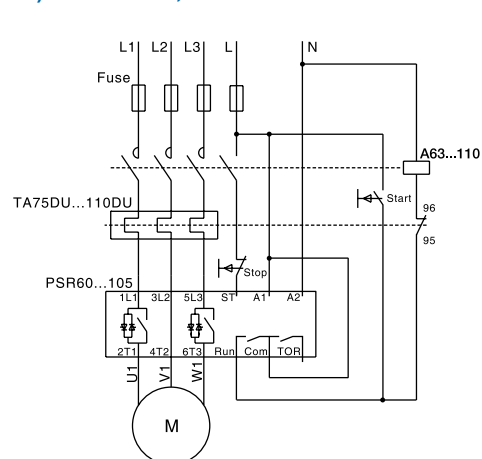


Circuit diagrams

PSE softstarters

Softstarters
Type PSE

PSE18 ... 370

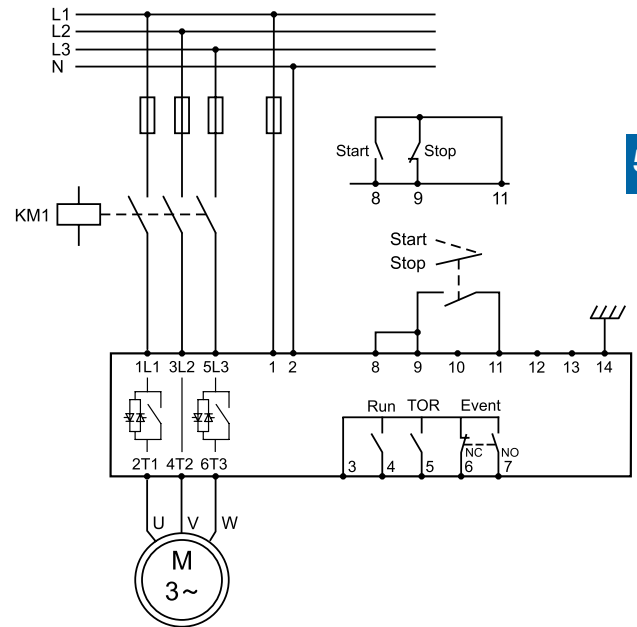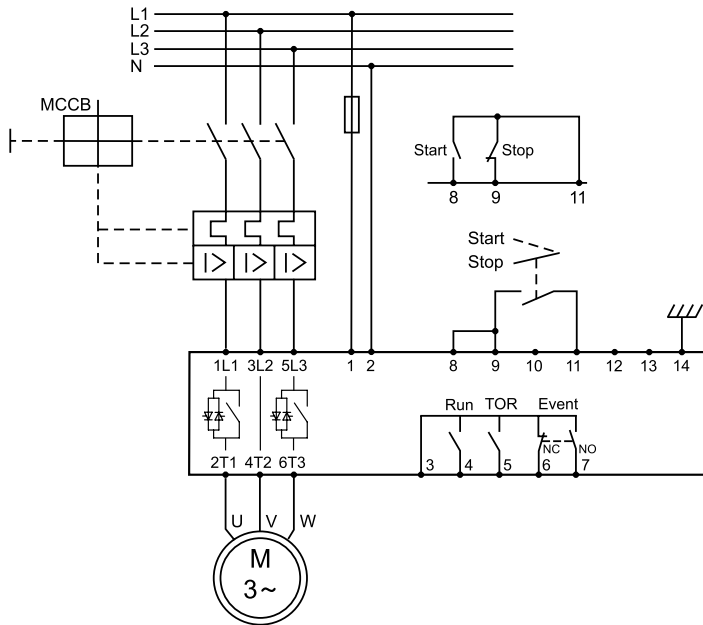


5

Circuit diagrams

PST30 – PST300

Inside Delta

5

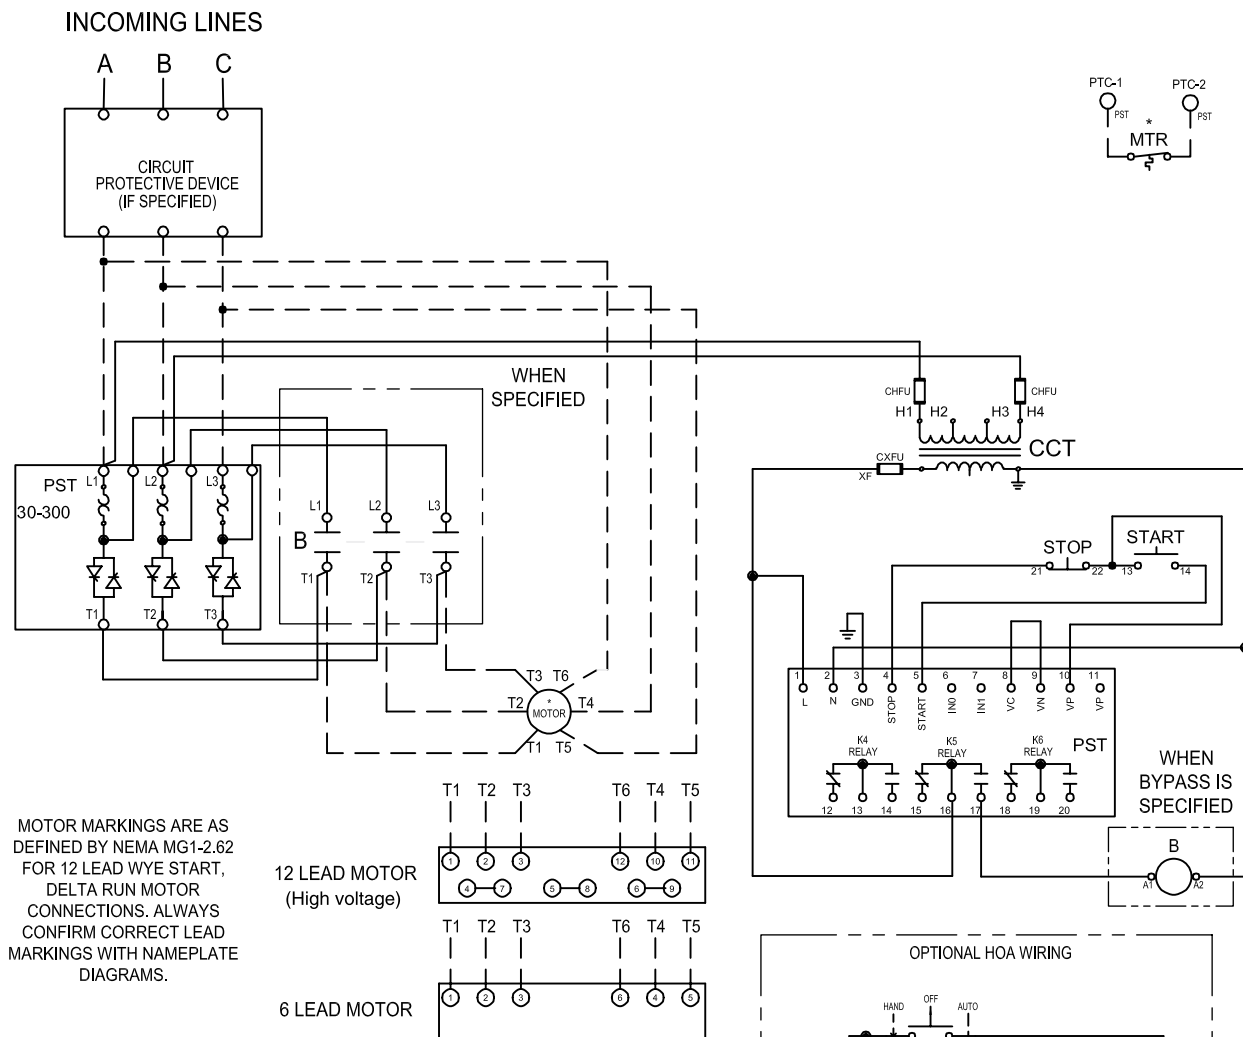

CONNECTION TORQUE: CONSULT SOFT STARTER MANUAL FOR WIRE TORQUE SPECIFICATIONS.

LEGEND	
CCT	CONTROL CIRCUIT TRANSFORMER
CHFUF	CCT PRIMARY FUSE
CXFUF	CCT SECONDARY FUSE
B	BYPASS CONTACTOR
PTC	THERMAL COUPLE
o 13	CONN POINT ON DEVICE WITH NUMBER
*	REMOTE DEVICE
⊗	CONNECTION POINT AT TERMINAL BLOCK

PST NOTES:

1. PROG. INPUT In0 FACTORY SET FOR RESET FAULT/OL.
2. PROG. RELAY K4 FACTORY SET FOR RUN.
3. PROG. RELAY K5 FACTORY SET FOR AT SPEED.
4. PROG. RELAY K6 FACTORY SET FOR EVENT.
5. FUNCTION MOT 1 le MUST BE SET TO MOTOR FLA.

NOTES

1. ALL CONTROL WIRING TO BE 14 GA. COLOR OF CONTROL WIRE SHALL BE PER VOLTAGE ON CONTACTOR COILS:

RED-ALL AC VOLTAGES
WHITE MAY BE USED ON THE GROUNDED SIDE OF THE AC CIRCUIT IF SPECIFIED.

BLUE-ALL DC VOLTAGES

2. ALL DEVICES ARE SHOWN DE-ENERGIZED.
3. DO NOT USE SELECTOR SWITCHES WITH AUTO-RESET OVERLOAD RELAYS.


Circuit diagrams

PST30 – PST300

In-Line

Softstarters
Type PST

5

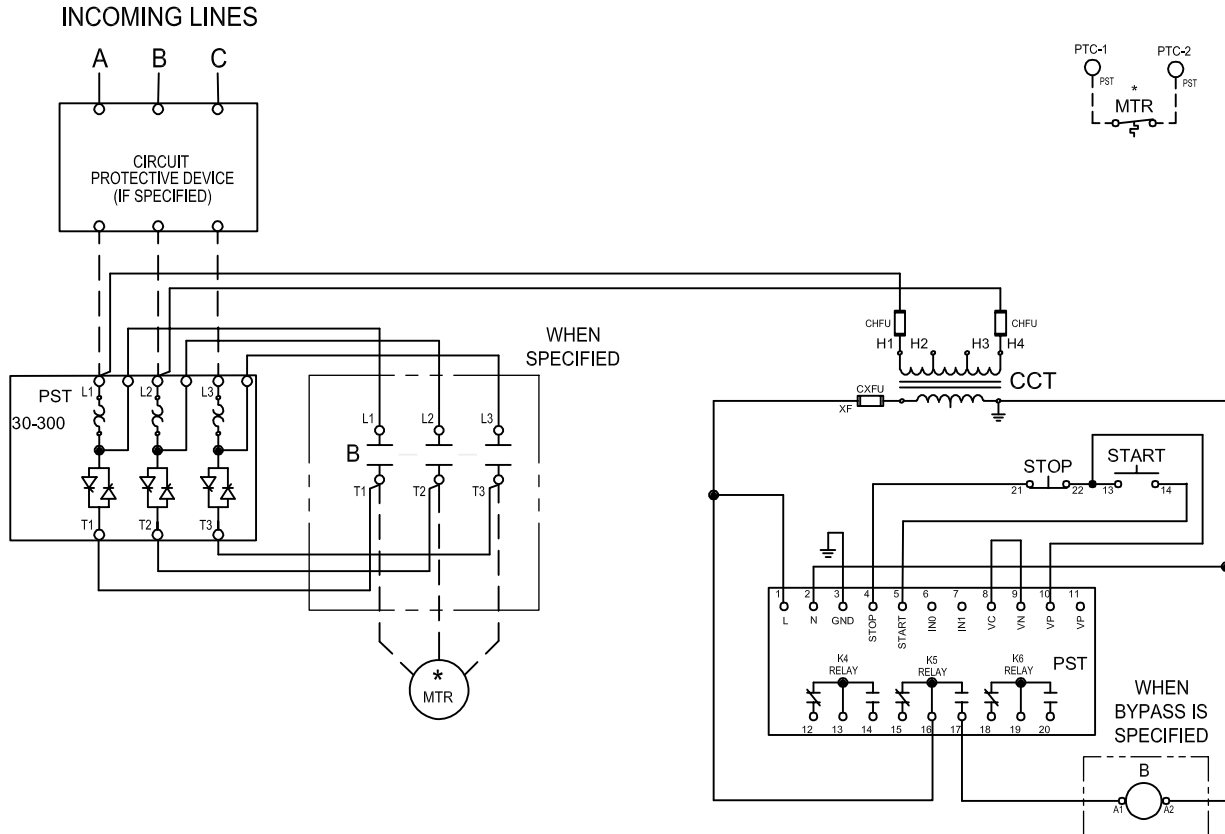


CONNECTION TORQUE: CONSULT SOFT STARTER MANUAL FOR WIRE TORQUE SPECIFICATIONS.

PST NOTES:

1. PROG. INPUT In0 FACTORY SET FOR RESET FAULT/OL.
2. PROG. RELAY K4 FACTORY SET FOR RUN.
3. PROG. RELAY K5 FACTORY SET FOR AT SPEED.
4. PROG. RELAY K6 FACTORY SET FOR EVENT.
5. FUNCTION MOT 1 le MUST BE SET TO MOTOR FLA.

LEGEND	
CCT	CONTROL CIRCUIT TRANSFORMER
CHFUF	CCT PRIMARY FUSE
CXFUF	CCT SECONDARY FUSE
B	BYPASS CONTACTOR
PTC	THERMAL COUPLE
o 13	CONN POINT ON DEVICE WITH NUMBER
*	REMOTE DEVICE
Ø	CONNECTION POINT AT TERMINAL BLOCK

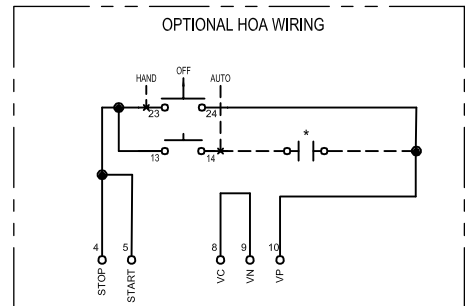

NOTES

1. ALL CONTROL WIRING TO BE 14 GA. COLOR OF CONTROL WIRE SHALL BE PER VOLTAGE ON CONTACTOR COILS:

RED-ALL AC VOLTAGES
WHITE MAY BE USED ON THE GROUNDED SIDE OF THE AC CIRCUIT IF SPECIFIED.

BLUE-ALL DC VOLTAGES



2. ALL DEVICES ARE SHOWN DE-ENERGIZED.
3. DO NOT USE SELECTOR SWITCHES WITH AUTO-RESET OVERLOAD RELAYS.

Circuit diagrams

PSTB370 – PSTB1050

In-Line


5

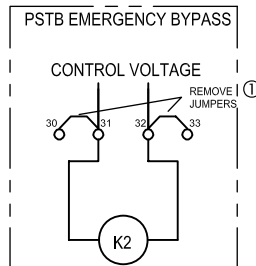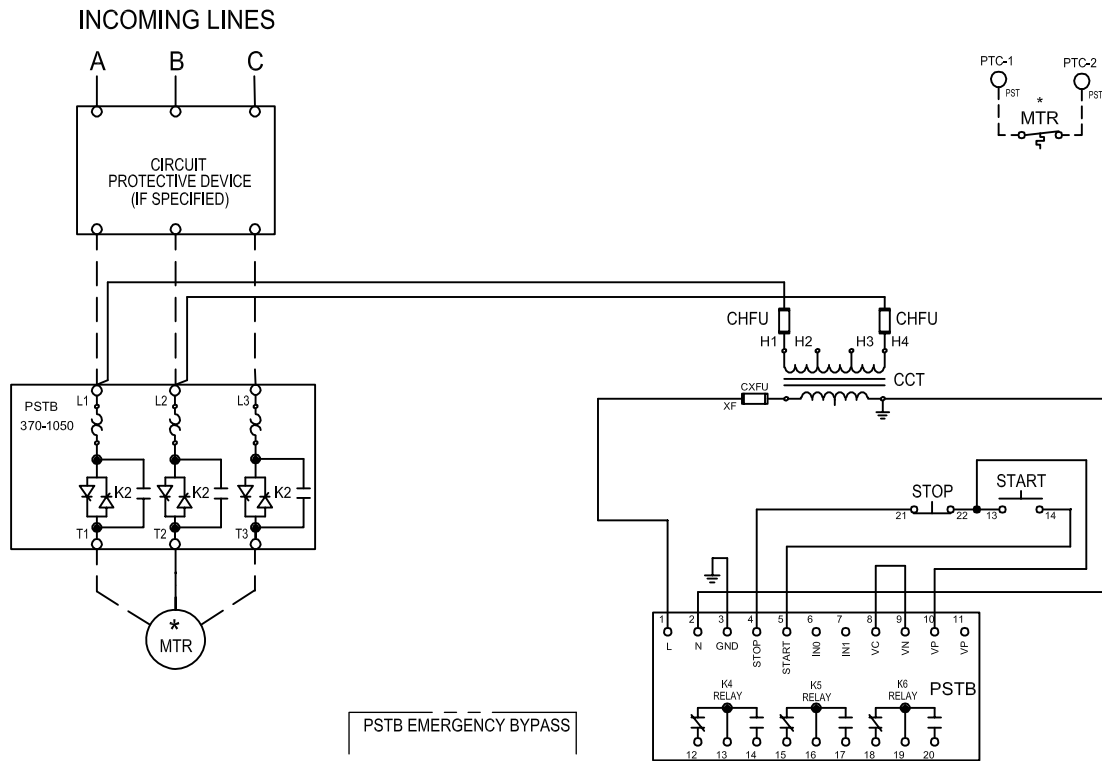

CONNECTION TORQUE: CONSULT SOFT STARTER MANUAL FOR WIRE TORQUE SPECIFICATIONS.

PST NOTES:

1. PROG. INPUT In0 FACTORY SET FOR RESET FAULT/OL.
2. PROG. RELAY K4 FACTORY SET FOR RUN.
3. PROG. RELAY K5 FACTORY SET FOR AT SPEED.
4. PROG. RELAY K6 FACTORY SET FOR EVENT.
5. FUNCTION MOT 1 le MUST BE SET TO MOTOR FLA.

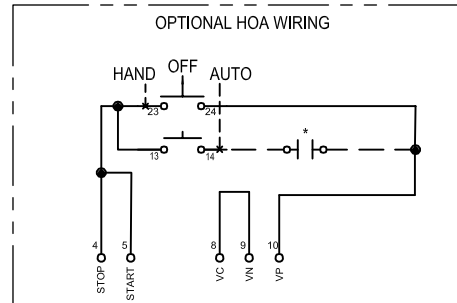

NOTES

1. ALL CONTROL WIRING TO BE 14 GA. COLOR OF CONTROL WIRE SHALL BE PER VOLTAGE ON CONTACTOR COILS:

RED-ALL AC VOLTAGES
WHITE MAY BE USED ON THE GROUNDED SIDE OF THE AC CIRCUIT IF SPECIFIED.

BLUE-ALL DC VOLTAGES

2. ALL DEVICES ARE SHOWN DE-ENERGIZED.
3. DO NOT USE SELECTOR SWITCHES WITH AUTO-RESET OVERLOAD RELAYS.

LEGEND	
CCT	CONTROL CIRCUIT TRANSFORMER
CHFUF	CCT PRIMARY FUSE
CXFUF	CCT SECONDARY FUSE
B	BYPASS CONTACTOR
PTC	THERMAL COUPLE
o 13	CONN POINT ON DEVICE WITH NUMBER
*	REMOTE DEVICE
Ø	CONNECTION POINT AT TERMINAL BLOCK

① See page 5.35 for across the line rated (AC3) contactor ratings..


Circuit diagrams

PSTB370 – PSTB1050

Inside Delta



Softstarters
Type PST

5

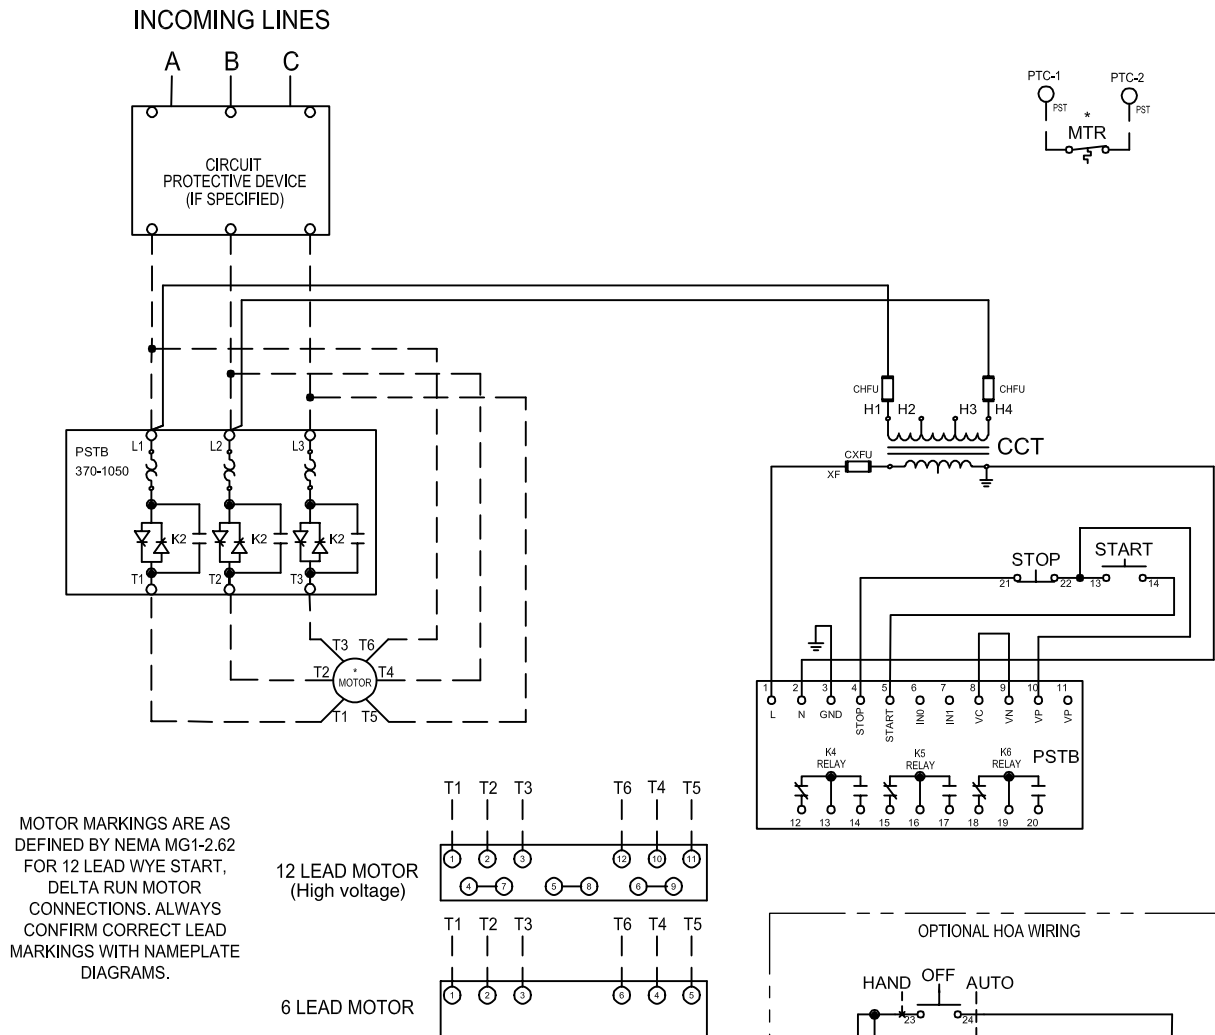

CONNECTION TORQUE: CONSULT SOFT STARTER MANUAL FOR WIRE TORQUE SPECIFICATIONS.

LEGEND	
CCT	CONTROL CIRCUIT TRANSFORMER
CHFUF	CCT PRIMARY FUSE
CXFU	CCT SECONDARY FUSE
B	BYPASS CONTACTOR
PTC	THERMAL COUPLE
o 13	CONN POINT ON DEVICE WITH NUMBER
*	REMOTE DEVICE
Ø	CONNECTION POINT AT TERMINAL BLOCK

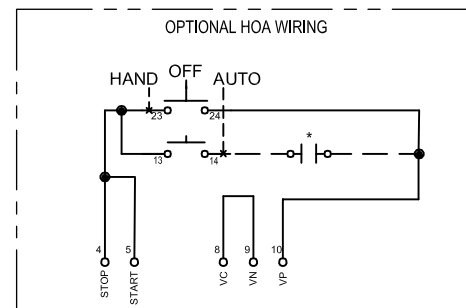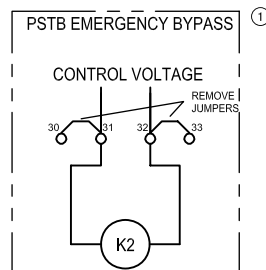

NOTES

1. ALL CONTROL WIRING TO BE 14 GA. COLOR OF CONTROL WIRE SHALL BE PER VOLTAGE ON CONTACTOR COILS:

RED-ALL AC VOLTAGES
WHITE MAY BE USED ON THE GROUND SIDE OF THE AC CIRCUIT IF SPECIFIED.

BLUE-ALL DC VOLTAGES

2. ALL DEVICES ARE SHOWN DE-ENERGIZED.
3. DO NOT USE SELECTOR SWITCHES WITH AUTO-RESET OVERLOAD RELAYS.

PST NOTES:



1. PROG. INPUT In0 FACTORY SET FOR RESET FAULT/OL.
2. PROG. RELAY K4 FACTORY SET FOR RUN.
3. PROG. RELAY K5 FACTORY SET FOR AT SPEED.
4. PROG. RELAY K6 FACTORY SET FOR EVENT.
5. FUNCTION MOT 1 Ie MUST BE SET TO MOTOR FLA.

Circuit diagrams

PST and PSTB softstarters



PST30...300

5

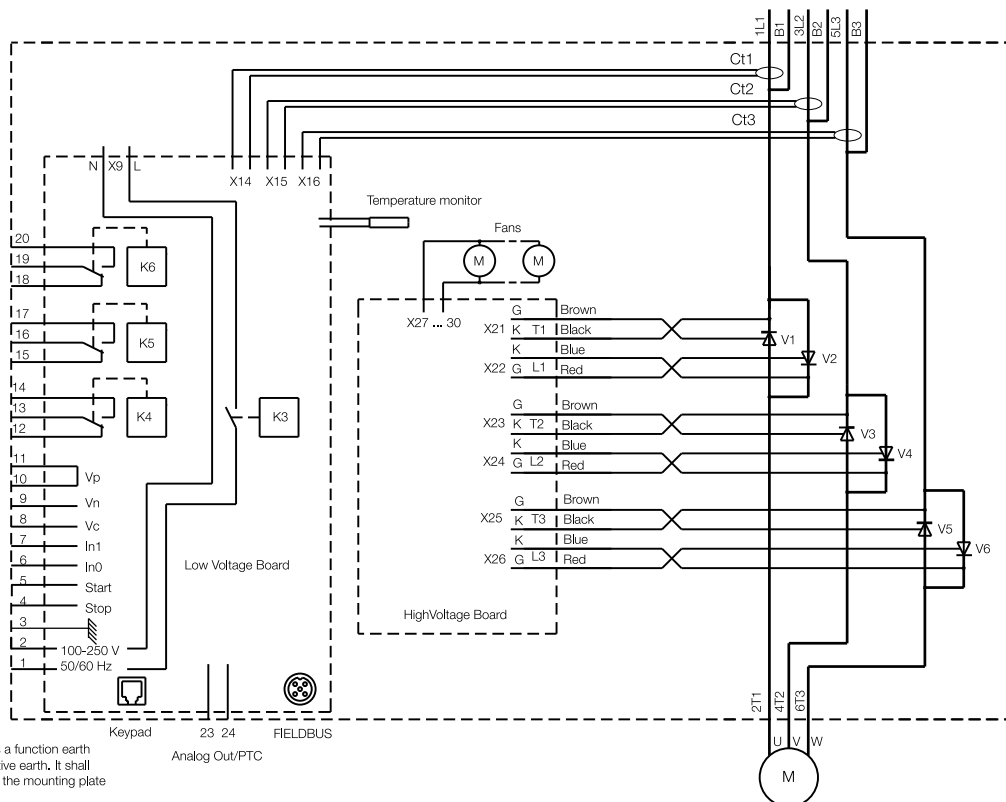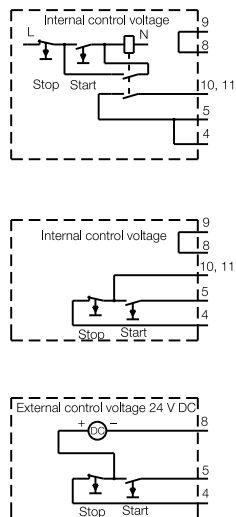

Note Terminal 3 is a function earth
it is not a protective earth. It shall
be connected to the mounting plate

PSTB370...1050

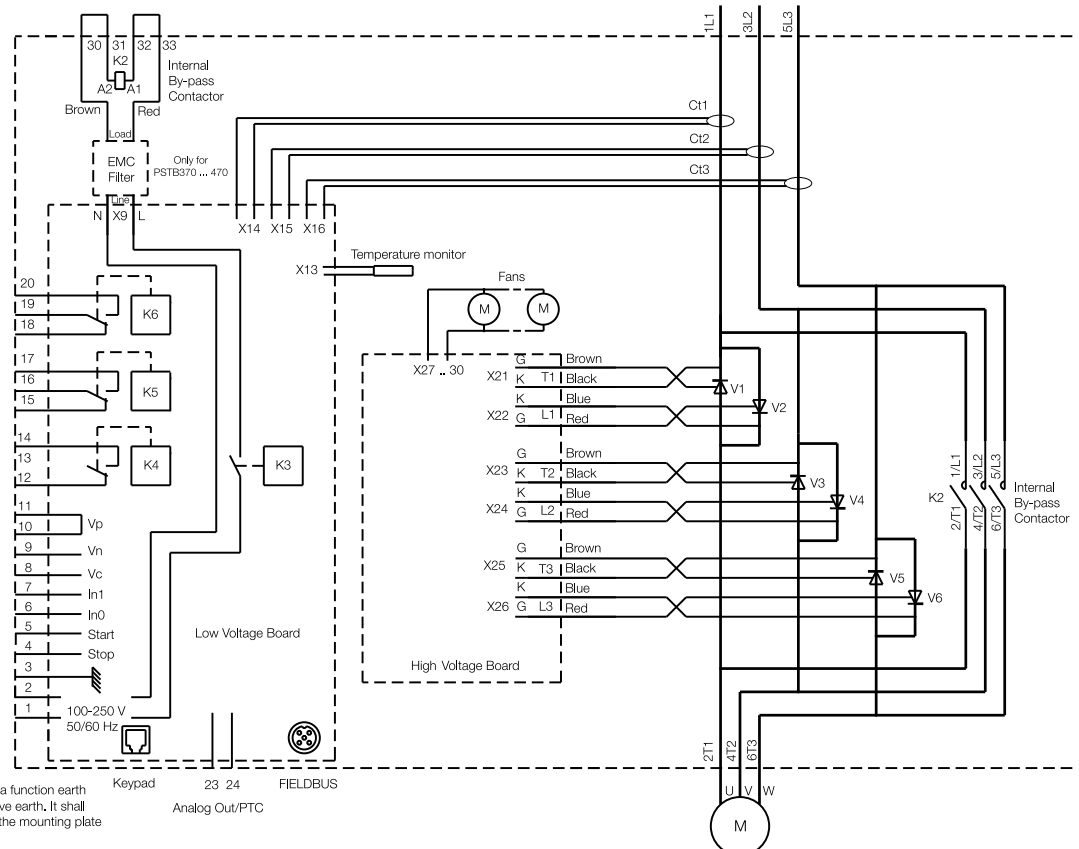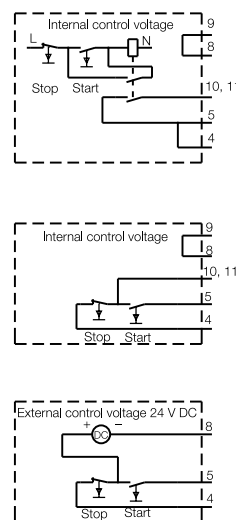

Note Terminal 3 is a function earth
it is not a protective earth. It shall
be connected to the mounting plate

prosoft5 - Softstarter selection tool

The selection of a softstarter can be done according to this catalog. This will work fine in the majority of cases but by using the softstarter selection tool prosoft, a more optimized selection will be achieved. Especially in extremely heavy duty applications with several minutes starting time, the use of prosoft is recommended.

When using prosoft, the selection is done in 3 steps, which can be seen as 3 different tabs in the program:


1. Input tab – Type in the general data and information about the motor and about the load. Try to use as accurate data as possible to get the most accurate results.
2. Calculation tab – Here it is possible to see how long the start will be depending on how high the current is. This tab will indicate which settings should be used and it might affect the selection.
3. The selection tab – Select which of the suggested softstarters to use. Here it is also possible to generate a report about the selection.



Marketing material available on www.abb.com/lowvoltage

The following material is a selection of all softstarter related material that is available on www.abb.com/lowvoltage. Just click on "Control Products", then "Softstarters".

- Product catalogs and brochures
- Certificates and approvals
- Circuit diagrams and application diagrams
- Dimension drawings (2D and 3D)
- Manuals
- eds- and gsd-files for fieldbus connection
- prosoft selection tool

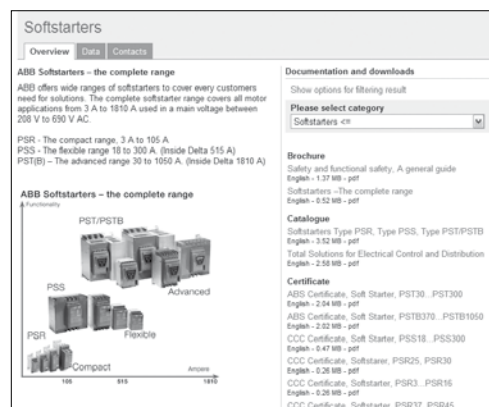

Certifications and approvals

The table below shows the approvals and certifications for different softstarters.

For approvals and/or certificates not listed below, please contact your local ABB sales office.

Certifications and approvals

5

Abbreviation Approved in	Certifications						Approvals: ship classification societies	
								
	CE EU	cULus Canada USA	CCC China	GOST Russia	ANCE Mexico	C-tick Australia	ABS American Bureau of Shipping	GL Germany
PSR3 ... PSR105	•	•	•	•	—	•	—	—
PSE18 ... PSE370	•	•	•	•	•	•	—	—
PST30 ... PSTB1050	•	•	•	•	•	•	•	•

• **Standard design approved**, the company labels bear the certification mark when this is required.

Directives and standards

No. 2006/95/EC

No. 2004/108/EC

EN 60947-1

EN 60947-4-2

UL 508

CSA C22.2 No 14

Catalog number explanation

Enclosed

Softstarters
Type PST

T 100 D F 1 - 48 D M A

Soft starter settings

T – Type PST Enclosed

Horsepower

010 – 10	125 – 125	800 – 800
015 – 15	150 – 150	900 – 900
020 – 20	200 – 200	1000 – 1000
025 – 25	250 – 250	
030 – 30	300 – 300	
040 – 40	350 – 350	
050 – 50	400 – 400	
060 – 60	450 – 450	
075 – 75	500 – 500	
100 – 100	600 – 600	

Connection type

L – Inline

Combination type

No digit – non-combination

F – fusible disconnect

B – thermal magnetic circuit breaker

Enclosure

1 - NEMA/UL Type 1

2 - NEMA/UL Type 12

3 - NEMA/UL Type 3R

4 - NEMA/UL Type 4

X - NEMA/UL Type 4X stainless steel

For more factory installed options, see pages 5.60 and 5.61.

Bypass option ①

M – AC1 rated bypass contactor provided as standard

B – AC3 rated bypass contactor with emergency bypass control

Fuse clip

A – 30A, 600V, Class J

B – 60A, 600V, Class J

C – 100A, 600V, Class J

D – 200A, 600V, Class J

E – 400A, 600V, Class J

F – 600A, 600V, Class J

G – 800A, 600V, Class L

H – 1200A, 600V, Class L

J – 1600A, 600V, Class L

K – 2000A, 600V, Class L

Circuit breaker amp ratings

D – 15 M – 70 W – 225 E – 700

E – 20 N – 80 X – 250 F – 800

F – 25 P – 90 Y – 300 G – 900

G – 30 R – 100 Z – 350 H – 1000

H – 35 S – 125 A – 400 J – 1200

J – 40 T – 150 B – 450 K – 1600

K – 50 U – 175 C – 500

L – 60 V – 200 D – 600

Line voltage

20: 208V 120V control voltage

24: 240V 120V control voltage

48: 480V 120V control voltage

60: 600V 120V control voltage

5

① For more factory installed options, see pages 5.60 and 5.61.

Enclosed NEMA 1, 12, Non-combination In-Line, 5 – 1000 HP

Connected in-line 

5

Max. motor current		Maximum horsepower				NEMA1, 480V	NEMA1, 600V	NEMA12, 480V	NEMA12, 600V
UL	IEC	208V	240V	480V	600V	Catalog number	Catalog number	Catalog number	Catalog number
18	18	5 —	5 —	10 —	— 15	T010L1-48M —	— T015L1-60M	T010L2-48M —	— T015L2-60M
28	30	7.5 —	10 —	20 —	— 25	T020L1-48M —	— T025L1-60M	T020L2-48M —	— T025L2-60M
34	37	10 —	10 —	25 —	— 30	T025L1-48M —	— T030L1-60M	T025L2-48M —	— T030L2-60M
42	44	10 —	15 —	30 —	— 40	T030L1-48M —	— T040L1-60M	T030L2-48M —	— T040L2-60M
54	50	15 —	20 —	40 —	— 50	T040L1-48M —	— T050L1-60M	T040L2-48M —	— T050L2-60M
68	72	20 —	25 —	50 —	— 60	T050L1-48M —	— T060L1-60M	T050L2-48M —	— T060L2-60M
80	85	25 —	30 —	60 —	— 75	T060L1-48M —	— T075L1-60M	T060L2-48M —	— T075L2-60M
104	105	30 —	40 —	75 —	— 100	T075L1-48M —	— T100L1-60M	T075L2-48M —	— T100L2-60M
130	142	40 —	50 —	100 —	— 125	T100L1-48M —	— T125L1-60M	T100L2-48M —	— T125L2-60M
156	175	50 —	60 —	125 —	— 150	T125L1-48M —	— T150L1-60M	T125L2-48M —	— T150L2-60M
192	210	60 —	75 —	150 —	— 200	T150L1-48M —	— T200L1-60M	T150L2-48M —	— T200L2-60M
248	250	75 —	100 —	200 —	— 250	T200L1-48M —	— T250L1-60M	T200L2-48M —	— T250L2-60M
302	300	100 —	100 —	250 —	— 300	T250L1-48M —	— T300L1-60M	T250L2-48M —	— T300L2-60M
361	370	125 —	150 —	300 —	— 350	T300L1-48M ^① —	— T350L1-60M ^①	T300L2-48M ^① —	— T350L2-60M ^①
414	400	— —	— —	350 —	— 400	T350L1-48M ^① —	— T400L1-60M ^①	T350L2-48M ^① —	— T400L2-60M ^①
480	470	150 —	200 —	400 —	— 500	T400L1-48M ^① —	— T500L1-60M ^①	T400L2-48M ^① —	— T500L2-60M ^①
590	570	200 —	250 —	500 —	— 600	T500L1-48M ^① —	— T600L1-60M ^①	T500L2-48M ^① —	— T600L2-60M ^①
720	720	250 —	300 —	600 —	— 700	T600L1-48M ^① —	— T700L1-60M ^①	T600L2-48M ^① —	— T700L2-60M ^①
840	840	300 —	350 —	700 —	— 800	T700L1-48M ^① —	— T800L1-60M ^①	T700L2-48M ^① —	— T800L2-60M ^①
960	—	350 —	400 —	800 —	— 900	T800L1-48M ^① —	— T900L1-60M ^①	T800L2-48M ^① —	— T900L2-60M ^①
1062	1050	400 —	450 —	900 —	— 1000	T900L1-48M ^① —	— T1000L1-60M ^①	T900L2-48M ^① —	— T1000L2-60M ^①

① Includes integrated shunt rated (AC1) bypass contactor as standard. For across the line rated (AC3) bypass contactors, see page 5.60.

Enclosed NEMA 1, Combination In-Line, 5 – 1000 HP

Softstarters
Type PST

Connected in-line 

						NEMA1, 480V Circuit breaker	NEMA1, 600V Circuit breaker	NEMA1, 480V Fused disconnect	NEMA1, 600V Fused disconnect
Max. motor current		Maximum horsepower				Catalog number	Catalog number	Catalog number	Catalog number
UL	IEC	208V	240V	480V	600V				
18	18	5 —	5 —	10 —	— 15	T010LB1-48EM —	— T015LB1-60EM	T010LF1-48AM —	— T015LF1-60AM
28	30	7.5 —	10 —	20 —	— 25	T020LB1-48JM —	— T025LB1-60JM	T020LF1-48BM —	— T025LF1-60BM
34	37	10 —	10 —	25 —	— 30	T025LB1-48KM —	— T030LB1-60KM	T025LF1-48BM —	— T030LF1-60BM
42	44	10 —	15 —	30 —	— 40	T030LB1-48LM —	— T040LB1-60LM	T030LF1-48CM —	— T040LF1-60CM
54	50	15 —	20 —	40 —	— 50	T040LB1-48NM —	— T050LB1-60NM	T040LF1-48CM —	— T050LF1-60CM
68	72	20 —	25 —	50 —	— 60	T050LB1-48RM —	— T060LB1-60RM	T050LF1-48CM —	— T060LF1-60CM
80	85	25 —	30 —	60 —	— 75	T060LB1-48SM —	— T075LB1-60SM	T060LF1-48DM —	— T075LF1-60DM
104	105	30 —	40 —	75 —	— 100	T075LB1-48TM —	— T100LB1-60TM	T075LF1-48DM —	— T100LF1-60DM
130	142	40 —	50 —	100 —	— 125	T100LB1-48VM —	— T125LB1-60VM	T100LF1-48DM —	— T125LF1-60DM
156	175	50 —	60 —	125 —	— 150	T125LB1-48XM —	— T150LB1-60XM	T125LF1-48EM —	— T150LF1-60EM
192	210	60 —	75 —	150 —	— 200	T150LB1-48YM —	— T200LB1-60YM	T150LF1-48EM —	— T200LF1-60EM
248	250	75 —	100 —	200 —	— 250	T200LB1-48AM —	— T250LB1-60ZM	T200LF1-48EM —	— T250LF1-60EM
302	300	100 —	100 —	250 —	— 300	T250LB1-48BM —	— T300LB1-60BM	T250LF1-48FM —	— T300LF1-60FM
361	370	125 —	150 —	300 —	— 350	T300LB1-48DMⓈ —	— T350LB1-60CMⓈ	T300LF1-48FMⓈ —	— T350LF1-60FMⓈ
414	400	— —	— —	350 —	— 400	T350LB1-48EMⓈ —	— T400LB1-60DMⓈ	T350LF1-48FMⓈ —	— T400LF1-60FMⓈ
480	470	150 —	200 —	400 —	— 500	T400LB1-48FMⓈ —	— T500LB1-60EMⓈ	T400LF1-48GMⓈ —	— T500LF1-60GMⓈ
590	570	200 —	250 —	500 —	— 600	T500LB1-48GMⓈ —	— T600LB1-60GMⓈ	T500LF1-48HMⓈ —	— T600LF1-60HⓈ
720	720	250 —	300 —	600 —	— 700	T600LB1-48JMⓈ —	— T700LB1-60JMⓈ	T600LF1-48HMⓈ —	— 700LF1-60HⓈ
840	840	300 —	350 —	700 —	— 800	T700LB1-48KMⓈ —	— T800LB1-60JMⓈ	T700LF1-48JMⓈ —	— T800LF1-60JⓈ
960	—	350 —	400 —	800 —	— 900	T800LB1-48KMⓈ —	— T900LB1-60KMⓈ	T800LF1-48JMⓈ —	— T900LF1-60JⓈ
1062	1050	400 —	450 —	900 —	— 1000	T900LB1-48KMⓈ —	— T1000LB1-60KMⓈ	T900LF1-48KMⓈ —	— T1000LF1-60KⓈ

5

Ⓢ Includes integrated shunt rated (AC1) bypass contactor as standard. For across the line rated (AC3) bypass contactors, see page 5.60.

Factory installed options

5

Item	Suffix code ①
Softstarters	
Door mounted reset	K
E-Stop	T
Start-stop pushbutton	A
2 position selector switch	C
3 position selector switch	D
Pilot light run	E
Start-stop pushbutton & pilot light	F
2 position selector switch & pilot light	H
3 position selector switch & pilot light	J
Isolation contactor	W
Across the line rated (AC3) contactor with emergency bypass control ②	B
Remote keypad	R
Service entrance, 3-wire	SE3
Service entrance, 4-wire	SE4
Lightning arrester	LA
Space heater, 100W with thermostat	SH

Auxiliary relays

Type N control relay (4 pole)	CR
Electronic timer	
1.5 – 30s On Delay	TN30
5 – 100s On Delay	TN100
1.5 – 30s Off Delay	TF30
5 – 100s Off Delay	TF100
Undervoltage relay	UV
Overvoltage relay	OV
Ground fault protection	GFP

Item	Suffix code ①
Meters & metering	
Current transformer	CT
Ammeter (including C.T.)	AM
Ammeter & ammeter switch	AMS
Voltmeter	VM
Voltmeter & voltmeter switch	VMS
Elapsed time meter	ETM
Operation counter	OC
Wattmeter	WM

Additional auxiliary contact blocks for bypass or isolation contactors

1 N.O. & 1 N.C.	11
2 N.O. & 2 N.C.	22
3 N.O. & 3 N.C.	33

① Add the suffix code after the last digit of the catalog number.

② Control includes panel mounted Norm/E-Bypass switch, START/STOP pushbutton & Class 10 external overload, unless otherwise specified.

Horsepower to PST Softstarter cross-reference Enclosed

Softstarters
Type PST

5


Maximum horsepower in-line

208V	240V	480V	600V	PST Type
5 —	5 —	10 —	— 15	PST30
7.5 —	10 —	20 —	— 25	PST30
10 —	10 —	25 —	— 30	PST37
10 —	15 —	30 —	— 40	PST44
15 —	20 —	40 —	— 50	PST50
20 —	25 —	50 —	— 60	PST72
25 —	30 —	60 —	— 75	PST85
30 —	40 —	75 —	— 100	PST105
40 —	50 —	100 —	— 125	PST142
50 —	60 —	125 —	— 150	PST175
60 —	75 —	150 —	— 200	PST210
75 —	100 —	200 —	— 250	PST250
100 —	100 —	250 —	— 300	PST300
125 —	150 —	300 —	— 350	PSTB370
— —	— —	350 —	— 400	PSTB470
150 —	200 —	400 —	— 500	PSTB470
200 —	250 —	500 —	— 600	PSTB570
250 —	300 —	600 —	— 700	PSTB720
300 —	350 —	700 —	— 800	PSTB840
350 —	400 —	800 —	— 900	PSTB1050
400 —	450 —	900 —	— 1000	PSTB1050

Approximate dimensions

Enclosed

208V – 600V

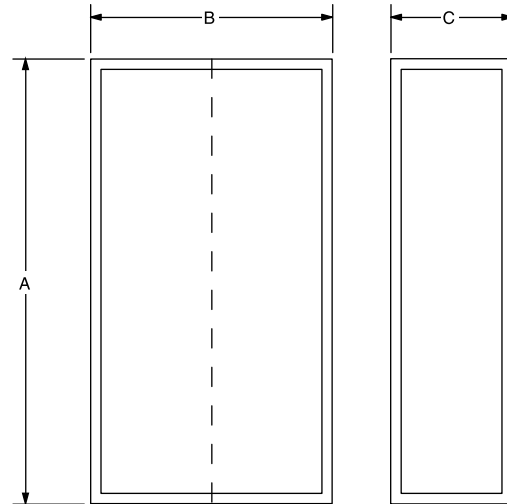

5

Enclosed, 208V – 600V

Combination	In-Line		
	A	B	C
PST30 – PST72			
Softstarter only	20 x 20 x 12		
Softstarter with bypass	20 x 20 x 12		
Softstarter with fused disconnect	20 x 20 x 12		
Softstarter with circuit breaker	20 x 20 x 12		
PST85 – PST142			
Softstarter only	24 x 20 x 12		
Softstarter with bypass	24 x 20 x 12		
Softstarter with fused disconnect	30 x 30 x 12		
Softstarter with circuit breaker	24 x 24 x 12		
PST175 – PST300			
Softstarter only	30 x 30 x 12		
Softstarter with bypass	30 x 30 x 12		
Softstarter with fused disconnect	36 x 36 x 12		
Softstarter with circuit breaker	36 x 36 x 12		

Combination	In-Line		
	A	B	C
PSTB370 – PSTB470			
Softstarter with bypass, internal	48 x 36 x 16		
Softstarter with fused disconnect	48 x 36 x 16		
Softstarter with circuit breaker	48 x 36 x 16		
PSTB570 – PSTB720			
Softstarter with bypass, internal	48 x 36 x 16		
Softstarter with fused disconnect	87 x 36 x 24		
Softstarter with circuit breaker	87 x 36 x 24		
PSTB840 – PSTB1050			
Softstarter with bypass, internal	87 x 36 x 24		
Softstarter with fused disconnect	87 x 48 x 24		
Softstarter with circuit breaker	87 x 48 x 24		

PST Extreme duty Softstarters

ABB PST Softstarter Extreme duty



5

General information

Designed for high inertia load applications, such as rock crushers, mixers, hammer mills and chippers, the ABB PST Extreme Duty enclosed softstarters provides reliable reduced voltage starting. The PST Extreme Duty softstarter package provides the best of ABB's wide range of industrial control products integrated with the PST softstarter, packaged in a weatherproof (NEMA/UL Type 4) enclosure.

What's included:

Short circuit protection

To handle the role of short-circuit protection and disconnect, the PST Extreme Duty series uses the T-Max molded case circuit breakers (MCCB's).

Emergency start bypass

For routine bypass or starting in event of an emergency, the PST Extreme series relies on the AF contactor series. The AF series contactors are designed for reliable performance under the most adverse conditions. All AF contactors feature a wide voltage range electronic coil. In addition to extremely low pull-in and holding power requirement, the low (55%) dropout voltage prevents damaging chattering and insures consistent operation in poor power quality conditions.

Redundant electronic overload

Every PST softstarter features an adjustable electronic overload. The PST Extreme Series softstarters (50HP and larger) go one step further and come equipped with an ABB adjustable electronic overloads. Used only in the event of emergency bypass operation, these overload feature four classes of trip curves to insure the motor protection level matches the application demands.

The PST Softstarter

Designed for heavy-duty use and performance the ABB PST is optimized for extreme duty. While most softstarters offer voltage ramp starting, the PST series does more. By using closed loop current control in addition to voltage ramping the PST helps get every bit of performance from even weak power systems. Built and tested to provide 500% rated current for 30 seconds, using the PST means that typical applications can be sized based on Motor HP without resorting to complex, application based de-rate tables.

The often overlooked details

Overlooked little things can lead to big problems and so the PST Extreme Series pays attention to the details. Besides the major components every PST extreme series enclosed softstarter ships with:

- A UL 508A label
- A UL service entrance rating
- A door mounted ABB hand-off-auto switch (NEMA/UL Type 4)
- Three (3) vibration resistant, LED type pilot lights (NEMA/UL Type 4)
- A door interlocked disconnect handle (NEMA/UL Type 4)
- Padlockable and defeatable

480 & 240 V Extreme duty softstarters

480 V


HP @ 480VAC	Enclosure size H x W x D	SCCR ratings @ 600V	Weight	Catalog number
50	24x24x12	10kA	35	T050LB4-48/XD
75	24x24x12	10kA	50	T075LB4-48/XD
100	36x36x12	18kA	65	T100LB4-48/XD
125	36x36x12	18kA	80	T125LB4-48/XD
150	36x36x12	18kA	95	T150LB4-48/XD
200	36x36x12	18kA	170	T200LB4-48/XD
250	48x36x16	18kA	180	T250LB4-48/XD
300	48x36x16	30kA	300	T300LB4-48/XD
400 ①	60x36x16	30kA	450	T400LB4-48/XD
500 ①	60x36x16	42kA	570	T500LB4-48/XD
600 ①	72x37x24	42kA	630	T600LB4-48/XD

240 V

HP @ 240VAC	Enclosure size H x W x D	SCCR ratings @ 600V	Weight	Catalog number
25	24x24x12	10kA	35	T025LB4-24/XD
30	24x24x12	10kA	50	T030LB4-24/XD
40	24x24x12	10kA	65	T040LB4-24/XD
50	36x36x12	18kA	80	T050LB4-24/XD
60	36x36x12	18kA	95	T060LB4-24/XD
75	36x36x12	18kA	170	T075LB4-24/XD
100	36x36x12	18kA	180	T100LB4-24/XD
150	48x36x16	18kA	300	T150LB4-24/XD
200 ①	60x36x16	30kA	450	T200LB4-24/XD
250 ①	60x36x16	30kA	570	T250LB4-24/XD
300 ①	72x37x24	42kA	630	T300LB4-24/XD

Features

- Softstarter is one size larger than required full load amperes of the motor to get additional starting capacity (Extreme Duty).
- Short circuit protection
- Redundant electronic overload
- Emergency start bypass
- Torque control
- A door interlocked disconnect handle (NEMA/UL Type 4) -Padlockable/Defeatable
- Door mounted ABB Hand-OFF-Auto switch (NEMA/UL Type 4)
- Three (3) vibration resistant, LED type pilot lights (NEMA/UL Type 4)
- Pilot lights indicate the following: Power On, RUN and Bypass.
- A UL 508A Label
- Suitable for service entrance 3 wire
- (NEMA/UL Type 4) enclosure

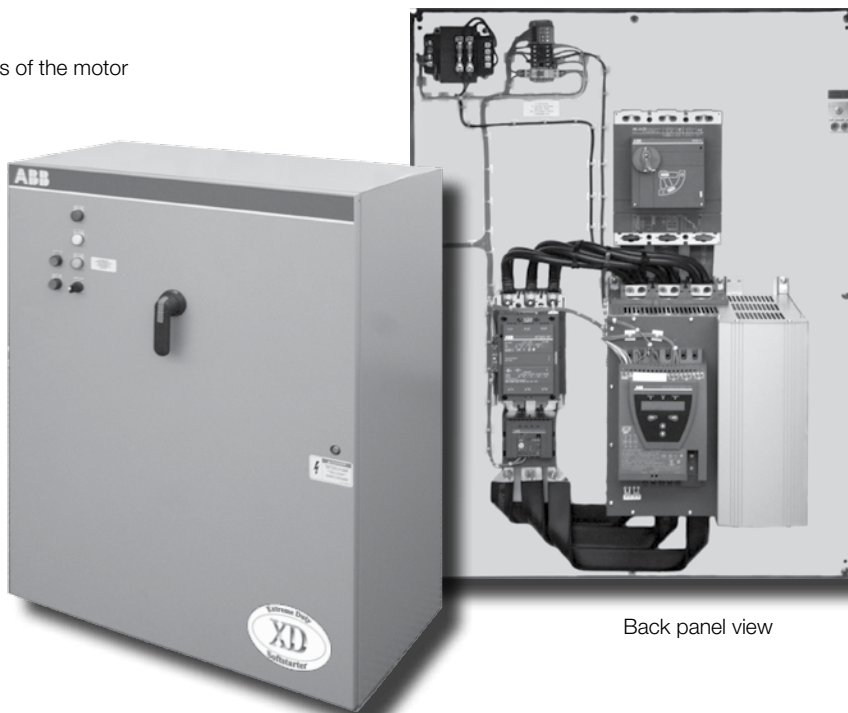

Back panel view

250 HP
unit shown

① Larger horsepower units will include floor mounting kit.