Connector Terminal Boxes

XW3B

Series Includes New Lightweight, Low-profile Connector Terminal Boxes for Use Outside of Control Boxes to Centralize Sensor I/O Connectors with Reduced Labor and Greater Environmental Resistance

- Tough model with a significantly lower profile satisfies IP67.
- Available for Photoelectric Sensors, Proximity Sensors, and Limit Switches with Sensor I/O Connectors (M12). Increased rated current, with added ground terminal, and compatible with valves and solenoids.
- Incorporates power and operation indicators.
- Uses a single mounting method regardless of the number of ports, which ensures easy system expansion.



Senso Controllers Related Products

Digital Panel Meters

Power Supplies


Sensor Controllers

Connectors

Peripheral Devices

XS5/XS2 /XW3 XS2 XN2 XW3B

XS5

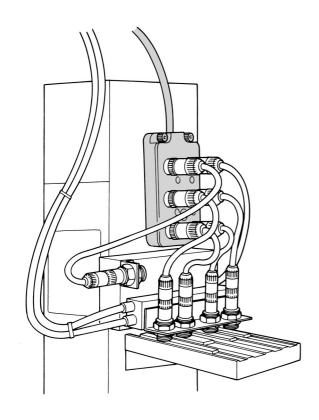

Ratings and Specifications

| Rated current | 4 A/port (signal lines) 12 A/box (power lines) | | |
|-----------------------|---|--|--|
| Rated voltage | 10 to 30 VDC | | |
| Contact resistance | 40 MΩ max. (with 100 mA max., 20 mV max.)*1 | | |
| Insulation resistance | 100 M Ω min. (at 500 VDC) | | |
| Dielectric strength | 500 VAC for 1 min (leakage current: 1 mA max.)*2 | | |
| Degree of protection | IP67 (IEC529) | | |
| Cable retention force | 98 N/15 s | | |
| Insertion tolerance | 200 times | | |
| Operating temperature | −25 to 70°C | | |

^{*1.} The contact resistance of the Connector.

Compatible Connectors

| XS2G | Connector Plug Assemblies (crimping, soldering, or screw-on) |
|------|--|
| XS2W | Connectors on cable ends (Sockets or Plugs) |
| XS2H | Connectors on one cable end (Plugs) |

Materials and Finish

| Item | Part name | Materials and finish | | | |
|---|------------|--|--|--|--|
| Connectors | Anchor | Brass/nickel plated | | | |
| Connectors | Contacts | Brass/nickel base, 0.4-μm gold plating | | | |
| Cable Cable Sheath color: gray Core size: AWG18/AWG22 * | | | | | |
| | Case | PBT resin (UL94V-0)/light gray | | | |
| Case | Bushing | Rubber | | | |
| Case | PCB | Glass-epoxy board | | | |
| | Seal resin | Urethane resin | | | |


^{*} The positive power supply, negative power supply, and ground lines are AWG18. Signal lines are AWG22.


^{*2.} The delectric strength of the Connector.

XW3B Connector Terminal Box


Dimensions (Unit: mm)


XW3B-P45□-□11 (Four Input Ports)

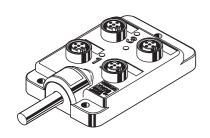

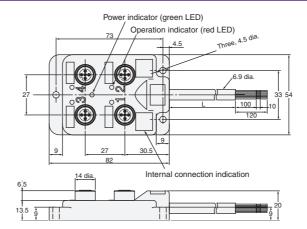



XW3B-P65□-□11 (Six Input Ports)

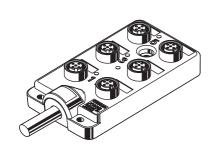

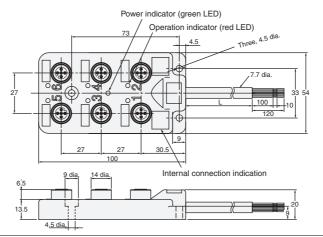

XW3B-P85□-□11 (Eight Input Ports)

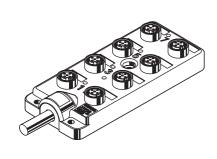

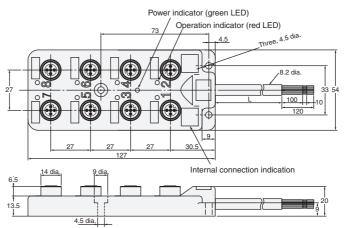

Sensor Controllers/ Related Products

Digital Panel Meters

Power Supplies

Sensor Controllers

Connectors

Peripheral Devices

> XS5/XS2 /XW3

XS2 XN2

XW3B

XS3 XS5

XW3B

Ordering Information

| Sensor type and connections | | 3-wire DC NPN/2-wire DC 3-4 | 2-wire DC1-4/ without polarity 3-4 | 3-wire DC PNP/2-wire DC 1-4 | |
|-------------------------------|---|-----------------------------|---------------------------------------|-----------------------------|--|
| Actuator connections | | Actuator connections 1-4 | | Actuator connections 3-4 | |
| No. of ports Cable length (m) | | Model | Model | Model | |
| 4 | 5 | XW3B-P445-G11 | XW3B-P452-G11 | XW3B-P453-G11 | |
| 6 | 5 | XW3B-P655-G11 | XW3B-P652-G11 | XW3B-P653-G11 | |
| 8 5 | | XW3B-P855-G11 | XW3B-P852-G11 | XW3B-P853-G11 | |

Note: Here 1-4 and 3-4 are connector pin numbers.

Connection Diagrams

Standard Japanese Specification

XW3B-P□55-□11 for 3-wire DC NPN, 2-wire DC (without polarity 3-4), and Actuator (1-4)

Japanese Specification


XW3B-P□52-□11 for 2-wire DC (with polarity 1-4, without polarity 3-4)


Note: Cannot be used with NPN-type Photoelectric and Actuator (3-4)
Proximity Sensors.


Cannot be used with Proximity Sensors with polarity 3-4.

European Specification XW3B-P 53- 11 for 3-v

XW3B-P 53-11 for 3-wire DC PNP, 2-wire DC (with polarity 1-4), and Actuator (3-4)

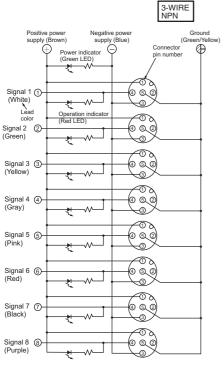

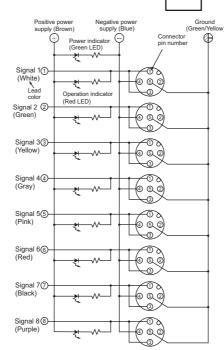

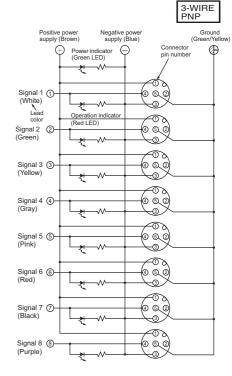

Note: 1. The above wiring diagrams are for eight-port use.

2. Figures in parentheses indicate lead colors.

3. The expression "white/red" means white and red stripes

4. Here 1-4 and 3-4 are pin numbers.

Senso Controllers Related Product

Digital Panel Meters

Power

Supplies

Sensor
Controllers


Connectors

Peripheral

XS5/XS2 /XW3 XS2 XN2 XW3B XS3

Devices

Mounting Holes (Unit: mm)

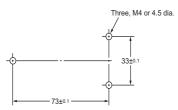

Note: Mounting hole dimensions are always the same regardless of the number of ports.

Safety Precautions

Refer to Warranty and Limitations of Liability on page F-2.

Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

Connector Connection or Disconnection

- Before using a Sensor or Limit Switch, check this catalog and be sure that the Sensor or Limit Switch can be connected.
- Be sure to turn OFF the power supplied to the XW3B before Connector connection or disconnection.
- Do not touch the engaged side of any Connector with a wet hand.
- If a Connector is wet with water, wipe the Connector and be sure that the connector is completely dry.
- Be sure that there is no metal plate or powder on the engaged side of any Connector.

Cable Connection

- Be sure to wire the cable correctly according to the wiring diagram so that the blue wire will be connected to the negative power supply terminal and the brown wire will be connected to the positive power supply terminal.
- If there is any wiring mistake, the load will not operate or the operation indicator will not light.
- Be sure to connect a load to the signal lines to operate the Sensor and Actuator.

Applicable Connectors

- Applicable Connectors are the XS2G (assembly type), XS2H (monoblock type), and XS2W (monoblock type).
- After a Connector is engaged, tighten the Connector securely with a mounting bracket.
- Be sure to put the XS2Z-12 Waterproof Cover or XS2Z-15 Dust Cover on any Connector that is not used.

Power Supply and Operation Indicators

- When power is supplied, the green power indicator will be lit. When the Sensors and Actuators are operating, the corresponding red operation indicators will be lit.
- Only DC Sensors and Actuators can be connected to the XW3B.
 Do not connect AC Sensors or Actuators.
- Connector Terminal Boxes are internally wired with 2 or 3 wires.
 The type is marked on the case.

3-WIRE NPN 3-WIRE PNP 2-WIRE

Sensor Controllers/ Related Products

Digital Panel Meters

Power Supplies

Sensor Controllers

Connectors

Peripheral Devices

> XS5/XS2 /XW3

XS2 XN2


XW3B XS3


XS5

Input Device Connections Using Sensor I/O Connectors

Direct Connection Type XS2W Cable Proximity Sensor with connector Limit Switch Photoelectric Sensor XW3B

Connector-Terminal Connection Type Pre-wired Type

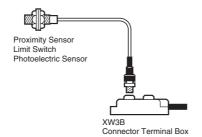

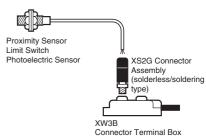

Input Devices Using Sensor I/O Connectors

Connector Terminal Box

| Connector Terminal Box | Cable | Input devices using Sensor I/O Connectors | | | |
|------------------------|-----------------|---|------------------------------------|---|--|
| | | 2-wire DC Proximity Sensor | Connector-Terminal connection type | E2E-X3D1-M1J-T, E2E-X7D1-M1J-T, E2E-X10D1-M1J-T | |
| | | Proximity Sensor | Direct connection type | E2E-X□D1-M1 | |
| | XS2W-D42□-□81-A | 3-wire DC Proximity Sensor (NPN) | Direct connection type | E2E-X2E1-M1, E2E-X5E1-M1, E2E-X10E1-M1 | |
| XW3B-P□55-G11 | | | | E2E-X5ME1-M1, E2E-X10ME1-M1, E2E-X18ME1-M1 | |
| Awaz i ace e ii | XS2W-D42□-□81-A | Photoelectric Sensor (NPN) | Direct connection type | E3S-AT16, E3S-AT66, E3S-AD16, E3S-AD17, E3S-AD18, E3S-AD66, E3S-AD67, E3S-AD68, E3S-AR16, E3S-AR66 | |
| | | Limit Switch | Connector-Terminal connection type | WL□-□DK1EJ□ *1, WL□-□-M1GJ *1, D4C-□0□□-DK1EJ□ *2 | |
| | XS2W-D42□-□81-A | | Direct connection type | WL□-□K13 *1, D4E-□□10N *2 | |
| - | XS2W-D42□-□81-A | 3-wire DC Proximity Sensor (PNP) | Direct connection type | E2E-X2F1-M1, E2E-X5F1-M1, E2E-X10F1-M1 | |
| XW3B-P□53-G11 | | | | E2E-X5MF1-M1, E2E-X10MF1-M1, E2E-X18MF1-M1 | |
| | XS2W-D42□-□81-A | Photoelectric Sensor (PNP) | Direct connection type | E3S-AT36, E3S-AT86, E3S-AD36, E3S-AD37, E3S-AD38, E3S-AD86, E3S-AD87, E3S-AD88, E3S-AR36, E3S-AR86 | |
| | | 2-wire DC Proximity Sensor | Connector-Terminal connection type | E2E-X3D1-M1GJ, E2E-X3D1-M1J-T, E2E-X7D1-M1GJ, E2E-X7D1-M1J-T, E2E-X10D1-M1GJ, E2E-X10D1-M1J-T | |
| | | | | E2E-X8MD1-M1GJ, E2E-X14MD1-M1GJ, E2E-X20MD1-M1GJ | |
| - | | | | E2EQ-X3D1-M1GJ, E2EQ-X7D1-M1GJ, E2EQ-X10D1-M1GJ | |
| XW3B-P□52-G11 | XS2W-D42□-□81-A | | Direct connection type | E2E-X3D1-M1G, E2E-X7D1-M1G, E2E-X10D1-M1G | |
| | 702W-D42U-U01-A | | | E2E-X8MD1-M1G, E2E-X14MD1-M1G, E2E-X20MD1-M1G | |
| | | Limit Switch | Connector-Terminal connection type | WLDK1EJ_ *1, WLM1GJ *1, D4C00DK1EJ_ *2 | |
| | XS2W-D42□-□81-A | LITTIL OWILCIT | Direct connection type | WL K13 *1, D4E 10N *2, D4CC 2 | |

Note: Use the XS2G Connector assembly in combination with a pre-wired input device.

Digital Panel Meters

> Power Supplies

Sensor Controllers

Connectors

Peripheral Devices

XS5/XS2 /XW3

XS2 XN2 XW3B

XS3 XS5

^{*1.} Any of these models is available provided that only its SPST-NO contact is used. *2. Any of these models is available provided that it uses an NO connection.

Attaching the XS2G Connector to Pre-wired Input Device

| | Input devices and connector pin number | | | | | | |
|------------------------|---|---|---|---|--------------|---|--|
| Connector Terminal Box | 3-wire DC (NPN) 1: +, 3: -, 4: output | 2-wire DC (with polarity) 1: +, 4: - | 2-wire DC (with polarity) 3: -, 4: + | 2-wire DC (with no polarity) 3, 4 | Limit Switch | 3-wire DC (PNP) 1: +, 3: -, 4: output | |
| XW3B-P□55-G11 | Yes | No | Yes | Yes | Yes | No | |
| XW3B-P□53-G11 | No | Yes | No | No | No | Yes | |
| XW3B-P□52-G11 | No | Yes | No | Yes | Yes | No | |

Connector Terminal Boxes for Input Devices with Sensor I/O Connectors

| Input device | | | | | Cable | Connector Terminal | |
|--------------------------|-----------|-----|------------------------------------|---|------------------------|---------------------------------|--|
| Type | | | Connection method | Model | Cable | Box | |
| Photoelectric Sensors | NP | N | - Direct connection type | E3S-AT16/66, E3S-AR16/66, and E3S-AD16/17/18/66/67/68 | | XW3B-P□55-G11 | |
| | PN | Р | | E3S-AT36/86, E3S-AR36/86, and E3S-AD36/37/38/86/87/88 | | XW3B-P□53-G11 | |
| | 2-wire DC | | | E2E-X□D1-M1J-T | | XW3B-P□55-G11 | |
| | | | Connector-Terminal connection type | E2E-X□D1-M1GJ and E2E-X□D1-M1J-T | | XW3B-P□52-G11 | |
| | | | | E2E-X□MD1-M1GJ | | | |
| | | | | E2EQ-X□D1-M1GJ | | | |
| Proximity | | | | E2E-X□D1-M1G | - - XS2W-D42□-□81-A | | |
| Sensors | | | | E2E-X□MD1-M1G | | | |
| | | | | E2E-X□D1-M1 | - X32VV-D42LI-LI0 I-A | | |
| | С | NPN | Direct connection type | E2E-X□E1-M1 | | XW3B-P□55-G11 | |
| | /ire | | | E2E-X□ME1-M1 | | | |
| | | PNP | | E2E-X□F1-M1 | | XW3B-P□53-G11 | |
| Limit Switches | | | | E2E-X□MF1-M1 | | | |
| | connec | | Connector-Terminal connection type | WLDK1EJ_ *1, WLM1J *1, and D4C-00DK1EJ_ *2 | | XW3B-P□52-G11, XW3B-P□55-G11 | |
| | | | Direct connection type | WL□-□K13 *1 and D4E-□□10N *2 | - | AVV3D-F□33-G11 | |
| | | | | D4CC-□□□□ *2 | | XW3B-P□52-G11 | |

*1. Any of these models is available provided that only its SPST-NO contact is used.

*2. Any of these models is available provided that it uses an NO connection.

See the models above for components that are compatible with Sensor I/O Connectors.

Sensor Controllers/ Related Products

Digital Panel Meters Power

Sensor Controllers

Supplies

Connectors

Peripheral Devices

> XS5/XS2 /XW3 XS2

XW3B

XS3 XS5

Cat. No. G802-E1-01

In the interest of product improvement, specifications are subject to change without notice.